

Carry out replacement in the following order:




Use a torque wrench to replace spark plugs.

1



Open the hood

2.1

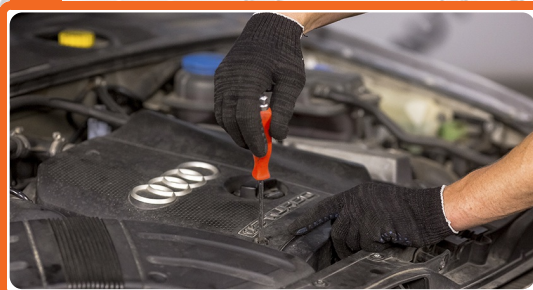

Remove the engine cover

2.2



2.3



AutoDoc recommends:

Disconnect the wire from the battery negative terminal.

3




Disconnect the ignition coil plugs

4



remove the ignition coil.

5.1

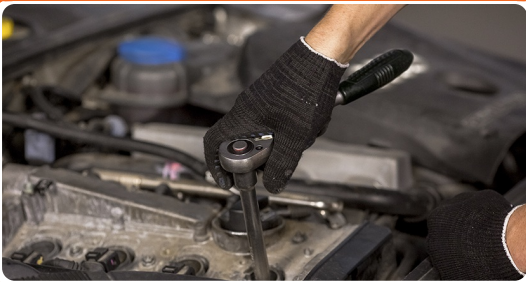

Remove the spark plugs with a spark plug wrench and place them on a work surface in the order of installing in the engine.

5.2



6



Screw new spark plugs and tighten them.

7



Install the ignition coil straight down.

8



Connect the plugs to the ignition coil.

9.1



Install the engine cover and secure it.

9.2



10



Close the hood

We hope that this information
have been useful for you!

[Video tutorials](#)

Watch our detailed video guides about your AUDI A4 B6 repair on our youtube channel. Watch video guides.

[AutoDoc online](#)

Highest quality spark plugs for your car AUDI A4 B6 are available on AutoDoc. Go to the website.

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

QUALITY AUTO PARTS



AUDI



SPARK PLUGS



AUDI A4 B6



SPARK PLUGS FOR AUDI



SPARK PLUGS FOR AUDI A4 B6



i Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement works. AutoDoc shall not be liable for any loss, injury, damage of property, acquired in the repair or replacement process due to incorrect usage or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for informative purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

AUTODOC IN SOCIAL MEDIA:

