

Carry out replacement in the following order:



Disconnect the wire from the battery negative terminal.

1



Open the hood

2.1



Remove the caps of the engine cover

2.1



3.1



Remove the bolts and take off the plastic engine cover

3.2



4




Remove the oil filler cap

5



Remove the cylinder head cover.

6

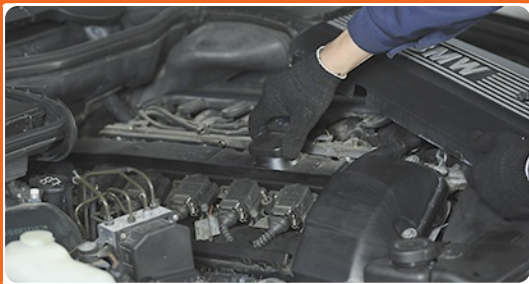

Install the oil filler cap

7.1



Remove the air supply pipe.

7.2



7.3



8.1



Disconnect the ignition coil plugs

8.2



9.1



Unscrew the ignition coil fastening screws.

9.2



10



remove the ignition coil.

11.1



Remove the spark plugs with a spark plug wrench and place them on a work surface in the order of installing in the engine.

11.2



i



Apply a thin layer of special grease on the thread surface of new spark plugs.

12



Screw new spark plugs and tighten them.

13.1



Put the ignition coils onto the spark plugs and secure.

13.2



13.3



14.1



Connect the plugs to the ignition coil.

14.2



15.1



Install the air supply pipe and fasten it.

15.2



16



Remove the oil filler cap

17.1



Reinstall the cylinder head cover.

17.2



18



Install the oil filler cap

19



Install the plastic engine cover

20.1



Screw the fastening bolts of the plastic engine cover

20.2



20.3



21.1



install the caps on the engine cover

21.2



22



Close the hood

We hope that this information
have been useful for you!

[Video tutorials](#)

Watch our detailed video guides about your BMW 5 E 39 repair on our youtube channel. Watch video guides.

[AutoDoc online](#)

Highest quality spark plugs for your car BMW 5 E 39 are available on AutoDoc. Go to the website.

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE


QUALITY AUTO PARTS



BMW




SPARK PLUGS

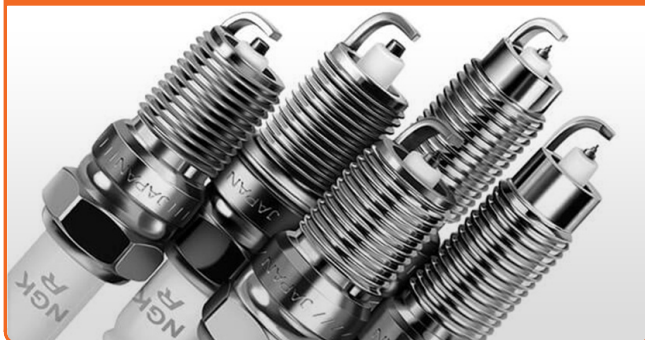

BMW 5 E 39



SPARK PLUGS FOR BMW

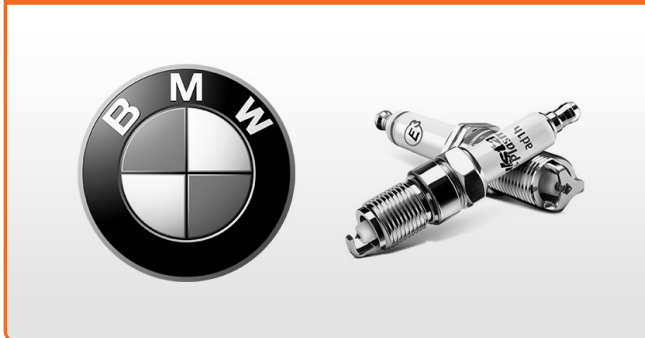

SPARK PLUGS FOR BMW 5 E 39



i Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement works. AutoDoc shall not be liable for any loss, injury, damage of property, acquired in the repair or replacement process due to incorrect usage or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for informative purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

AUTODOC IN SOCIAL MEDIA

