



How to change front
brake pads on **Peugeot**
208 1 – replacement
guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

PEUGEOT PARTNER Box (5) 1.1, PEUGEOT PARTNER Box (5) 1.4, PEUGEOT PARTNER Box (5) 1.8 D, PEUGEOT PARTNER Box (5) 1.9 D, PEUGEOT PARTNER Combispac (5F) 1.1, PEUGEOT PARTNER Combispac (5F) 1.4, PEUGEOT PARTNER Combispac (5F) 1.9 D, PEUGEOT 208 I Hatchback (CA_, CC_) 1.6, PEUGEOT 208 I Hatchback (CA_, CC_) 1.4 HDi, PEUGEOT 208 I Hatchback (CA_, CC_) 1.6 HDi, PEUGEOT PARTNER Combispac (5F) 1.8, PEUGEOT 207 Saloon 1.4, PEUGEOT 307 Hatchback (3A/C) 1.6, PEUGEOT 207 Hatchback 1.4, PEUGEOT 206 Hatchback (2A/C) 2.0 HDI 90, (+ 119)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – PEUGEOT 208 1. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Combination spanner #13
- Drive socket # 13
- Wheel impact socket #17
- Brake caliper wind back tool
- Torque wrench
- Crow bar
- Wheel chock

[BUY TOOLS](#)

 
Replacement: brake pads – Peugeot 208 1. Tip from AUTODOC experts:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car – Peugeot 208 1 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the bonnet.




2

 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3

 Unscrew the brake fluid reservoir cap.



4 Secure the wheels with chocks.



 
5 Loosen the wheel mounting bolts. Use wheel impact socket #17.



6 Raise the front of the car and secure on supports.



7 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Peugeot 208 1

8

Remove the wheel.



 
9

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.




10

Unscrew the brake caliper fastening. Use a combination spanner #13.




11

 Spread the brake pads. Use a crowbar.



12

 Remove the brake caliper.



Replacement: brake pads – Peugeot 208 1. AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

13

Remove the brake pads. Use a crowbar.



Replacement: brake pads – Peugeot 208 1. Professionals recommend:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

14

Treat the brake caliper piston. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – Peugeot 208 1. After applying the spray, wait a few minutes.


15

Press in the brake caliper piston. Use brake caliper wind back tool.



16

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

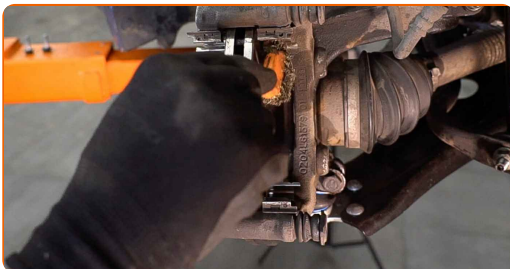

Replacement: brake pads – Peugeot 208 1. AUTODOC experts recommend:

- After applying the spray, wait a few minutes.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

- 17 Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – Peugeot 208 1. Tip from AUTODOC:

- Make sure the disc surface is clean before installing the pads.

- 18 Install new brake pads.



 
Replacement: brake pads – Peugeot 208 1. AUTODOC recommends:

- Make sure the pads are installed with linings facing the disc.


- 19** Install the brake caliper and fix it. Use a combination spanner #13. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.



- 20** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



 - 21** Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – Peugeot 208 1. After applying the spray, wait a few minutes.

- 22** Install the wheel.




Replacement: brake pads – Peugeot 208 1. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

23

Screw in the wheel bolts. Use wheel impact socket #17.

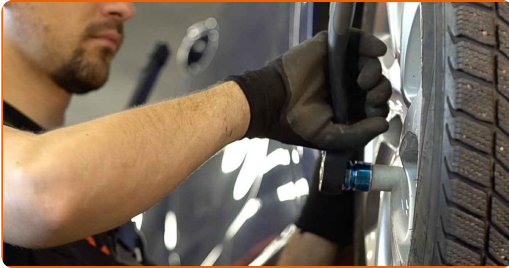

24

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 100 Nm torque.




AUTODOC recommends:

- Important! Replacement: brake pads – Peugeot 208 1. Check the brake fluid level in the reservoir and top up if necessary.

25

Tighten the brake fluid reservoir cap.

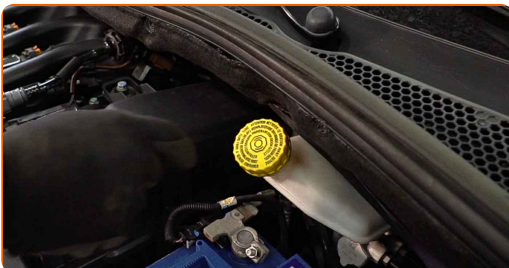

26

Remove the fender protection cover.



27

Close the hood.



AUTODOC recommends:

- Peugeot 208 1 – Press the brake pedal several times with the engine shut down until you feel the resistance built up.

28

Remove the jacks and chocks.



Replacement: brake pads – Peugeot 208 1. Tip from AUTODOC:

- Slow down smoothly for first 150-200 km after the brake pads replacement.
Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

BRAKE PADS: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 208 1

BRAKE PADS FOR PEUGEOT: BUY NOW

BRAKE PADS FOR PEUGEOT 208 1: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.