# - AUTODOC CLUB

How to change air filter on **Peugeot 207 hatchback** – replacement guide



#### **VIDEO TUTORIAL**




(i) Important!

This replacement procedure can be used for:

PEUGEOT 508 I (8D\_) Saloon 1.6 VTi, PEUGEOT 508 I SW (8E\_) 1.6 VTi, PEUGEOT PARTNER Box 1.6, PEUGEOT 207 CC 1.6 16V, PEUGEOT 207 Hatchback 1.6 16V VTi, PEUGEOT 308 I Hatchback (4A, 4C) 1.4 16V, PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V, PEUGEOT 207 SW 1.4 16V, PEUGEOT 207 SW 1.6 16V, PEUGEOT 308 I SW (4E, 4H) 1.4 16V, PEUGEOT 308 I SW (4E, 4H) 1.6 16V, PEUGEOT 207 Hatchback 1.4 16V, PEUGEOT 3008 I (0U\_) 1.6 VTi, PEUGEOT 308 I CC (4B) 1.6 16V, PEUGEOT 5008 I (0U\_, 0E\_) 1.6 16V, (+7)

The steps may slightly vary depending on the car design.

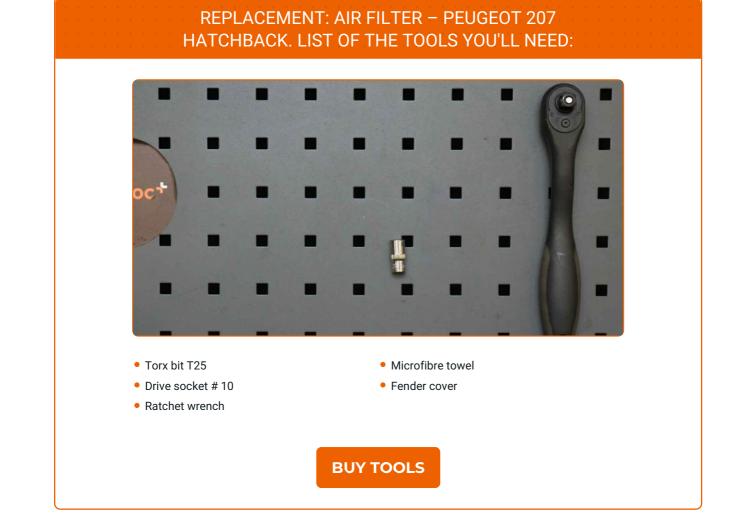

4

O

## + AUTODOC CLUB



Replacement: air filter – Peugeot 207 hatchback. AUTODOC experts recommend:

• Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.

• All work should be done with the engine stopped.

## **REPLACEMENT: AIR FILTER – PEUGEOT 207 HATCHBACK. USE THE FOLLOWING PROCEDURE:**



Open the bonnet.





Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3

Undo the fastening screws of the air filter cover. Use Torx T25. Use a drive socket #10. Use a ratchet wrench.



## + AUTODOC CLUB





Take off the filter lid.



5

Remove the filter element from the filter housing.



6

Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



7

Clean the air filter cover and housing.



#### AUTODOC recommends:

 Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

## + AUTODOC CLUB



8

Remove the microfibre towel from the air intake hose.



9

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



#### AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Peugeot 207 hatchback It's important to only use high-quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

10

Reinstall the air filter cover. Fasten it.





11

Screw in the fastening screws of the air filter cover. Use Torx T25. Use a drive socket #10. Use a ratchet wrench.



12

Remove the fender protection cover.



13

Close the hood.





**VIEW MORE TUTORIALS** 



### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **BUY SPARE PARTS FOR PEUGEOT**

**AIR FILTER: A WIDE SELECTION** 



#### **CHOOSE CAR PARTS FOR PEUGEOT 207**

#### **AIR FILTER FOR PEUGEOT: BUY NOW**

**AIR FILTER FOR PEUGEOT 207: THE BEST DEALS & OFFERS** 

## (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.