



How to change rear coil  
springs on **Mazda 3 BK** –  
replacement guide

## VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

MAZDA 3 Hatchback (BK) 1.6, MAZDA 3 Hatchback (BK) 2.0, MAZDA 3 Saloon (BK) 2.0, MAZDA 3 Saloon (BK) 1.6 DI Turbo, MAZDA 3 Hatchback (BK) 1.6 DI Turbo, MAZDA 3 Hatchback (BK) 1.4

The steps may slightly vary depending on the car design.

**REPLACEMENT: COIL SPRINGS – MAZDA 3 BK. TOOLS YOU MIGHT NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Drive socket # 17
- HEX bit no.H6.
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**BUY TOOLS**

Replacement: coil springs – Mazda 3 BK. Tip from AUTODOC:


- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- Please note: all work on the car – Mazda 3 BK – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Secure the wheels with chocks.



**2** Loosen the wheel mounting bolts. Use wheel impact socket #19.

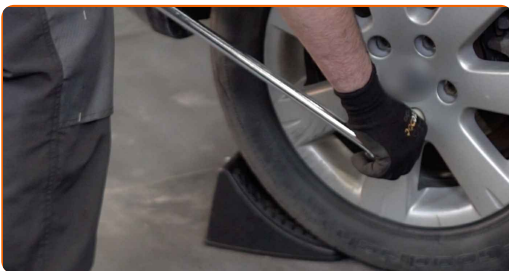

**3** Raise the rear of the car and secure on supports.



4

Unscrew the wheel bolts.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.  
Mazda 3 BK

5

Remove the wheel.



6

Clean the control arm fasteners. Use a wire brush. Use WD-40 spray.

7

Unscrew the fastener connecting the control arm to the rear knuckle. Use a drive socket #17. Use a ratchet wrench.



**8** Support the arm. Use a hydraulic transmission jack.



**9** Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

 
**10** Unscrew the lower fastener of the shock absorber. Use a drive socket #17. Use a ratchet wrench.



**11** Remove the fastening bolts (2 pieces).


**12** Detach the lower part of the shock absorber.

**13** Unscrew the fastener connecting the stabilizer link to the control arm. Use a combination spanner #17. Use HEX No.H6. Use a ratchet wrench.

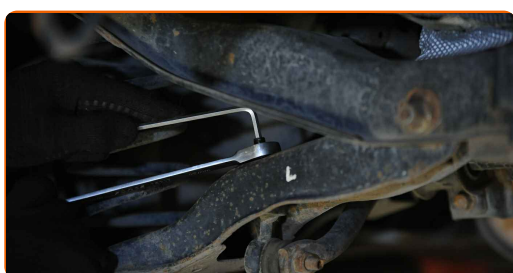

**14** Remove the fastening bolt.

 **15** Remove the support from under the arm.

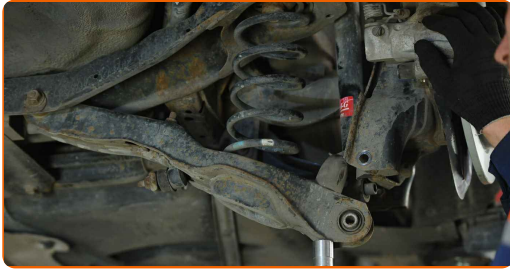


**AUTODOC recommends:**


- Replacement: shock absorbers – Mazda 3 BK. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

**16** Pull down the suspension control arm. Use a crowbar.

 **17** Remove the spring.

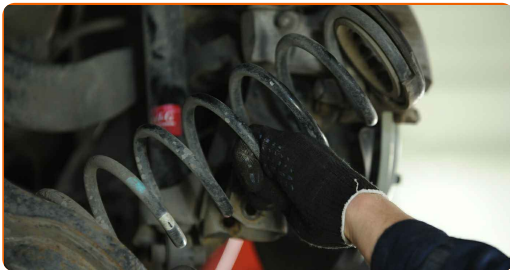


**18** Remove the rubber spring spacer.

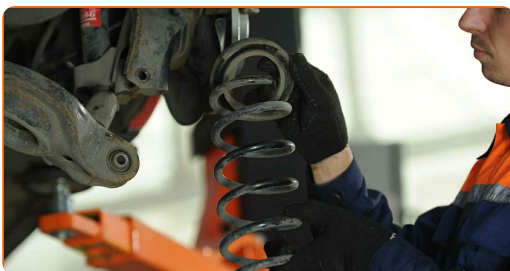 

**19** Install the rubber spacer on the new coil spring.



 
**20** Install the spring.

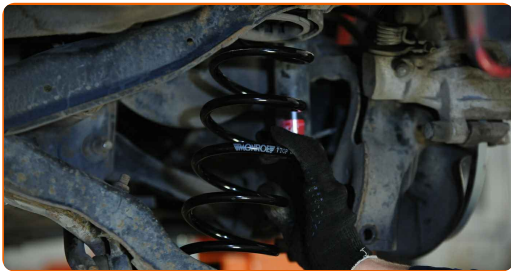

Replacement: coil springs – Mazda 3 BK. Professionals recommend:

- Make sure that the coil spring is correctly positioned in its mounting seats.

 **21** Support the arm. Use a hydraulic transmission jack.

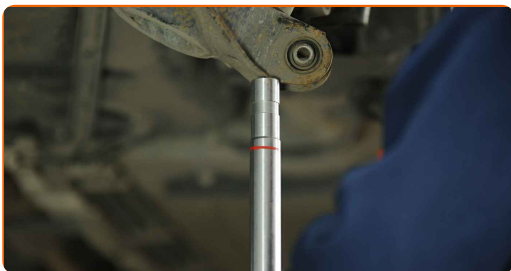

**22** Install the fastening bolt. Use a crowbar.



- 23** Tighten the fastener connecting the suspension arm to the rear knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 75 Nm torque.




- 24** Attach the lower part of the shock absorber.

- 25** Install the fastening bolt.

- 26** Tighten the lower fastener of the shock absorber. Use a drive socket #17. Use a torque wrench. Tighten it to 76 Nm torque.




- 27** Remove the support from under the arm.

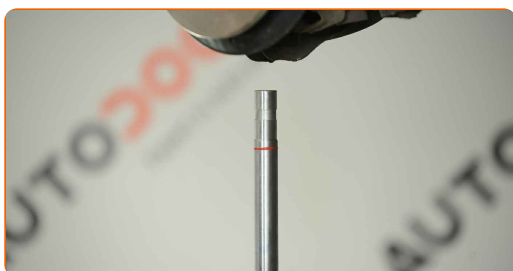

**AUTODOC recommends:**


- Replacement: shock absorbers – Mazda 3 BK. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

- 28** Install the fastener connecting the stabiliser link to the control arm and tighten it. Use a combination spanner #17. Use HEX No.H6. Use a torque wrench. Tighten it to 52 Nm torque.

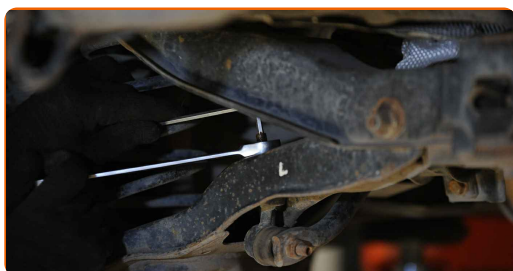


- 29** Treat the shock absorber fasteners. Treat all joints of the arm. Treat all joints of the stabiliser link. Use copper grease.

- 30** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

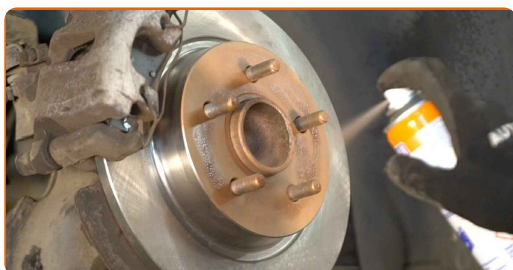

- 31** Clean the brake disk surface. Use a brake cleaner.

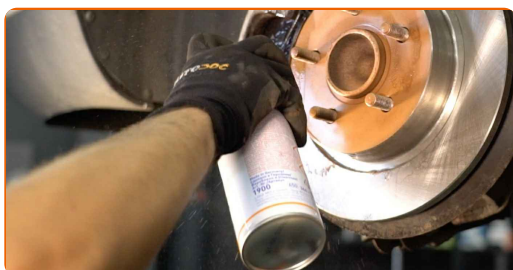

**AUTODOC recommends:**

- Replacement: coil springs – Mazda 3 BK. After applying the spray, wait a few minutes.

**32** Install the wheel.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Mazda 3 BK

**33** Screw in the wheel bolts. Use wheel impact socket #19.



**34** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 118 nm torque.



35

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  **Google Play**

 **Download on the App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR MAZDA**

**COIL SPRINGS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR MAZDA 3 BK**

**COIL SPRINGS FOR MAZDA: BUY NOW**

**COIL SPRINGS FOR MAZDA 3 BK: THE BEST DEALS &  
OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.