



How to change ignition  
coil on **Peugeot 308 I** –  
replacement guide

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:

PEUGEOT 508 I (8D\_) Saloon 1.6 THP, PEUGEOT 508 I SW (8E\_) 1.6 THP, PEUGEOT 308 I CC (4B) 1.6 THP, PEUGEOT 208 I Hatchback (CA\_, CC\_) 1.6, PEUGEOT 207 Hatchback 1.6 16V Turbo, PEUGEOT 207 CC 1.6 16V Turbo, PEUGEOT 207 Hatchback 1.6 16V RC, PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V, PEUGEOT 308 I SW (4E, 4H) 1.6 16V, PEUGEOT 308 I CC (4B) 1.6 16V, PEUGEOT 3008 I (0U\_) 1.6 THP, PEUGEOT 207 SW 1.6 16V RC, PEUGEOT 5008 I (0U\_, 0E\_) 1.6 16V, PEUGEOT RCZ Coupe 1.6 16V, PEUGEOT 308 I Hatchback (4A, 4C) 1.6 GTi, (+ 46)

The steps may slightly vary depending on the car design.

REPLACEMENT: IGNITION COIL – PEUGEOT 308 I. LIST OF THE TOOLS YOU'LL NEED:

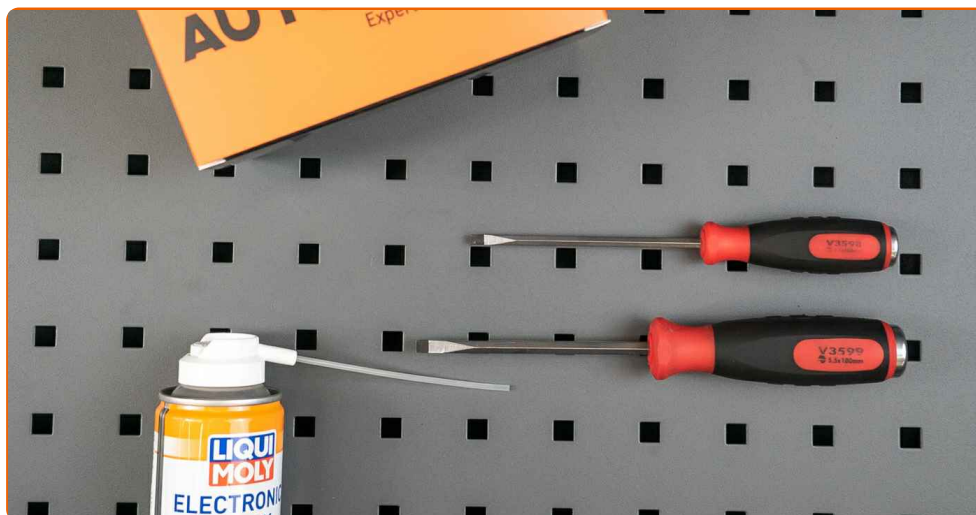

- Electronic spray
- Flat screwdriver
- Fender cover
- Ignition coil removal tool

**BUY TOOLS**

Replacement: ignition coil – Peugeot 308 I. AUTODOC recommends:

- The replacement procedure is the same for the ignition coils of all cylinders.
- All work should be done with the engine stopped.

## REPLACEMENT: IGNITION COIL – PEUGEOT 308 I. RECOMMENDED SEQUENCE OF STEPS:

1

Open the hood.




2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




3

Unplug the connectors from the ignition coils.

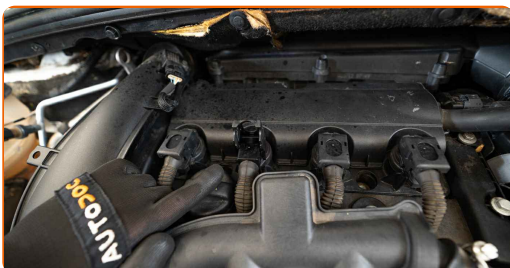


4

 Detach the connector from the ignition coil.




5

Pry up the ignition coil. Use an ignition coil remover. Take out the ignition coil from the spark plug well.

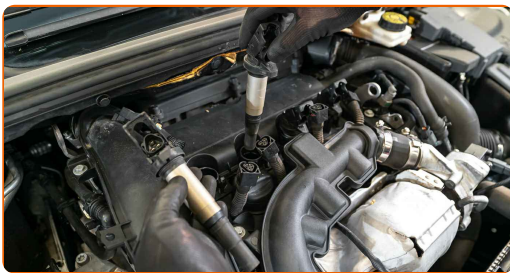

6

 Clean dirt, dust and debris from inside the spark plug well.




7

Install the new ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.




8

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.

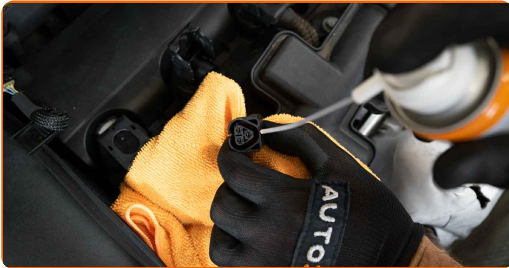


9

Plug in the connectors of the ignition coils.

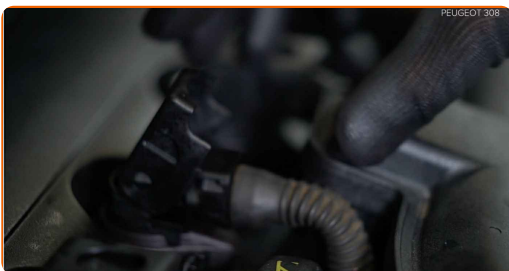

10

Lock the connector.

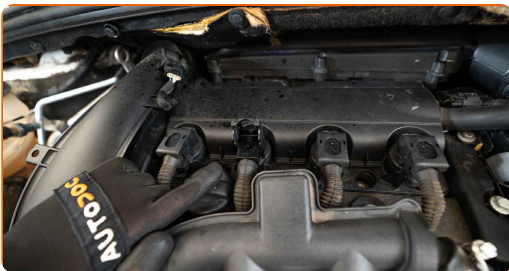

11

Remove the fender protection cover.



12

Close the hood.



**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

**AUTODOC**

GET IT ON  
Google Play

Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR PEUGEOT**

**IGNITION COIL: A WIDE SELECTION**



**CHOOSE CAR PARTS FOR PEUGEOT 308 I**

**IGNITION COIL FOR PEUGEOT: BUY NOW**

**IGNITION COIL FOR PEUGEOT 308 I: THE BEST DEALS &  
OFFERS**

### **ⓘ DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.