- AUTODOC CLUB

How to change spark plugs on **Peugeot 308 I** – replacement guide



VIDEO TUTORIAL




(i) Important!

This replacement procedure can be used for:

PEUGEOT 508 I (8D_) Saloon 1.6 VTi, PEUGEOT 508 I SW (8E_) 1.6 VTi, PEUGEOT 508 I (8D_) Saloon 1.6 THP, PEUGEOT 508 I SW (8E_) 1.6 THP, PEUGEOT 408 Saloon 1.6 16V, PEUGEOT PARTNER Box 1.6, PEUGEOT 208 I Hatchback (CA_, CC_) 1.6, PEUGEOT 207 Hatchback 1.6 16V Turbo, PEUGEOT 207 CC 1.6 16V, PEUGEOT 207 CC 1.6 16V, PEUGEOT 207 CC 1.6 16V, PEUGEOT 207 Hatchback 1.6 16V VTi, PEUGEOT 207 Hatchback 1.6 16V RC, PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V, PEUGEOT 207 SW 1.6 16V, PEUGEOT 308 I SW (4E, 4H) 1.6 16V, (+ 14)

The steps may slightly vary depending on the car design.

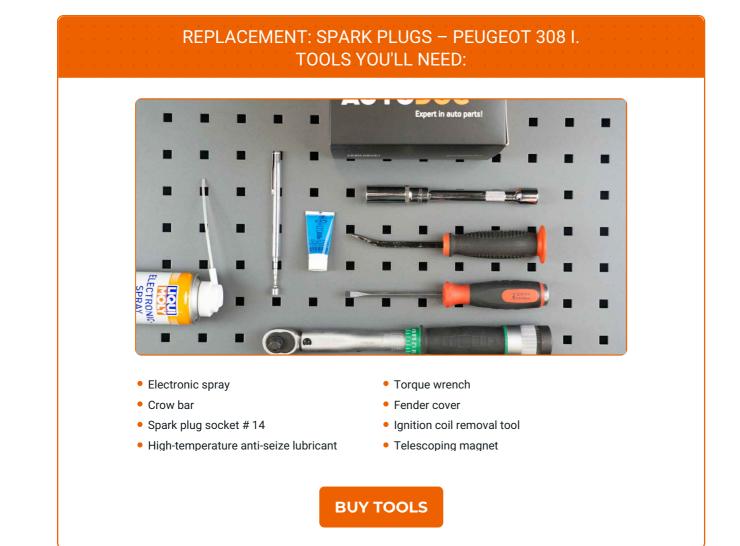

O



Replacement: spark plugs – Peugeot 308 I. AUTODOC experts recommend:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – PEUGEOT 308 I. RECOMMENDED SEQUENCE OF STEPS:



Open the hood.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.





Unplug the connectors from the ignition coils. Use an ignition coil remover.





Pry up the ignition coil. Use a crowbar. Take out the ignition coil from the spark plug well.



Replacement: spark plugs - Peugeot 308 I. Tip:

• Remember the sequence of steps for ignition coil demounting.



Clean dirt, dust and debris from inside the spark plug well.



6

Unscrew the spark plugs. Use the 12-point spark plug socket #14.



7

Take out the spark plugs. Use a telescoping magnet.





Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



9

Install the new spark plugs into their mounting seats.



10

Screw new spark plugs and tighten them. Use the 12-point spark plug socket #14. Use a torque wrench. Tighten it to 23 nm torque.



Replacement: spark plugs – Peugeot 308 I. Tip from AUTODOC:

- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.
- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.



Install the ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.



AUTODOC recommends:

• Replacement: spark plugs – Peugeot 308 I. Follow the installation steps.

12

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



13

Plug in the connectors of the ignition coils.



+ AUTODOC CLUB





Lock the connector.



15

Remove the fender protection cover.



16

Close the hood.






VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

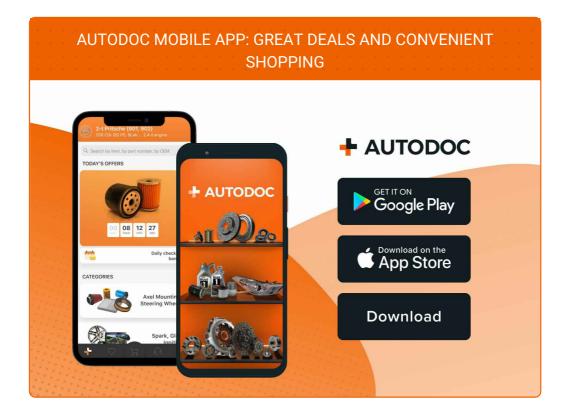

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

SPARK PLUGS: A WIDE SELECTION



CHOOSE CAR PARTS FOR PEUGEOT 308 I

SPARK PLUGS FOR PEUGEOT: BUY NOW

SPARK PLUGS FOR PEUGEOT 308 I: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.