+ AUTODOC CLUB

How to change rear coil springs on **Peugeot 406 saloon** – replacement guide







VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

PEUGEOT 406 Saloon 1.6, PEUGEOT 406 Saloon 1.8 16V, PEUGEOT 406 Saloon 2.0 16V, PEUGEOT 406 Saloon 1.9 TD, PEUGEOT 406 Saloon 2.1 TD 12V, PEUGEOT 406 Saloon 2.0 Turbo, PEUGEOT 406 Estate 1.8 16V, PEUGEOT 406 Estate 1.9 TD, PEUGEOT 406 Estate 2.1 TD 12V, PEUGEOT 406 Estate 2.0 Turbo, PEUGEOT 406 Estate 2.0 16V, PEUGEOT 406 Saloon 1.8, PEUGEOT 406 Estate 1.8, PEUGEOT 406 Saloon 2.0 HDI 110, PEUGEOT 406 Estate 2.0 HDI 110, (+ 11)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1–13







REPLACEMENT: COIL SPRINGS – PEUGEOT 406 SALOON. TOOLS YOU'LL NEED:

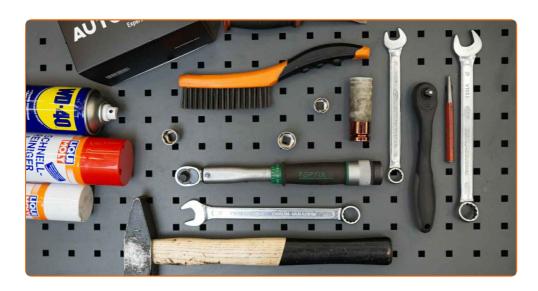

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- High-temperature ceramic grease
- Combination spanner #18
- Combination spanner #18
- Drive socket # 18
- Drive socket # 21

- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Hammer
- Pin punch
- Hydraulic transmission jack
- Crow bar
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-13







Replacement: coil springs – Peugeot 406 saloon. AUTODOC recommends:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – PEUGEOT 406 SALOON. RECOMMENDED SEQUENCE OF STEPS:

1

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #19.



Raise the rear of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-13







4 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 Peugeot 406 saloon
- 5 Remove the wheel.



Support the rear control arm. Use a hydraulic transmission jack.



Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 4–13







Unscrew the lower fastener of the shock absorber. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



9 Remove the fastening bolt.



- Clean the fastener connecting the rear knuckle to the suspension control arm. Use a wire brush. Use WD-40 spray.
- Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.



- Remove the fastening bolt. Use a pin punch. Use a hammer.
- Disconnect the ABS sensor wiring. Use a crowbar.



CLUB.AUTODOC.CO.UK 5-13







Remove the support from under the rear control arm.



AUTODOC recommends:

- Peugeot 406 saloon Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.
- 15 Take out the spring.

16



Remove the rubber spring spacer.

Replacement: coil springs – Peugeot 406 saloon. Tip:

• Inspect the rubber mounts of the suspension spring. Replace if necessary.

CLUB.AUTODOC.CO.UK 6-13







17 Install the rubber spring spacer.



Install the coil spring together with the rubber mounts into the mounting seats.



Support the rear control arm. Use a hydraulic transmission jack.



- Install the fastening bolt. Use a pin punch. Use a crowbar. Use a drive socket #21. Use a ratchet wrench.
- 21 Install the fastening bolt.



CLUB.AUTODOC.CO.UK 7–13







Raise the hydraulic transmission jack by 10-15 cm.



Tighten the fastener connecting the control arm to the rear knuckle. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 95 Nm torque.



Tighten the lower fastener of the shock absorber. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 75 Nm torque.



Remove the support from under the rear control arm.



25

CLUB.AUTODOC.CO.UK 8-13







AUTODOC recommends:

 Replacement: coil springs – Peugeot 406 saloon. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

Connect the ABS sensor wiring.



- Treat the shock absorber fasteners. Treat all joints of the arm. Use copper grease.
- Treat the surface where the brake disc contacts the wheel rim. Use high-temperature ceramic grease.



Clean the brake disk surface. Use a brake cleaner.

29



CLUB.AUTODOC.CO.UK 9-13







AUTODOC recommends:

 Replacement: coil springs – Peugeot 406 saloon. After applying the spray, wait a few minutes.

30

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Peugeot 406 saloon
- 31

Screw in the wheel bolts. Use wheel impact socket #19.



32

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 90 nm torque.



CLUB.AUTODOC.CO.UK 10-13







33

Remove the jacks and chocks.






VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 11-13





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

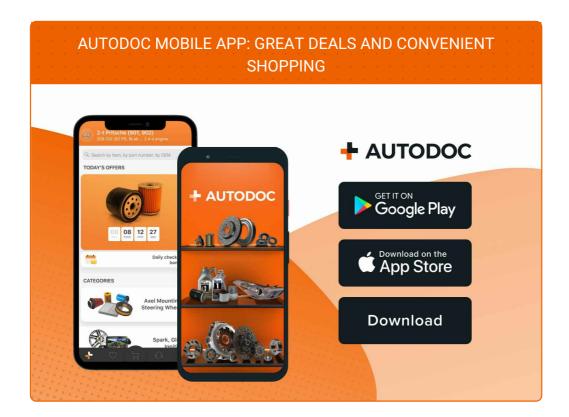

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

COIL SPRINGS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 12-13





CHOOSE CAR PARTS FOR PEUGEOT 406 SALOON

COIL SPRINGS FOR PEUGEOT: BUY NOW

COIL SPRINGS FOR PEUGEOT 406 SALOON: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 13-13