



How to change front
brake pads on **Peugeot**
407 saloon –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

PEUGEOT 407 Saloon 2.0 Bioflex, PEUGEOT 407 Saloon 2.0, PEUGEOT 407 Saloon 2.0 HDi 135, PEUGEOT 407 Saloon 1.8, PEUGEOT 407 SW 1.8, PEUGEOT 407 SW 2.0, PEUGEOT 407 SW 1.6 HDi 110, PEUGEOT 407 SW 2.0 HDi 135, PEUGEOT 407 SW 1.8 16V, PEUGEOT 407 SW 2.0 16V, PEUGEOT 407 Saloon 1.8 16V, PEUGEOT 407 Saloon 2.0 16V, PEUGEOT 407 Saloon 2.0 HDi, PEUGEOT 407 SW 2.0 HDi, PEUGEOT 407 Coupe 2.0 HDi, (+ 1)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – PEUGEOT 407
SALOON. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Combination spanner #15
- Drive socket # 13
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Flat Screwdriver
- Crow bar
- Wheel chock

 
BUY TOOLS

Replacement: brake pads – Peugeot 407 saloon. AUTODOC experts recommend:


- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE PADS – PEUGEOT 407 SALOON. USE THE FOLLOWING PROCEDURE:


1 Open the bonnet. Unscrew the brake fluid reservoir cap.



2 Secure the wheels with chocks.

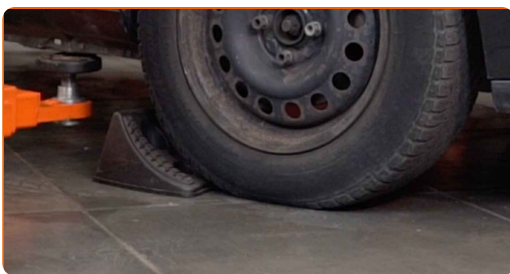

 3 Loosen the wheel mounting bolts. Use wheel impact socket #19.



4 Raise the front of the car and secure on supports.

 
5 Unscrew the wheel bolts.



AUTODOC recommends:


- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Peugeot 407 saloon

6 Remove the wheel.




7 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

8 Unscrew the brake caliper fastening. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.

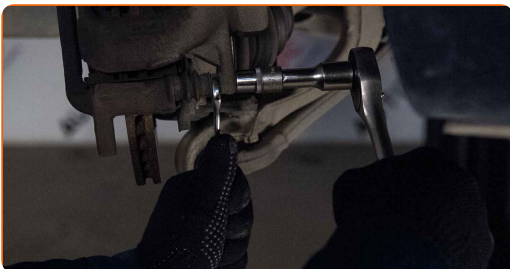


9

Disconnect the brake pad wear sensor plug. Use a flat screwdriver.

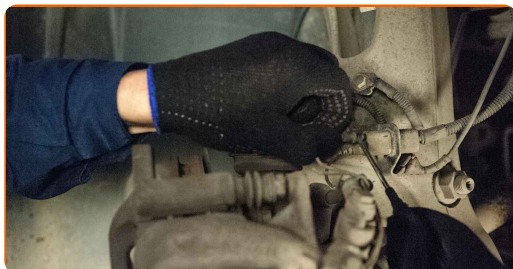

10

 Disconnect the brake pad wear sensor cable. Use a flat screwdriver.




11

Spread the brake pads. Use a crowbar.



12

 Remove the brake caliper.



Replacement: brake pads – Peugeot 407 saloon. Tip from AUTODOC:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

13

Remove the brake pads.



Replacement: brake pads – Peugeot 407 saloon. AUTODOC recommends:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

14

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – Peugeot 407 saloon. After applying the spray, wait a few minutes.

15

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.




Replacement: brake pads – Peugeot 407 saloon. Tip from AUTODOC experts:

- Make sure the disc surface is clean before installing the pads.

16

Install new brake pads.

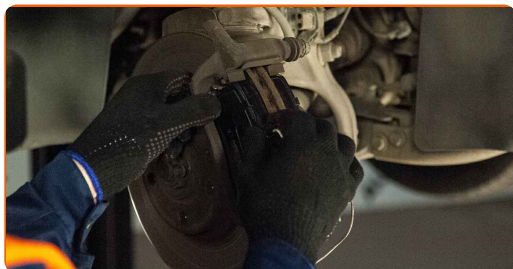


Replacement: brake pads – Peugeot 407 saloon. AUTODOC experts recommend:

- Make sure the pads are installed with linings facing the disc.

17

 
Treat the brake caliper piston. Use a brake cleaner.




AUTODOC recommends:

- Replacement: brake pads – Peugeot 407 saloon. After applying the spray, wait a few minutes.

 
18 Press in the brake caliper piston. Use brake caliper wind back tool.



 
19 Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.



 20 Connect the brake pad wear sensor cable.




 21 Connect the brake pad wear sensor plug.



22

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

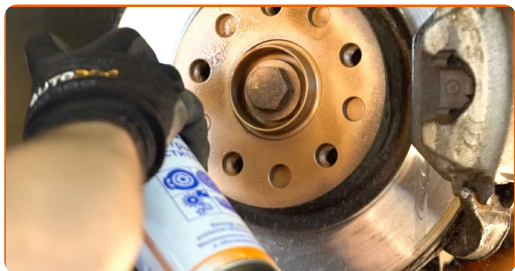

23

Clean the brake disk surface. Use a brake cleaner.




Replacement: brake pads – Peugeot 407 saloon. AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

24

Install the wheel.

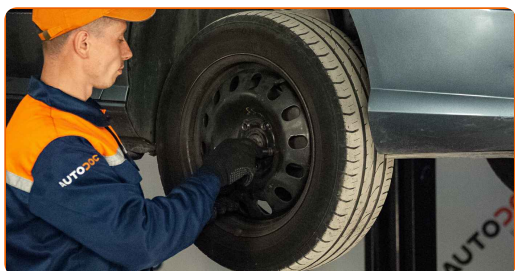

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Peugeot 407 saloon

 
25 Screw in the wheel bolts. Use wheel impact socket #19.



26 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 100 nm torque.



27 Remove the jacks and chocks.




Replacement: brake pads – Peugeot 407 saloon. Tip from AUTODOC:

- Check the brake fluid level in the expansion tank and refill if necessary.

28

 Tighten the brake fluid reservoir cap. Close the hood.



Replacement: brake pads – Peugeot 407 saloon. Tip from AUTODOC:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

BRAKE PADS: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 407 SALOON

BRAKE PADS FOR PEUGEOT: BUY NOW

**BRAKE PADS FOR PEUGEOT 407 SALOON: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.