# **+** AUTODOC CLUB


How to change front anti roll bar links on **BMW E39** – replacement guide







### **VIDEO TUTORIAL**

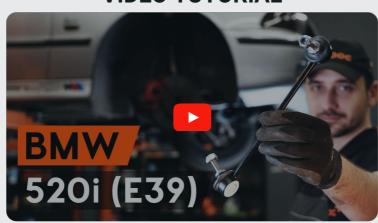

## (i) Important!

This replacement procedure can be used for:

BMW 5 Saloon (E39) 520i 2.0, BMW 5 Saloon (E39) 525tds 2.5, BMW 5 Saloon (E39) 523i 2.5, BMW 5 Saloon (E39) 528i 2.8, BMW 5 Saloon (E39) 535i 3.5, BMW 5 Touring (E39) 520i 2.0, BMW 5 Touring (E39) 523i 2.5, BMW 5 Saloon (E39) 525td 2.5, BMW 5 Touring (E39) 528i 2.8, BMW 5 Saloon (E39) 530d 3.0, BMW 5 Touring (E39) 525tds 2.5, BMW 5 Saloon (E39) 520d 2.0, BMW 5 Touring (E39) 520d 2.0, BMW 5 Saloon (E39) 525d 2.5, (+7)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-10







## REPLACEMENT: ANTI ROLL BAR LINKS – BMW E39. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17

- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-10







### Replacement: anti roll bar links – BMW E39. AUTODOC experts recommend:

- Replace the stabiliser links on BMW E39 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

# REPLACEMENT: ANTI ROLL BAR LINKS – BMW E39. TAKE THE FOLLOWING STEPS:

Secure the wheels with chocks.

3



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-10







4 Unscrew the wheel bolts.



## Replacement: anti roll bar links – BMW E39. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- Remove the wheel.



6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4-10







Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.



9 Remove the stabilizer rod.

10



Replacement: anti roll bar links – BMW E39. AUTODOC recommends:

• Examine stabiliser bushes. Replace them if needed.

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 5-10







11 Install the transverse stabilizer link.



Tighten the stabiliser link fastener. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.



Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 65 Nm torque.



Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 65 Nm torque.



CLUB.AUTODOC.CO.UK 6-10







Treat all joints of the stabiliser link. Use copper grease.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



### **AUTODOC** recommends:

 Replacement: anti roll bar links – BMW E39. After applying the spray, wait a few minutes.

18

Install the wheel.



CLUB.AUTODOC.CO.UK 7-10







### Replacement: anti roll bar links – BMW E39. Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 8-10





# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR BMW** 

**ANTI ROLL BAR LINKS: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 9-10







#### **CHOOSE CAR PARTS FOR BMW E39**

ANTI ROLL BAR LINKS FOR BMW: BUY NOW

ANTI ROLL BAR LINKS FOR BMW E39: THE BEST DEALS & OFFERS

## **① DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 10-10