- AUTODOC CLUB

How to change rear anti roll bar links on **BMW E60** – replacement guide



VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

BMW 5 Saloon (E60) 525i 2.5, BMW 5 Saloon (E60) 520i 2.2, BMW 5 Saloon (E60) 530i 3.0, BMW 5 Saloon (E60) 530d 3.0, BMW 5 Saloon (E60) 545i 4.4, BMW 5 Touring (E61) 525i 2.5, BMW 5 Touring (E61) 545i 4.4, BMW 5 Touring (E61) 530d 3.0, BMW 6 Coupe (E63) 645Ci 4.4, BMW 6 Convertible (E64) 645Ci 4.4, BMW 5 Saloon (E60) 525d 2.5, BMW 5 Touring (E61) 525d 2.5, BMW 5 Saloon (E60) M5, BMW 5 Saloon (E60) 535d 3.0, BMW 5 Touring (E61) 535d 3.0, (+ 52)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – BMW E60. TOOLS YOU MIGHT NEED:

f

Ø



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #15
- Combination spanner #16
- Combination spanner #17
- Combination spanner #18

- Drive socket #15
- Drive socket # 16
- HEX bit no.H6.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Wheel chock

BUY TOOLS



Replacement: anti roll bar links – BMW E60. AUTODOC experts recommend:

- Replace the stabiliser links on BMW E60 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – BMW E60. RECOMMENDED SEQUENCE OF STEPS:



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.







Unscrew the wheel bolts.



AUTODOC recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. BMW E60



Remove the wheel.



6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.





7

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #15. Use a combination spanner #16.



8

Unscrew the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #18. Use HEX No.H6. Use a ratchet wrench.



9

Remove the stabilizer rod.



Replacement: anti roll bar links – BMW E60. Tip from AUTODOC experts:

• Examine stabiliser bushes. Replace them if needed.



10

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



11

Install the transverse stabilizer link.



12

Tighten the stabiliser link fastener. Use a combination spanner #15. Use a combination spanner #17. Use a combination spanner #18. Use HEX No.H6. Use a ratchet wrench.



13

Tighten the fastener connecting the stabilizer bar with the control arm. Use a drive socket #18. Use a torque wrench. Tighten it to 100 Nm torque.





14

Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #16. Use a torque wrench. Tighten it to 65 Nm torque.



15

Treat all joints of the stabiliser link. Use copper grease.



16

Clean the wheel rim mounting seat. Use a wire brush. Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



17

Clean the brake disk surface. Use a brake cleaner.





AUTODOC recommends:

 Replacement: anti roll bar links – BMW E60. After applying the spray, wait a few minutes.

18

Install the wheel.



Replacement: anti roll bar links – BMW E60. AUTODOC experts recommend:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.



Screw in the wheel bolts. Use wheel impact socket #17.



20

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.







Remove the jacks and chocks.






VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

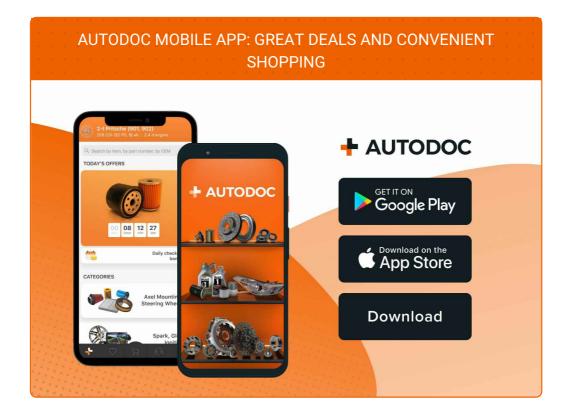

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

ANTI ROLL BAR LINKS: A WIDE SELECTION



CHOOSE CAR PARTS FOR BMW E60

ANTI ROLL BAR LINKS FOR BMW: BUY NOW

ANTI ROLL BAR LINKS FOR BMW E60: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.