



How to change front
brake discs on **Abarth**
595 – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXF11), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXT1A), ABARTH 500C / 595C / 695C Convertible (312) 1.4 (312.AXF1A), ABARTH 500C / 595C / 695C Convertible (312) 1.4 (312.AXF1A, 312.AXD1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXD1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXF11, 312.AXF1A, 312.AXD1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXF1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXY11, 312.AXY1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AXZ11), ABARTH 500C / 595C / 695C Convertible (312) 1.4 (312.AXZ1A), ABARTH 500 / 595 / 695 Hatchback (312) 1.4 (312.AYB11), ABARTH 500C / 595C / 695C Convertible (312) 1.4 (312.AXY1A)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE DISCS – ABARTH 595. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Brake cleaner
- Copper grease
- Drive socket # 13
- Drive socket # 19
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Tap wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock

BUY TOOLS

 
Replacement: brake discs – Abarth 595. AUTODOC experts recommend:

- Replace the brake disks on the car Abarth 595 in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – Abarth 595 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet. Unscrew the brake fluid reservoir cap.



2

Secure the wheels with chocks.



3

Loosen the wheel mounting bolts. Use wheel impact socket #19.



4

Raise the front of the car and secure on supports.



5

Unscrew the wheel bolts.



Replacement: brake discs – Abarth 595. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

 
6

Remove the wheel.



7

Spread the brake pads. Use a crowbar.



8

Disconnect the ABS sensor electric socket. Disconnect the brake pad wear sensor plug. Remove the ABS sensor connector. Remove the connector of the brake pad wear sensor.

 


Please note!

- Some cars are not equipped with the brake pad wear sensor.


9

Release the ABS sensor cable from the holder on the brake caliper.



10

Unscrew the brake caliper fastening. Use a drive socket #13. Use a ratchet wrench.

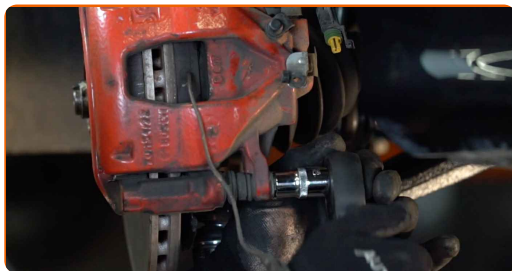

11

Remove the brake caliper.



Replacement: brake discs – Abarth 595. Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

 
12

Unscrew the caliper bracket fastening. Use a drive socket #19. Use a tap wrench. Use a ratchet wrench.



13

Remove the brake caliper bracket together with the brake pads.



14

Remove the brake disc.



15

Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



16

Remove anti-corrosion grease from the new brake disk.

17 Install the brake disc.



18 Install the brake caliper bracket together with the brake pads.



19 Tighten the brake caliper bracket. Use a drive socket #19. Use a torque wrench. Tighten it to 95 Nm torque.



20 Clean the brake caliper surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs – Abarth 595. After applying the spray, wait a few minutes.

21

Press in the brake caliper piston. Use brake caliper wind back tool.



22

Install the brake caliper and fix it. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.




Replacement: brake discs – Abarth 595. Tip from AUTODOC:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.


23

Install the ABS sensor cable in the holder on the brake caliper.

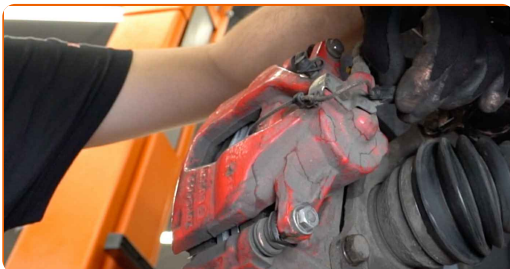

24

 Connect the ABS sensor electric socket. Connect the brake pad wear sensor plug.



25

Clean the brake disk surface. Use a brake cleaner.



Replacement: brake discs – Abarth 595. Tip:

- After applying the spray, wait a few minutes.

26

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

27

Install the wheel.




AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Abarth 595

28 Screw in the wheel bolts. Use wheel impact socket #19.




29 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 nm torque.

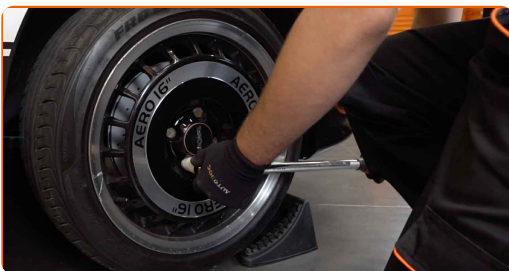

30 Remove the jacks and chocks.

31 Tighten the brake fluid reservoir cap.

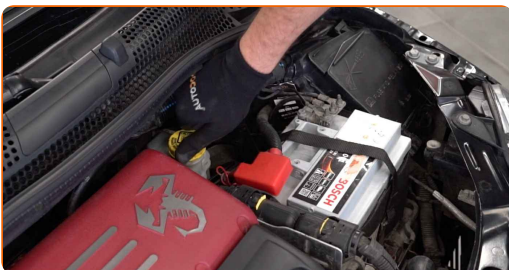

32 Close the hood.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC⁺

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR ABARTH

BRAKE DISCS: A WIDE SELECTION

CHOOSE CAR PARTS FOR ABARTH 595

BRAKE DISCS FOR ABARTH: BUY NOW

**BRAKE DISCS FOR ABARTH 595: THE BEST DEALS &
OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.