+ AUTODOC CLUB

How to change front lower arm on **VW Golf 6** – replacement guide







VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

VW Caddy III Van (2KA, 2KH, 2CA, 2CH) 1.9 TDI 4motion, VW GOLF PLUS (5M1, 521) 1.6 BiFuel, VW GOLF VI (5K1) 1.6 MultiFuel, VW GOLF PLUS (5M1, 521) 1.6 TDI, VW GOLF VI (5K1) 2.0 R 4motion, VW Golf VI Variant (AJ5) 1.6 MultiFuel, VW GOLF PLUS (5M1, 521) 1.2 TSI, VW Golf VI Convertible (517) 1.2 TSI, VW Golf VI Convertible (517) 1.4 TSI, VW Golf VI Convertible (517) 2.0 GTI, VW Golf VI Convertible (517) 1.6 TDI, VW Golf VI Convertible (517) 2.0 TDI, VW GOLF VI (5K1) 1.2 TSI, VW Eos (1F7, 1F8) 2.0 TDI, VW GOLF VI (5K1) 2.0 GTi, (+ 118)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-14







REPLACEMENT: FRONT LOWER ARM – VW GOLF 6. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #18
- Drive socket # 15
- Drive socket # 18
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-14







Replacement: front lower arm – VW Golf 6. AUTODOC recommends:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – VW GOLF 6. USE THE FOLLOWING PROCEDURE:

1

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-14







4 Unscrew the wheel bolts.




AUTODOC recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. VW Golf 6

Remove the wheel.

6

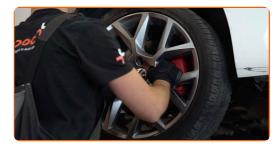

Clean all joints of the arm. Use a wire brush. Treat all joints of the arm. Use WD-40 spray.

Replacement: front lower arm – VW Golf 6. Tip:

- After applying the spray, wait a few minutes.
- Wear protective goggles.

CLUB.AUTODOC.CO.UK 4-14







Unscrew the fasteners of the ball joint. Use a drive socket #15. Use a tap wrench.



Unscrew the rear fastener connecting the control arm to the subframe. Use a drive socket #15. Use a tap wrench.



Unscrew the rear fastener connecting the control arm to the car body. Use a drive socket #18. Use a tap wrench.



10

Unscrew the front arm fastener. Use a drive socket #15. Use a drive socket #18. Use a tap wrench.



CLUB.AUTODOC.CO.UK 5-14







11 Remove the arm. Use a crowbar.



Treat the fasteners of the ball joint. Use copper grease.



13 Install a new arm.



Replacement: front lower arm – VW Golf 6. Tip from AUTODOC experts:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

CLUB.AUTODOC.CO.UK 6-14







14 Install the front fastener of the arm. Do not tighten it.



15 Attach the ball joint to the control arm.



16 Install the fasteners of the ball joint.



Screw the fasteners of the ball joint. Use a drive socket #15. Use a ratchet wrench.



Screw the rear fastener connecting the control arm to the subframe. Use a drive socket #15. Use a drive socket #18. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 7-14







Screw the rear fastener connecting the control arm to the car body. Use a drive socket #15. Use a drive socket #18. Use a ratchet wrench.



Support the arm. Use a hydraulic transmission jack.



Screw the front arm fastener. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+180°



AUTODOC recommends:

• Important! Be sure to use new fasteners.

CLUB.AUTODOC.CO.UK 8-14







Tighten the rear fastener connecting the arm to the car body. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.
- Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #15. Use a torque wrench. Tighten it to 50 Nm torque.+90°



AUTODOC recommends:

• Important! Be sure to use new fasteners.

CLUB.AUTODOC.CO.UK 9-14







Tighten the fasteners of the ball joint. Use a drive socket #15. Use a torque wrench. Tighten it to 60 nm torque.



Remove the support from under the arm.



AUTODOC recommends:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.
- Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



26

CLUB.AUTODOC.CO.UK 10-14







27 Install the wheel.



Replacement: front lower arm – VW Golf 6. Professionals recommend:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.



CLUB.AUTODOC.CO.UK 11-14







30

Remove the jacks and chocks.








VIEW MORE TUTORIALS

12-14 CLUB.AUTODOC.CO.UK





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

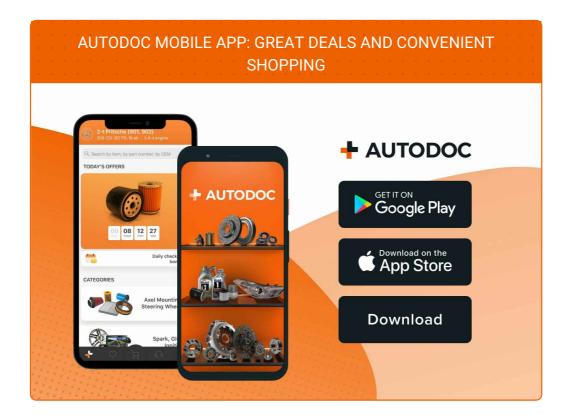

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

CONTROL ARM: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 13-14







CONTROL ARM FOR VW: BUY NOW

CONTROL ARM FOR VW GOLF 6: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 14-14