



How to change front coil  
springs on **Honda**  
**Accord VIII CU** –  
replacement guide

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:  
 HONDA Accord VIII Saloon (CU) 2.0 i (CU1), HONDA Accord VIII Estate (CW) 2.0 i (CW1), HONDA Accord VIII Estate (CW) 2.4 i (CW2)

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – HONDA ACCORD VIII  
CU. LIST OF THE TOOLS YOU'LL NEED:

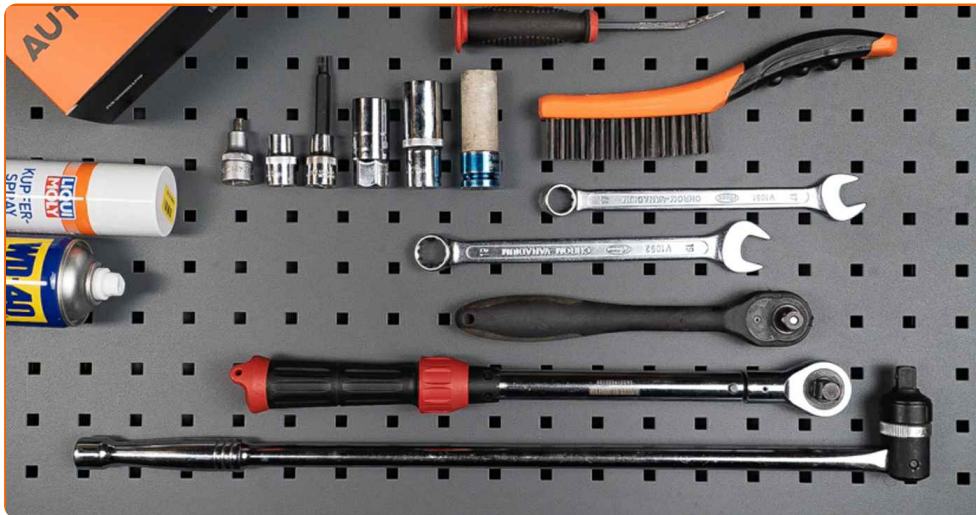

- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #14
- Combination spanner #17
- Drive socket # 12
- Drive socket # 14
- Drive socket # 17
- HEX bit No.H6
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Pin punch
- Tap wrench
- Hammer
- Flat chisel
- Rubber mallet
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

**BUY TOOLS**

Replacement: coil springs – Honda Accord VIII CU. Tip from AUTODOC:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – Honda Accord VIII CU – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

 
1

Open the bonnet.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




3

Clean the fasteners of the shock strut upper mount. Use WD-40 spray.



4

Loosen the upper fastener of the shock strut mount. Use a drive socket #14. Use a ratchet wrench.

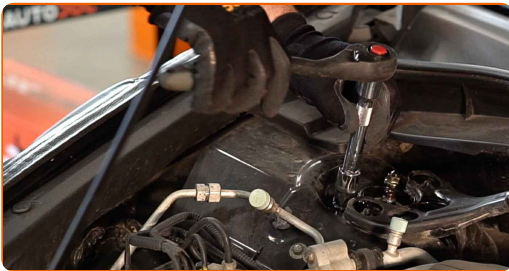


5

Secure the wheels with chocks.



6

Loosen the wheel mounting bolts. Use wheel impact socket #19.

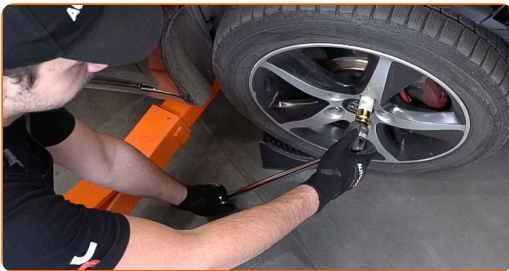

7

Raise the front of the car and secure on supports.



8

Unscrew the wheel bolts.




**AUTODOC recommends:**

 - Important! Hold the wheel while unscrewing the fastening bolts. Honda Accord VIII CU


9

Remove the wheel.



10

Clean the shock strut fasteners. Use a wire brush. Use WD-40 spray.

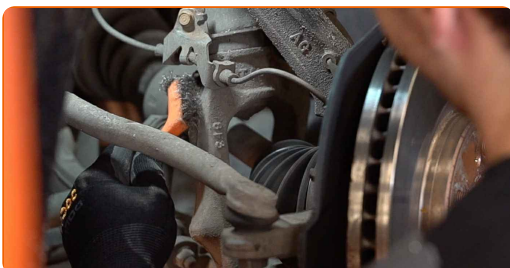



11

Unscrew the ABS cable holder. Use a drive socket #12. Use a ratchet wrench.




12

Unscrew the fastening bolt that connects the shock strut with the shock absorber fork. Use a drive socket #14. Use a tap wrench.




13

Undo the fastener that connects the shock strut with the shock absorber fork. Use a crowbar. Use a hammer.

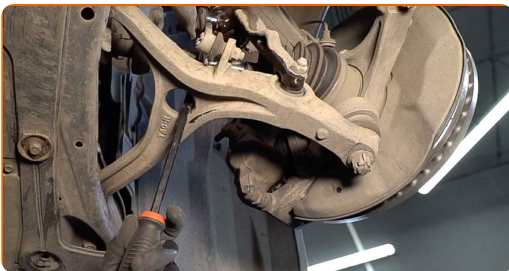

14

Pull aside the shock strut from its mounting seat.

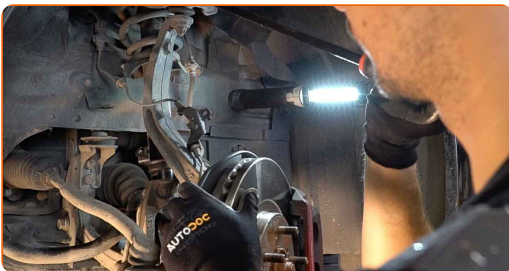


15

Clean the fastening bolt that connects the shock absorber fork with the lower control arm. Use a wire brush. Use WD-40 spray.




16

 Unscrew the fastening bolt that connects the shock absorber fork with the lower control arm. Use a combination spanner #17. Use a drive socket #17. Use a tap wrench.



17

 Remove the fastening bolt. Use a pin punch. Use a rubber mallet.



18

Detach the shock absorber fork from the shock strut. Use a flat metal-working chisel. Use a hammer.





19

Unscrew the top fastening of the shock strut mount. Use a drive socket #14. Use a ratchet wrench.




**AUTODOC recommends:**

 - Honda Accord VIII CU – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

20

Support the arm. Use a hydraulic transmission jack.




21

Disconnect the brake hose mounting bracket. Use a drive socket #12. Use a ratchet wrench.



22

 Remove the suspension strut.




**23** Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – Honda Accord VIII CU. Tip from AUTODOC:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

**24** Compress the spring.

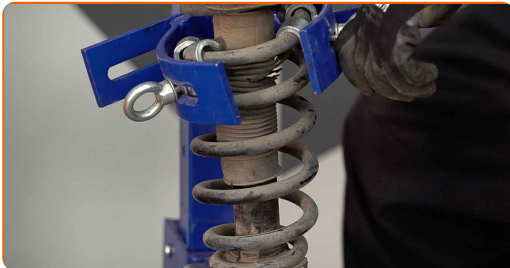


**25** Remove the strut piston rod nut. Use a combination spanner #14. Use HEX No.H6. Use a ratchet wrench.




26 Remove the top strut mount. Use a crowbar.



 27 Release the coil spring.




28 Remove the spring.

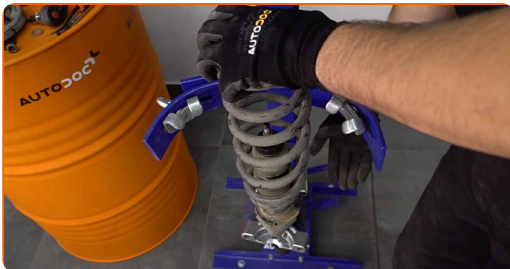

**AUTODOC recommends:**

- Replacement: coil springs – Honda Accord VIII CU. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

29 Install the spring on the shock absorber.

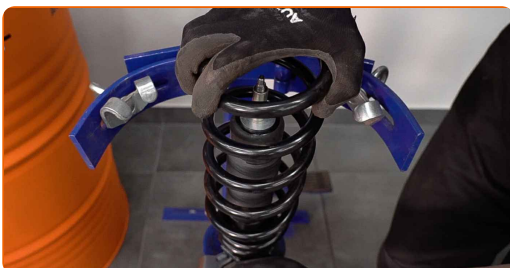

30 Compress the spring.



31 Treat the fasteners of the shock strut mount. Use WD-40 spray.



32 Install the upper strut mount and the strut mount bearing.



33 Tighten the shock strut piston rod nut. Use a combination spanner #17. Use HEX No.H6. Use a torque wrench. Tighten it to 29 Nm torque.



**AUTODOC recommends:**

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

 
34 Decompress the spring.




35 Remove the assembled shock strut.



36 Install the shock strut into the wheel arch.



 37 Screw the top fastening of the shock strut mount. Do not tighten it.




**AUTODOC recommends:**

- Honda Accord VIII CU – To avoid injury, hold the suspension strut while screwing in the fastening bolts.



38

 Remove the support from under the arm.



**AUTODOC recommends:**

- Replacement: coil springs – Honda Accord VIII CU. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 
39

Clean the mounting seats of the shock absorber fork. Use a wire brush. Use WD-40 spray.




40

Attach the shock absorber fork to the shock strut.



41

 
Install the fastening bolt. Use a rubber mallet.




42 Support the arm. Use a hydraulic transmission jack.



 43 Tighten the fastening bolt that connects the shock strut with the shock absorber fork. Use a drive socket #14. Use a torque wrench. Tighten it to 49 Nm torque.



44 Tighten the fastening bolt that connects the shock absorber fork to the lower control arm. Use a combination spanner #17. Use a drive socket #17. Use a torque wrench. Tighten it to 64 Nm torque.

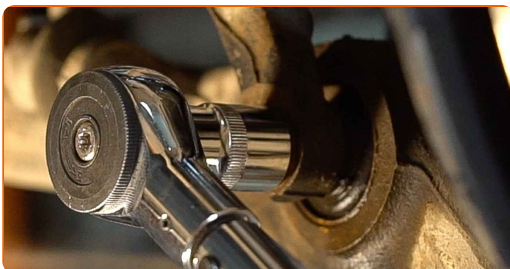


45 Secure the brake hose fastening bracket. Use a drive socket #12. Use a ratchet wrench.




46

 Tighten the ABS cable holder. Use a drive socket #12. Use a ratchet wrench.



47

 Remove the support from under the arm.




**AUTODOC recommends:**

- Honda Accord VIII CU – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


48

 Treat the shock strut fasteners. Use copper grease.



49

 Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



50

Install the wheel.



**AUTODOC recommends:**

 
- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Honda Accord VIII CU

51


Screw in the wheel bolts. Use wheel impact socket #19.




- 52** Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #14. Use a torque wrench. Tighten it to 22 Nm torque.



 
- 53** Treat the fasteners of the shock strut mount. Use copper grease.



 - 54** Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 108 Nm torque.



- 55** Remove the fender protection cover.

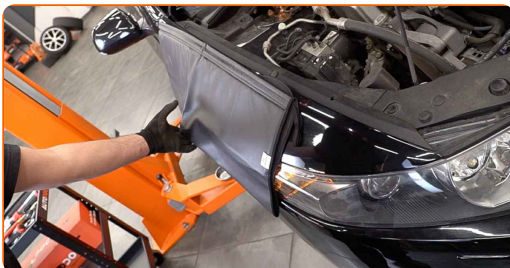




56

Close the hood.



57

 Remove the jacks and chocks.



**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

**AUTODOC+**

GET IT ON  
Google Play

Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR HONDA**

**COIL SPRINGS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR HONDA ACCORD VIII CU**

**COIL SPRINGS FOR HONDA: BUY NOW**

**COIL SPRINGS FOR HONDA ACCORD VIII CU: THE BEST  
DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.