# - AUTODOC CLUB

How to change front anti roll bar links on **Audi 80 B4** – replacement guide



### **VIDEO TUTORIAL**



(i) Important!


This replacement procedure can be used for:

AUDI 80 B3 (89, 89Q, 8A) 1.6, AUDI 80 B3 (89, 89Q, 8A) 1.8, AUDI 80 B3 (89, 89Q, 8A) 1.8 S, AUDI 80 B3 (89, 89Q, 8A) 1.8 E, AUDI 80 B3 (89, 89Q, 8A) 2.0 E, AUDI 80 B3 (89, 89Q, 8A) 1.6 D, AUDI 80 B3 (89, 89Q, 8A) 1.6 TD, AUDI 80 B3 (89, 89Q, 8A) 1.9 D, AUDI 80 B3 (89, 89Q, 8A) 1.8 S quattro, AUDI 80 B3 (89, 89Q, 8A) 1.8 quattro, AUDI 80 B3 (89, 89Q, 8A) 2.0 E quattro, AUDI 80 B3 (89, 89Q, 8A) 2.0 quattro, AUDI 80 B3 (89, 89Q, 8A) 2.0 quattro, AUDI 80 B3 (89, 89Q, 8A) 2.0 E 16V quattro, AUDI COUPE (89, 8B) 2.3, AUDI COUPE (89, 8B) 2.0, (+ 67)

The steps may slightly vary depending on the car design.



#### REPLACEMENT: ANTI ROLL BAR LINKS – AUDI 80 B4. TOOLS YOU MIGHT NEED:

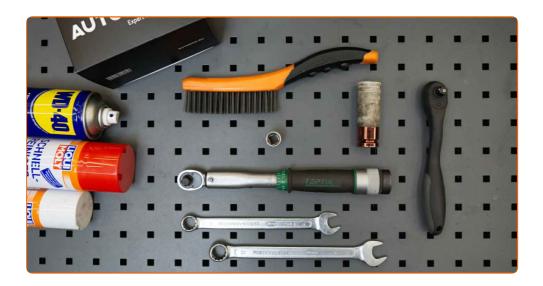

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- High-temperature ceramic grease
- Torque wrench

- Combination spanner #16
- Combination spanner #17
- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Wheel chock

**BUY TOOLS** 



#### Replacement: anti roll bar links – Audi 80 B4. AUTODOC recommends:

- Replace the stabiliser links on Audi 80 B4 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car Audi 80 B4 should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.







Unscrew the wheel bolts.



#### AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. Audi 80 B4


5

Remove the wheel.



6

Clean all joints of the stabiliser link. Use a wire brush. Use WD-40 spray.

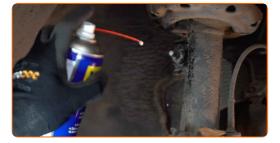



7

Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #16. Use a drive socket #17. Use a ratchet wrench.



8

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a combination spanner #17.



9

Remove the stabilizer rod.



#### Replacement: anti roll bar links - Audi 80 B4. AUTODOC experts recommend:

• Examine the stabiliser bushes. Replace them if necessary.



10

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



11

Install a new stabiliser link and tighten the fasteners.



12

Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a combination spanner #17. Use a torque wrench. Tighten it to 40 Nm torque.



13

Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 40 Nm torque.



# + AUTODOC CLUB



14

Treat all joints of the stabiliser link. Use copper grease.



15

Treat the surface where the brake disc contacts the wheel rim. Use high-temperature ceramic grease.



16

Clean the brake disk surface. Use a brake cleaner.



#### AUTODOC recommends:

• Replacement: anti roll bar links – Audi 80 B4. After applying the spray, wait a few minutes.

17

Install the wheel.





- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Audi 80 B4
- 18

Screw in the wheel bolts. Use wheel impact socket #17.



19

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



20

Remove the jacks and chocks.






**VIEW MORE TUTORIALS** 

႐ြံ



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

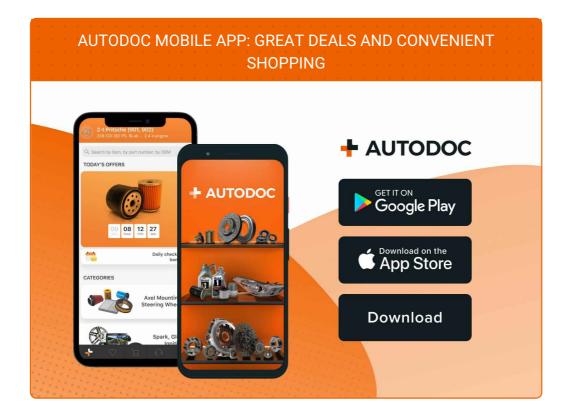

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **BUY SPARE PARTS FOR AUDI**

**ANTI ROLL BAR LINKS: A WIDE SELECTION** 



#### **CHOOSE CAR PARTS FOR AUDI 80 B4**

#### ANTI ROLL BAR LINKS FOR AUDI: BUY NOW

# ANTI ROLL BAR LINKS FOR AUDI 80 B4: THE BEST DEALS & OFFERS

# (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.