



How to change rear
wheel bearing on **Audi**
A3 8PA – replacement
guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A3 Hatchback (8P1) 1.6 E-Power, AUDI A3 Sportback (8PA) 1.6 E-Power, AUDI A3 Convertible (8P7) 1.4 TFSI, AUDI A3 Hatchback (8P1) 2.0 FSI, AUDI A3 Hatchback (8P1) 1.6, AUDI A3 Hatchback (8P1) 2.0 TDI 16V, AUDI A3 Hatchback (8P1) 1.9 TDI, AUDI A3 Hatchback (8P1) 2.0 TDI, AUDI A3 Hatchback (8P1) 1.6 FSI, AUDI A3 Sportback (8PA) 1.6, AUDI A3 Sportback (8PA) 1.9 TDI, AUDI A3 Sportback (8PA) 1.6 FSI, AUDI A3 Sportback (8PA) 2.0 FSI, AUDI A3 Sportback (8PA) 2.0 TDI 16V, AUDI A3 Sportback (8PA) 2.0 TFSI, (+ 22)

The steps may slightly vary depending on the car design.

REPLACEMENT: WHEEL BEARING – AUDI A3 8PA. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Copper grease
- Combination spanner #13
- Combination spanner #15
- XZN socket bit # 14
- XZN socket bit # 16
- Torx bit T30
- Drive socket # 13
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Rubber mallet
- Crow bar
- Wheel chock

[BUY TOOLS](#)

Replacement: wheel bearing – Audi A3 8PA. Professionals recommend:

- Do not re-use the bearing assembly of your Audi A3 8PA car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- Warning! Shut down the engine before starting any work – Audi A3 8PA.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.




2

Loosen the wheel mounting bolts. Use wheel impact socket #17.




3

Raise the rear of the car and secure on supports.

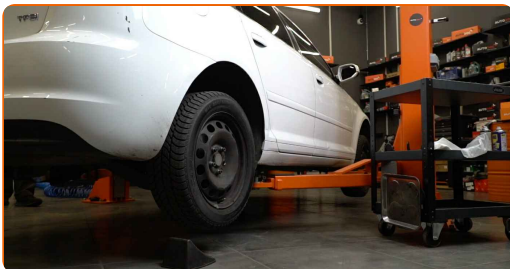

4

 Unscrew the wheel bolts.

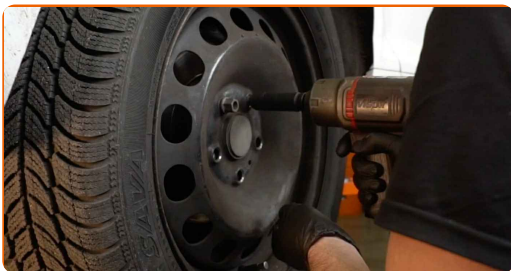

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Audi A3 8PA

 
5

Remove the wheel.



6

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

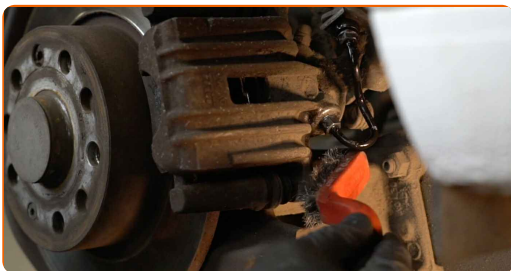

7

Unscrew the brake caliper fastening. Use a combination spanner #13. Use a combination spanner #15.



8

Spread the brake pads. Use a crowbar.



9

Remove the brake caliper. Use a crowbar.



 
Replacement: wheel bearing – Audi A3 8PA. AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


10 Remove the brake pads.




11 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

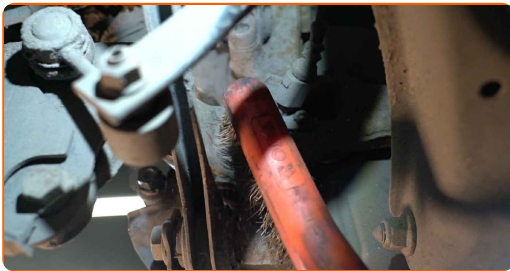

 12 Unscrew the caliper bracket fastening. Use XZN #14. Use a tap wrench. Use a ratchet wrench.

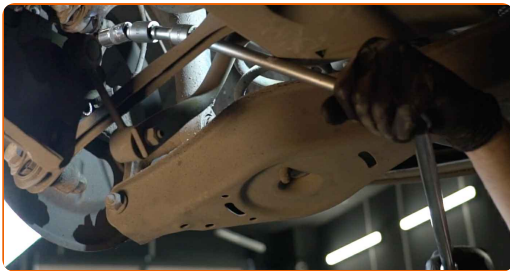


13 Remove the caliper bracket.

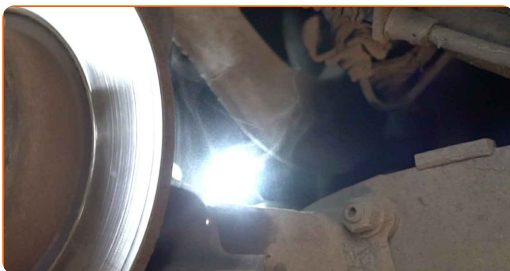 


14

 Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.

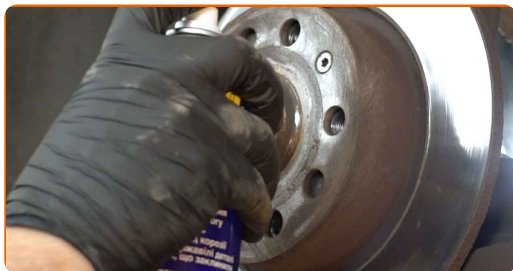


15

 Unscrew the brake disc fastening. Use Torx T30. Use a ratchet wrench.

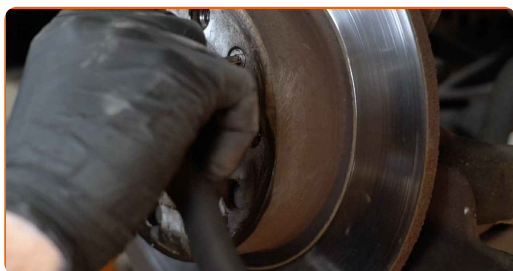

16

 Remove the brake disc.

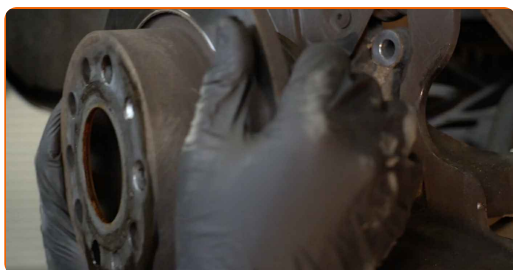

17

Remove the hub bearing protection cap. Use a crowbar. Use a rubber mallet.



Replacement: wheel bearing – Audi A3 8PA. AUTODOC experts recommend:

- Some cars are not equipped with wheel hub caps.

18 Unscrew the wheel hub axle nut. Use XZN #16. Use a tap wrench.



 
19 Remove the fastening bolt.



20 Remove the hub and the bearing together, since they are a sealed unit.



21 Clean the hub bearing mounting seat. Use all-purpose cleaning spray.

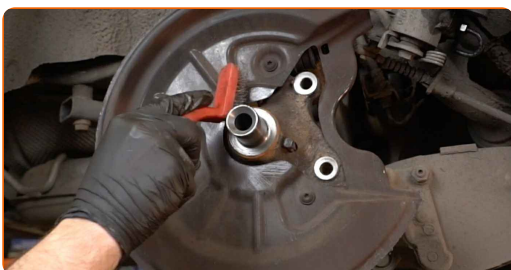

22 Install the new wheel hub with a bearing.



23

Install the fastening bolt.



24

Tighten the hub. Use XZN #16. Use a torque wrench. Tighten it to 180 Nm torque.+180°

 


Replacement: wheel bearing – Audi A3 8PA. Tip:

- Important! Be sure to use new fasteners.
- The wheel bearing unit must not tilt on the axle pin.


25

Install the hub bearing protection cap. Use a rubber mallet.

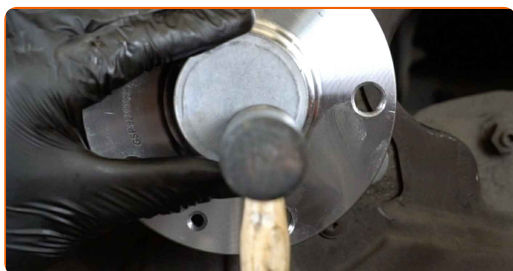


26

 Treat the hub where it contacts the brake disk. Use copper grease.

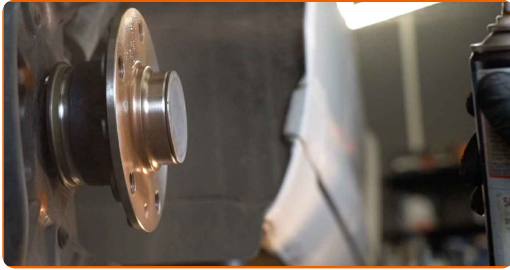

27

 Install the brake disc.

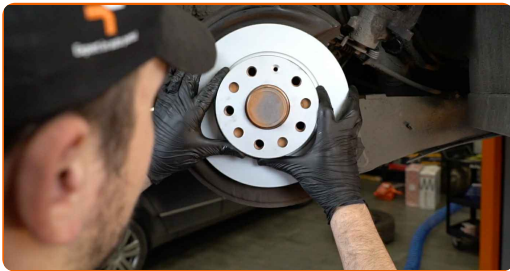

28

Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 4 nm torque.



29

Install the brake caliper bracket.



30

Tighten the brake caliper bracket. Use XZN #14. Use a torque wrench. Tighten it to 90 Nm torque.+90°

 


AUTODOC recommends:

- Important! Be sure to use new fasteners.

31

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

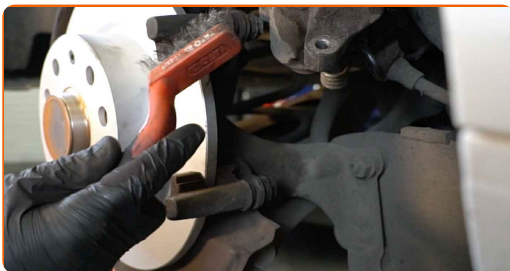

AUTODOC recommends:

- Replacement: wheel bearing – Audi A3 8PA. After applying the spray, wait a few minutes.

32

Install the brake pads.




- 33 Install the brake caliper and fix it. Use a combination spanner #13. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.



- 34 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




- 35 Clean the brake disk surface. Use a brake cleaner.

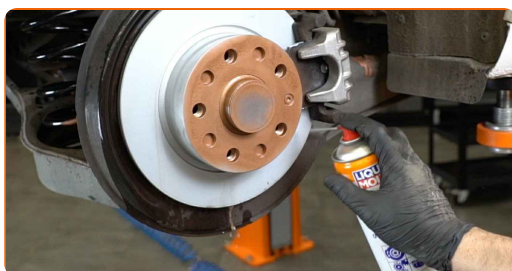

Replacement: wheel bearing – Audi A3 8PA. Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

- 36 Install the wheel.

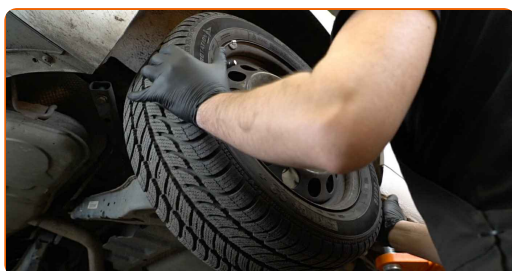

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Audi A3 8PA

37

Screw in the wheel bolts. Use wheel impact socket #17.




38

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



39

Remove the jacks and chocks.

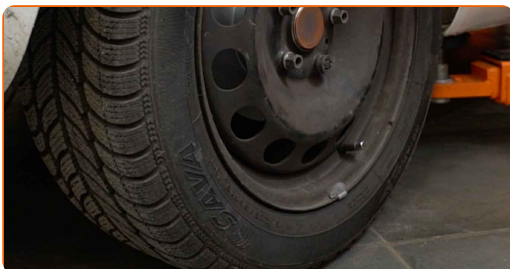

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

WHEEL BEARING: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A3 8PA

WHEEL BEARING FOR AUDI: BUY NOW

WHEEL BEARING FOR AUDI A3 8PA: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.