

How to change air filter on **Audi A4 B5 Avant** – replacement guide





VIDEO TUTORIAL



(i) Important!


This replacement procedure can be used for:

AUDI A4 B5 Saloon (8D2) 1.6, AUDI A4 B5 Saloon (8D2) 1.8, AUDI A4 B5 Saloon (8D2) 1.8 T, AUDI A4 B5 Saloon (8D2) 2.6, AUDI A4 B5 Saloon (8D2) 2.8, AUDI A4 B5 Saloon (8D2) 1.9 TDI, AUDI A4 B5 Saloon (8D2) 1.8 quattro, AUDI A4 B5 Saloon (8D2) 1.8 T quattro, AUDI A4 B5 Saloon (8D2) 2.6 quattro, AUDI A4 B5 Saloon (8D2) 2.8 quattro, AUDI A4 B5 Saloon (8D2) 2.8 quattro, AUDI A4 B5 Avant (8D5) 1.6, AUDI A4 B5 Avant (8D5) 1.8, AUDI A4 B5 Avant (8D5) 2.8, AUDI A4 B5 Avant (8D5) 1.9 TDI, (+ 52)

The steps may slightly vary depending on the car design.





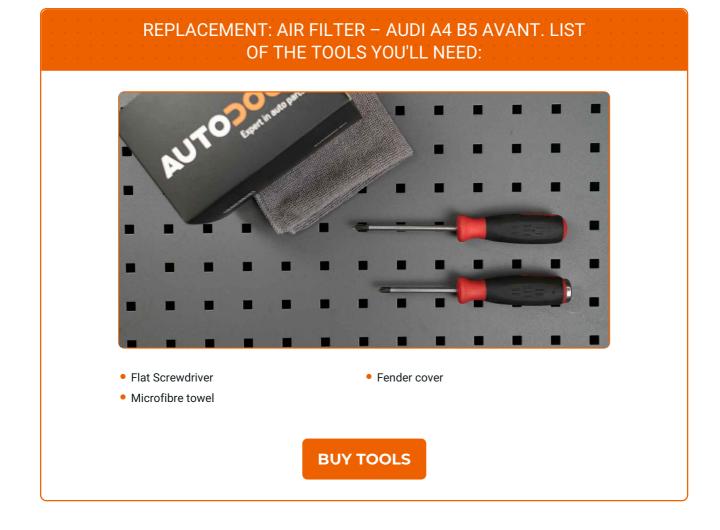





Replacement: air filter – Audi A4 B5 Avant. AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car Audi A4 B5 Avant should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the hood.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Detach the air duct housing from the air filter housing.



4

Disconnect the wiring from the mass air flow sensor.







Release the air filter cover clips. Use a flat screwdriver.



6

Detach the air intake hose clamp. Use a flat screwdriver.



7

Remove the air intake pipe. Use a flat screwdriver.



8

Slightly raise the cover of the air filter housing.



9

Remove the filter element from the filter housing.







Clean the air filter cover and housing.

Replacement: air filter - Audi A4 B5 Avant. Tip from AUTODOC experts:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.
- 11

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – Audi A4 B5 Avant. Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.





Reinstall the air filter cover. Fasten it.



13

Press the air filter cover clips into place. Use a flat screwdriver.



14

Install the air intake pipe and secure it.

15

Connect the wiring to the mass air flow sensor.



16

Fasten the clamp on the air intake hose. Use a flat screwdriver.







Install the air duct housing.



18

Remove the fender protection cover.



Close the hood.






VIEW MORE TUTORIALS





AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

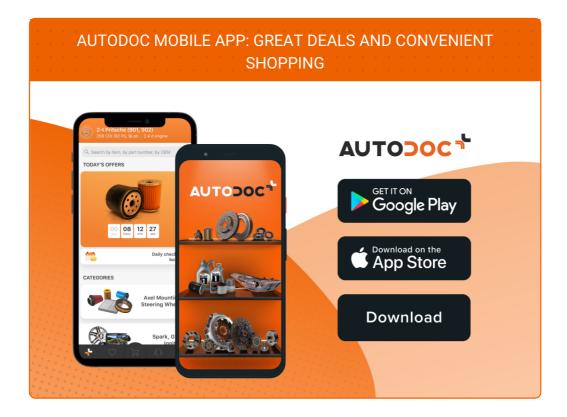

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

AIR FILTER: A WIDE SELECTION





AIR FILTER FOR AUDI: BUY NOW

AIR FILTER FOR AUDI A4 B5 AVANT: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

C)