



How to change rear
brake discs on **Audi A4
B5 Avant** – replacement
guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.8, AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 2.6, AUDI A4 Saloon (8D2, B5) 2.8, AUDI A4 Saloon (8D2, B5) 1.8 quattro, AUDI A4 Saloon (8D2, B5) 1.8 T quattro, AUDI A4 Saloon (8D2, B5) 2.6 quattro, AUDI A4 Saloon (8D2, B5) 2.8 quattro, AUDI A4 Saloon (8D2, B5) 1.9 TDI, AUDI A4 Avant (8D5, B5) 1.8, AUDI A4 Avant (8D5, B5) 2.6, AUDI A4 Avant (8D5, B5) 1.9 TDI, AUDI A4 Avant (8D5, B5) 1.8 quattro, AUDI A4 Avant (8D5, B5) 1.8 T quattro, AUDI A4 Avant (8D5, B5) 2.6 quattro, (+ 16)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE DISCS – AUDI A4 B5 AVANT. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #13
- Combination spanner #15
- Drive socket # 17
- Wheel impact socket #17
- Brake caliper wind back tool
- Ratchet wrench
- Tap wrench
- Torque wrench
- Crow bar
- Wheel chock

[BUY TOOLS](#)

Replacement: brake discs – Audi A4 B5 Avant. Tip from AUTODOC experts:

- Replace the brake disks on the car Audi A4 B5 Avant in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – Audi A4 B5 Avant – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

 
1

Open the bonnet. Unscrew the brake fluid reservoir cap.



2

Secure the wheels with chocks.



3

Loosen the wheel mounting bolts. Use wheel impact socket #17.



4

Raise the rear of the car and secure on supports.



5

Unscrew the wheel bolts.



Replacement: brake discs – Audi A4 B5 Avant. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6

Remove the wheel.



7 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

8 Unscrew the brake caliper fastening. Use a combination spanner #13. Use a combination spanner #15.



9 Spread the brake pads. Use a crowbar.



10 Remove the brake caliper. Use a crowbar.



Replacement: brake discs – Audi A4 B5 Avant. AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

11

Remove the brake pads.

 


12

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

13

Unscrew the caliper bracket fastening. Use a drive socket #17. Use a ratchet wrench. Use a tap wrench.




14 Remove the caliper bracket.


15 Remove the brake disc.




16 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.

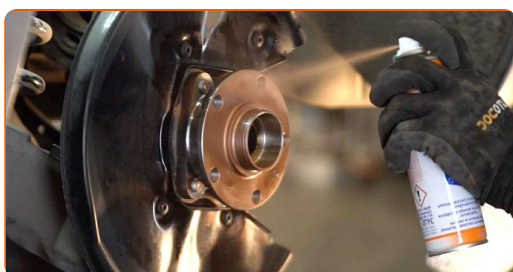

17 Install the brake disc.

 

 18 Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

 
- Replacement: brake discs – Audi A4 B5 Avant. After applying the spray, wait a few minutes.

19

Install the brake caliper bracket.

20

Tighten the brake caliper bracket. Use a drive socket #17. Use a torque wrench. Tighten it to 95 Nm torque.



21

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

 


Replacement: brake discs – Audi A4 B5 Avant. Tip from AUTODOC:

- After applying the spray, wait a few minutes.


22

Press in the brake caliper piston. Use brake caliper wind back tool.




23

 Install the brake pads.




24.1

 Install the brake caliper and fix it.




24.2

 Use a combination spanner #13. Use a combination spanner #15. Use a torque wrench. Tighten it to 35 Nm torque.



25

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

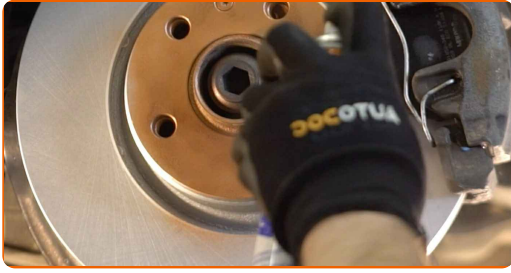

26

Clean the wheel rim mounting seat. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs – Audi A4 B5 Avant. After applying the spray, wait a few minutes.

27

Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Audi A4 B5 Avant


28

Screw in the wheel bolts. Use wheel impact socket #17.




29

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.

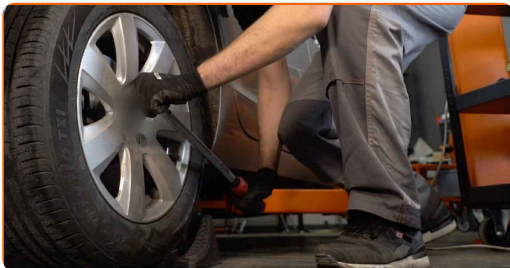

30

Remove the jacks and chocks.

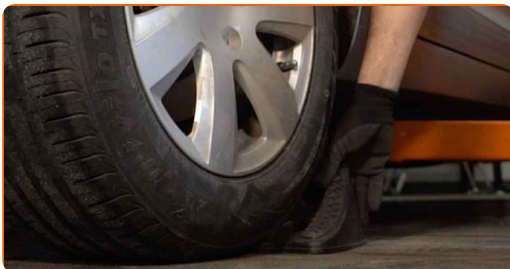


Replacement: brake discs – Audi A4 B5 Avant. AUTODOC experts recommend:

- Check the brake fluid level in the expansion tank and refill if necessary.

31

 Tighten the brake fluid reservoir cap.



AUTODOC recommends:

- Audi A4 B5 Avant – Without starting the engine, press the brake pedal several times until it feels firm.

32

Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

BRAKE DISCS: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B5 AVANT

BRAKE DISCS FOR AUDI: BUY NOW

BRAKE DISCS FOR AUDI A4 B5 AVANT: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.