



How to change spark
plugs on **Audi A4 B5**
Avant – replacement
guide

VIDEO TUTORIAL




Important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.6, AUDI A4 Saloon (8D2, B5) 1.8, AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 1.8 quattro, AUDI A4 Avant (8D5, B5) 1.6, AUDI A4 Avant (8D5, B5) 1.8, AUDI A4 Avant (8D5, B5) 1.8 quattro, AUDI A6 Saloon (4A2, C4) 1.8, AUDI A6 Avant (4A5, C4) 1.8, AUDI A6 Saloon (4A2, C4) 1.8 quattro, AUDI A6 Avant (4A5, C4) 1.8 quattro, AUDI A3 Hatchback (8L1) 1.6, AUDI A3 Hatchback (8L1) 1.8, AUDI A3 Hatchback (8L1) 1.8 T, AUDI A3 Hatchback (8P1) 1.6 E-Power, (+ 20)

The steps may slightly vary depending on the car design.

**REPLACEMENT: SPARK PLUGS – AUDI A4 B5 AVANT.
TOOLS YOU NEED:**

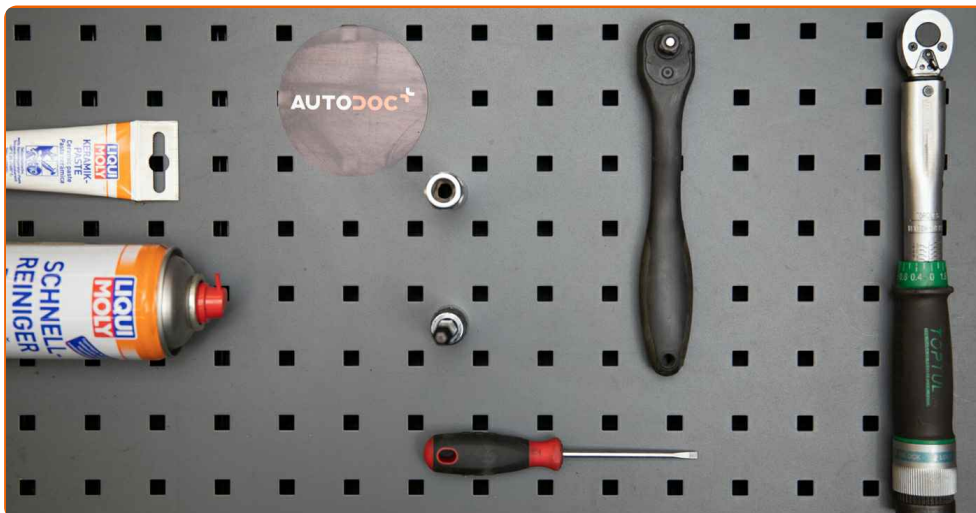

- High-temperature anti-seize lubricant
- Spark plug socket # 16
- HEX bit no.H5.
- Ratchet wrench
- Torque wrench
- Flat Screwdriver
- Fender cover


BUY TOOLS

Replacement: spark plugs – Audi A4 B5 Avant. AUTODOC recommends:

- The replacement procedure is the same for all spark plugs.
- Warning! Shut down the engine before starting any work – Audi A4 B5 Avant.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the hood.

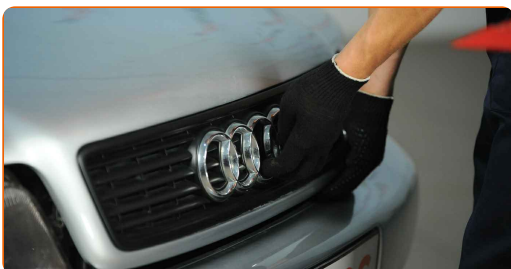

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Remove the engine cover clips. Use a flat screwdriver.

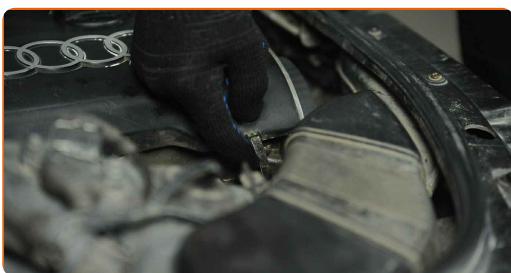

4 Remove the engine cover.



Replacement: spark plugs – Audi A4 B5 Avant. Tip:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

5

Unplug the connectors from the ignition coils. Use a flat screwdriver.



 
6

Unscrew the fasteners of the ignition coils. Use HEX No.H5. Use a ratchet wrench.



7

Take out the ignition coils from the spark plug wells.




Replacement: spark plugs – Audi A4 B5 Avant. AUTODOC experts recommend:

- Remember the sequence of steps for ignition coil demounting.

8 Clean dirt, dust and debris from inside the spark plug wells.

9 Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.

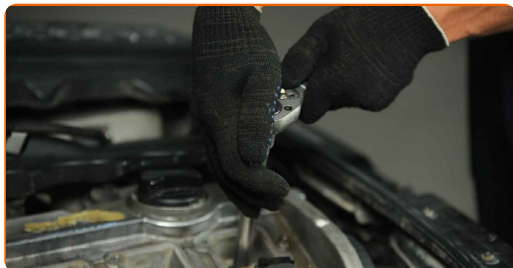

10 Take out the spark plugs. Use the spark plug socket #16.



11 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



12 Install the new spark plugs into their mounting seats. Use the spark plug socket #16.



13

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.



Replacement: spark plugs – Audi A4 B5 Avant. Tip from AUTODOC:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

14

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.



AUTODOC recommends:

- Replacement: spark plugs – Audi A4 B5 Avant. Follow the installation steps.

15

Plug in the connectors of the ignition coils.



 
16

Tighten the fasteners of the ignition coils. Use HEX No.H5. Use a torque wrench. Tighten it to 12 Nm torque.



17


Install the engine cover and secure it.



Replacement: spark plugs – Audi A4 B5 Avant. Tip from AUTODOC experts:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

18 Reinstall the engine cover clips.

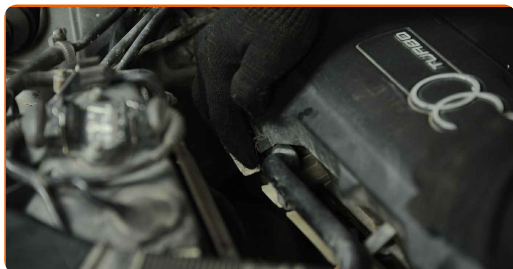

19 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



20 Shut off the engine.

21 Remove the fender protection cover.

22 Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

SPARK PLUGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B5 AVANT

SPARK PLUGS FOR AUDI: BUY NOW

SPARK PLUGS FOR AUDI A4 B5 AVANT: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.