- AUTODOC CLUB

How to change track rod end on **Audi A4 B5 Avant** – replacement guide



VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

AUDI A8 (4D2, 4D8) 4.2 quattro, AUDI A8 (4D2, 4D8) 2.8, AUDI A8 (4D2, 4D8) 2.8 quattro, AUDI A4 Saloon (8D2, B5) 1.6, AUDI A4 Saloon (8D2, B5) 1.8, AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 2.6, AUDI A4 Saloon (8D2, B5) 2.8, AUDI A4 Saloon (8D2, B5) 1.9 TDI, AUDI A4 Saloon (8D2, B5) 1.8 quattro, AUDI A4 Saloon (8D2, B5) 1.8 T quattro, AUDI A4 Saloon (8D2, B5) 2.6 quattro, AUDI A8 (4D2, 4D8) 3.7, AUDI A8 (4D2, 4D8) 3.7 quattro, AUDI A4 Avant (8D5, B5) 1.6, (+ 186)

The steps may slightly vary depending on the car design.



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #18
- Combination spanner #22
- Drive socket # 13
- Drive socket # 16

• Wheel impact socket #17

-

O

- Ratchet wrench
- Torque wrench
- Vernier caliper
- Hammer
- Flat chisel
- Wheel chock

BUY TOOLS

+ AUTODOC CLUB



Replacement: track rod end – Audi A4 B5 Avant. AUTODOC experts recommend:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- Please note: all work on the car Audi A4 B5 Avant should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.







Unscrew the wheel bolts.



AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. Audi A4 B5 Avant



Remove the wheel.



6

When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.





7

Clean the lock nut that connects the tie rod to the tie rod end. Use a wire brush. Use WD-40 spray.




8

Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #18. Use a combination spanner #22.



9

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.

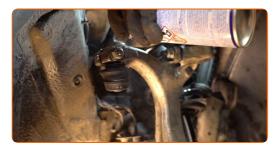

10

Unscrew the end fastening nut to the steering knuckle. Use a drive socket #13. Use a drive socket #16. Use a ratchet wrench.



+ AUTODOC CLUB



11

Remove the fastening bolt.



12

Disconnect the tie rod end from the steering knuckle. Use a flat metal-working chisel. Use a hammer.



13

Screw the end out of the tie rod.



14

Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.







Screw on a new tie rod end.



Replacement: track rod end – Audi A4 B5 Avant. Professionals recommend:

• While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.

16

Connect the tie rod end to the steering knuckle. Use a rubber mallet.



Install the fastening bolt.



18

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #13. Use a torque wrench. Tighten it to 7 nm torque.





19

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #16. Use a torque wrench. Tighten it to 50 nm torque.



20

Tighten the tie rod end locknut. Use a combination spanner #18. Use a combination spanner #22. Use a torque wrench. Tighten it to 40 nm torque.



21

Treat all tie rod end connections. Use copper grease.



22

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.







Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: track rod end – Audi A4 B5 Avant. After applying the spray, wait a few minutes.



Install the wheel.



Replacement: track rod end – Audi A4 B5 Avant. AUTODOC experts recommend:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.



Screw in the wheel bolts. Use wheel impact socket #17.





26

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



Replacement: track rod end – Audi A4 B5 Avant. Tip:

• Check and adjust wheel alignment if necessary.



Remove the jacks and chocks.





VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

TRACK ROD END: A WIDE SELECTION



CHOOSE CAR PARTS FOR AUDI A4 B5 AVANT

TRACK ROD END FOR AUDI: BUY NOW

TRACK ROD END FOR AUDI A4 B5 AVANT: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.