



How to change front
lower arm on **Audi A4 B5**
saloon – replacement
guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A8 (4D2, 4D8) 4.2 quattro, AUDI A8 (4D2, 4D8) 2.8, AUDI A8 (4D2, 4D8) 2.8 quattro, AUDI A4 Saloon (8D2, B5) 1.8, AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 2.6, AUDI A4 Saloon (8D2, B5) 2.8, AUDI A4 Saloon (8D2, B5) 1.9 TDI, AUDI A4 Saloon (8D2, B5) 1.8 quattro, AUDI A4 Saloon (8D2, B5) 1.8 T quattro, AUDI A4 Saloon (8D2, B5) 2.6 quattro, AUDI A4 Saloon (8D2, B5) 2.8 quattro, AUDI A8 (4D2, 4D8) 3.7, AUDI A8 (4D2, 4D8) 3.7 quattro, AUDI A4 Avant (8D5, B5) 1.6, (+ 118)

The steps may slightly vary depending on the car design.

REPLACEMENT: FRONT LOWER ARM – AUDI A4 B5 SALOON. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #18
- Drive socket # 18
- Wheel impact socket #17
- Tap wrench
- Ball joint puller
- Hydraulic transmission jack
- Crow bar
- Wheel chock

BUY TOOLS

Replacement: front lower arm – Audi A4 B5 saloon. AUTODOC experts recommend:

- The replacement procedure is identical for the left and right lower control arms.
- Please note: all work on the car – Audi A4 B5 saloon – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Secure the wheels with chocks.


2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Raise the front of the car and secure on supports.



4 Unscrew the wheel bolts.

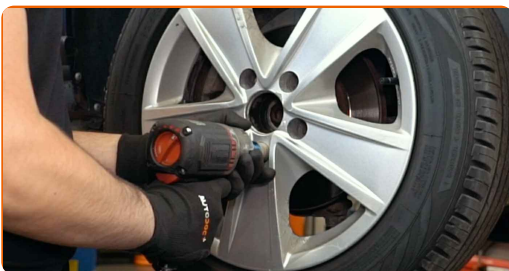

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Audi A4 B5 saloon

5

Remove the wheel.



6


Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

AUTODOC recommends:

- Replacement: front lower arm – Audi A4 B5 saloon. After applying the spray, wait a few minutes.
- Wear protective goggles.
- Wear a respirator.


7

Unscrew the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18. Use a tap wrench.

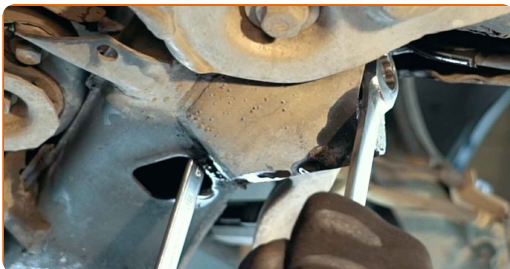

8

 Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #18.




9

Prop up the steering knuckle. Use a hydraulic transmission jack.


10

Disconnect the ball joint from the steering knuckle. Use a ball joint puller. Use a crowbar.

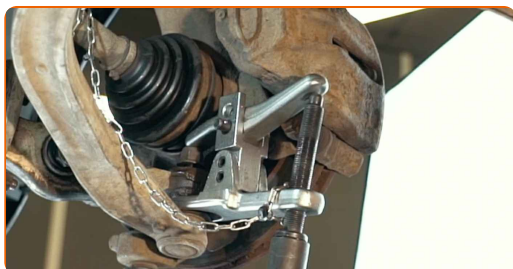


11

 Remove the fuel line clips.




12


Disconnect the fuel lines.

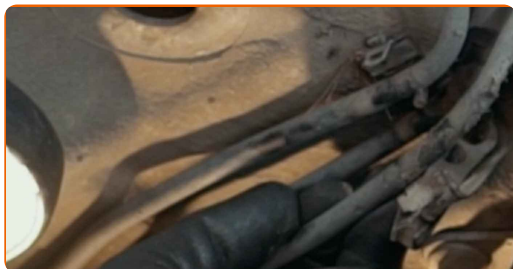

13 Remove the fastening bolt.

 

14 Remove the arm.

 


15 Remove the support from under the steering knuckle.

AUTODOC recommends:


- Replacement: front lower arm – Audi A4 B5 saloon. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

16 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.

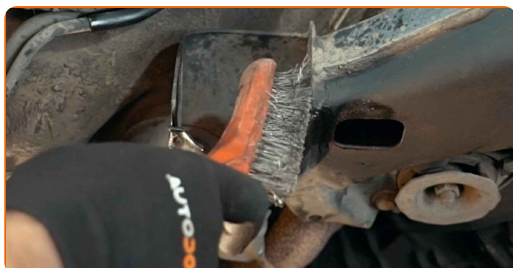

17

 Install a new arm.




Replacement: front lower arm – Audi A4 B5 saloon. AUTODOC recommends:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.


18

 Install the fastening bolt.




19

 
Connect the fuel lines.




20 Install the fuel line clips.

 

 
21 Connect the ball joint to the steering knuckle.



 22 Screw the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #18.



 
23 Support the arm. Use a hydraulic transmission jack.



24 Screw the fastener connecting the control arm to the subframe. Use a combination spanner #18.




- 25 Tighten the rear fastener of the control arm. Use a combination spanner #18. Use a torque wrench. Tighten it to 90 Nm torque. +90°

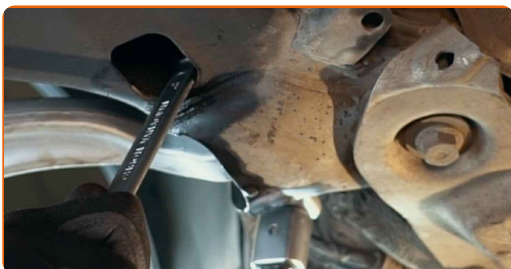


AUTODOC recommends:

- Important! Be sure to use new fasteners.

- 26 Tighten the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #18. Use a torque wrench. Tighten it to 100 Nm torque.

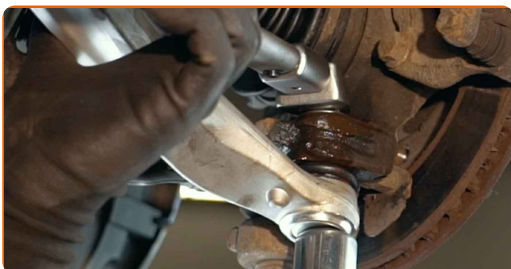

- 27 Remove the support from under the arm.

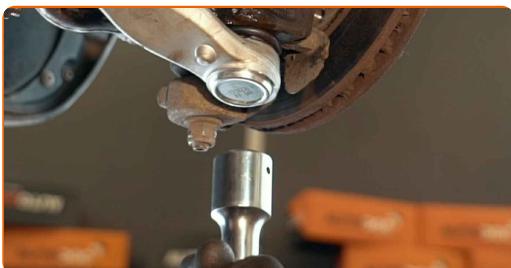

AUTODOC recommends:

- Replacement: front lower arm – Audi A4 B5 saloon. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

28

Treat all joints of the arm. Use copper grease.



 
29

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



30

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: front lower arm – Audi A4 B5 saloon. After applying the spray, wait a few minutes.

31

Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Audi A4 B5 saloon

32

Screw in the wheel bolts. Use wheel impact socket #17.



 
33

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



34

Remove the jacks and chocks.

**WELL DONE!** **VIEW MORE TUTORIALS**

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

CONTROL ARM: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B5 SALOON

CONTROL ARM FOR AUDI: BUY NOW

**CONTROL ARM FOR AUDI A4 B5 SALOON: THE BEST DEALS
& OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.