



How to change air filter
on **Audi A4 B7** –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.6, AUDI A4 Avant (8D5, B5) 1.6, AUDI A4 Saloon (8E2, B6) 1.8 T, AUDI A4 Saloon (8E2, B6) 2.0, AUDI A4 Saloon (8E2, B6) 1.8 T quattro, AUDI A4 Saloon (8E2, B6) 3.0, AUDI A4 Saloon (8E2, B6) 3.0 quattro, AUDI A4 Saloon (8E2, B6) 1.9 TDI, AUDI A4 Saloon (8E2, B6) 2.5 TDI quattro, AUDI A4 Saloon (8E2, B6) 1.6, AUDI A4 Saloon (8E2, B6) 2.5 TDI, AUDI A4 Avant (8E5, B6) 1.6, AUDI A4 Avant (8E5, B6) 2.0, AUDI A4 Avant (8E5, B6) 1.8 T, AUDI A4 Avant (8E5, B6) 3.0, (+ 62)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – AUDI A4 B7. TOOLS YOU MIGHT NEED:



- Electronic spray
- Phillips screwdriver
- Clic-R collar pliers
- Microfibre towel
- Fender cover

BUY TOOLS

Replacement: air filter – Audi A4 B7. AUTODOC experts recommend:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – Audi A4 B7 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.




2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

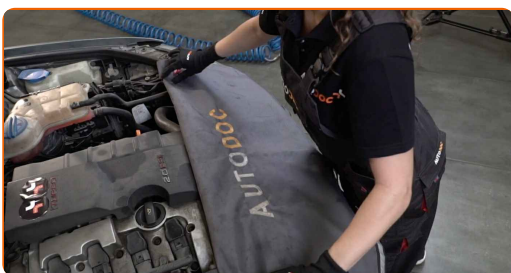

3 Unscrew the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.

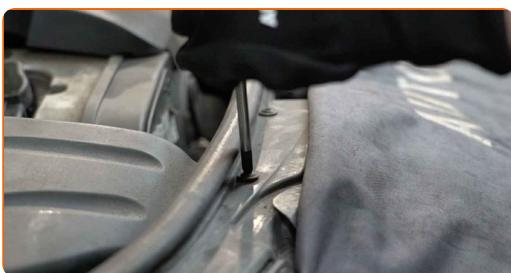

 4 Remove the air distribution housing assembly.




5 Unplug the mass air flow sensor connector.




6 Detach the air intake hose clamp. Use clic-R collar pliers.



 
7 Disconnect the air intake pipe from the air filter housing.



 8 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



 
9 Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.




10 Slightly raise the cover of the air filter housing.



 11 Remove the filter element from the filter housing.



 12 Clean the air filter cover and housing.



Replacement: air filter – Audi A4 B7. AUTODOC recommends:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

13

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: air filter – Audi A4 B7. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

14

 
Reinstall the air filter cover. Fasten it.




Replacement: air filter – Audi A4 B7. Tip from AUTODOC experts:

- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.


15 Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



 
16 Remove the microfibre towel from the air intake hose.



 17 Connect the air intake pipe to the air filter housing.



 18 Fasten the clamp on the air intake hose. Use clic-R collar pliers.



19 Treat the mass air flow sensor connector. Use dielectric grease.



 
20 Plug in the mass air flow sensor connector.




21 Reinstall the air distribution housing assembly.



22 Screw in the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.




23 Remove the fender protection cover.

 

24

 Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B7

AIR FILTER FOR AUDI: BUY NOW

AIR FILTER FOR AUDI A4 B7: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.