



How to change engine oil
and filter on **Audi A4 B7**
– replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A3 Sportback (8PA) RS3 quattro, AUDI TT Coupe (8J3) 2.5 RS quattro, AUDI TT Roadster (8J9) 2.5 RS quattro, AUDI A3 Hatchback (8P1) 2.0 FSI, AUDI A3 Sportback (8PA) 2.0 FSI, AUDI A3 Sportback (8PA) 2.0 TFSI, AUDI A3 Sportback (8PA) 2.0 TFSI quattro, AUDI A3 Hatchback (8P1) 2.0 TFSI, AUDI A3 Hatchback (8P1) 2.0 TFSI quattro, AUDI A4 B7 Saloon (8EC) 2.0 TFSI quattro, AUDI A4 B7 Avant (8ED) 2.0 TFSI, AUDI A4 B7 Avant (8ED) 2.0 TFSI quattro, AUDI A4 B7 Saloon (8EC) 2.0 TFSI, AUDI A6 C6 Saloon (4F2) 2.0 TFSI, AUDI A6 C6 Avant (4F5) 2.0 TFSI, (+ 23)

The steps may slightly vary depending on the car design.

**REPLACEMENT: ENGINE OIL AND FILTER – AUDI A4 B7.
TOOLS YOU NEED:**



- Wire brush
- All-purpose cleaning spray
- Torque wrench
- Drive socket # 19
- Drive socket # 36
- Ratchet wrench
- Flat Screwdriver
- Funnel
- Oil drain pan
- Fender cover

BUY TOOLS

 
Replacement: engine oil and filter – Audi A4 B7. AUTODOC recommends:

- Replace the oil filter every time when changing motor oil.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.

REPLACEMENT: ENGINE OIL AND FILTER – AUDI A4 B7. USE THE FOLLOWING PROCEDURE:


1

Open the hood.




2

 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




3

 Unscrew the oil filler plug.



4

Lift the car using a jack or place it over an inspection pit.

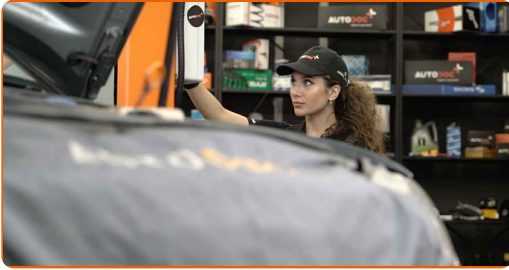


Replacement: engine oil and filter – Audi A4 B7. AUTODOC experts recommend:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.
- All work should be done with the engine stopped.


5

Put a waste oil container with at least 5 l capacity under the drainage hole.

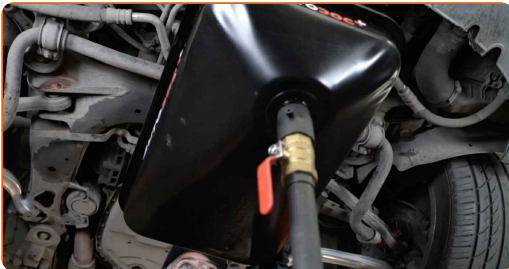

6

Clean the area of the oil pan drainage hole. Use a wire brush. Use all-purpose cleaning spray.

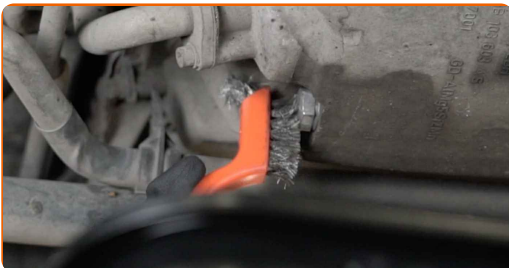

7

Unscrew the drain plug. Use a drive socket #19. Use a ratchet wrench.



8

Drain the used oil.



Replacement: engine oil and filter – Audi A4 B7. Tip:

- Caution! The oil may be hot.

 
9

Disconnect the engine wiring harness connector.




10

Unscrew the cap of the oil filter cover.




11 Prepare a container for the old oil filter.

12 Unscrew the filter housing cap together with the old filter element. Use a drive socket #36. Use a ratchet wrench.

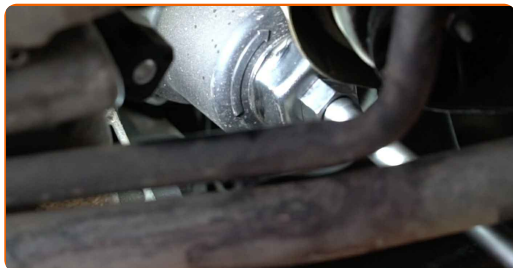


13 Put the old oil filter in the container.

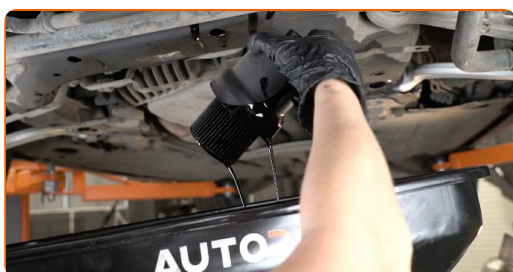


Replacement: engine oil and filter – Audi A4 B7. Tip from AUTODOC experts:

- Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.

 14 Clean the oil filter seat. Use all-purpose cleaning spray.



 - 15 Detach the oil filter from the filter cover.




- 16 Remove the oil filter cover O-ring. Use a flat screwdriver.



- 17 Clean the oil filter housing cap. Use all-purpose cleaning spray.



 - 18 Install a new O-ring to its mounting seat on the filter cover.



- 19 Install the new oil filter to the mounting seat on the filter cover.



Please note!

- Make sure to install the filter correctly. Don't mix up the sides of the part.

 
20

Lubricate the rubber seal of the new filter with a little amount of fresh oil.




21

Install a new oil filter housing cover and tighten it. Use a drive socket #36. Use a torque wrench. Tighten it to 25 Nm torque.




22

 Screw on the cap of the oil filter cover.



23

 
Clean the area of the oil pan drainage hole.



- 24 Screw in the new drainage plug and tighten it. Use a drive socket #19. Use a torque wrench. Tighten it to 26 Nm torque.



 
- 25 Clean the area of the oil pan drainage hole. Use all-purpose cleaning spray.



- 26 Lower the car.



 - 27 Connect the engine wiring harness connector.




- 28 Remove the oil filler cap.



29 Insert the funnel.



 30 Pour oil into the engine through the filler. Required amount of oil: 4.6 l.



Replacement: engine oil and filter – Audi A4 B7. AUTODOC recommends:

- Use the oil recommended by the manufacturer.

31 Check the oil level using the dipstick. Top up oil if necessary.




Please note!


- The oil level should be between the Min and Max marks.

32 Install the oil filler cap.


33 Tighten the oil filler cap.

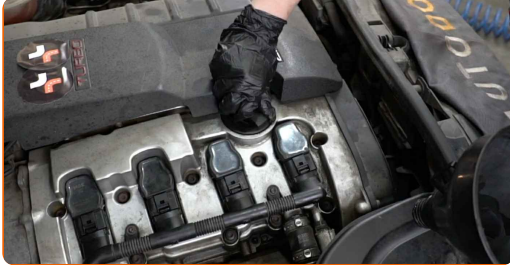

 34 Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.



35 Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.

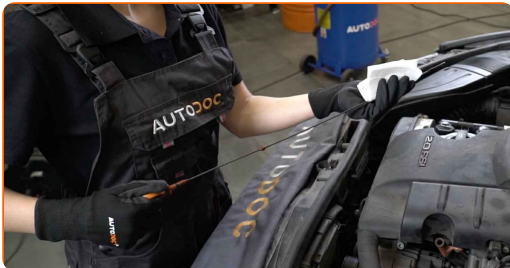


Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.


36

 Remove the fender protection cover.



37

 Close the hood.



Replacement: engine oil and filter – Audi A4 B7. Professionals recommend:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

OIL FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B7

OIL FILTER FOR AUDI: BUY NOW

OIL FILTER FOR AUDI A4 B7: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.