



How to change air filter
on **Audi A4 B8** –
replacement guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

AUDI Q5 (8RB) 2.0 TFSI hybrid quattro, AUDI Q5 (8RB) 2.0 TDI, AUDI A5 Coupe (8T3) 2.0 TDI, AUDI A5 Sportback (8TA) 2.0 TDI, AUDI A5 Convertible (8F7) 2.0 TDI, AUDI A5 Sportback (8TA) 1.8 TFSI, AUDI A5 Convertible (8F7) 1.8 TFSI, AUDI A5 Sportback (8TA) 2.0 TDI quattro, AUDI A4 Allroad (8KH, B8) 2.0 TDI quattro, AUDI A4 Saloon (8K2, B8) 1.8 TFSI, AUDI A4 Saloon (8K2, B8) 1.8 TFSI quattro, AUDI A4 Saloon (8K2, B8) 2.0 TDI, AUDI A4 Saloon (8K2, B8) 2.0 TDI quattro, AUDI A4 Avant (8K5, B8) 1.8 TFSI, AUDI A4 Avant (8K5, B8) 1.8 TFSI quattro, (+ 30)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – AUDI A4 B8. LIST OF THE TOOLS YOU'LL NEED:

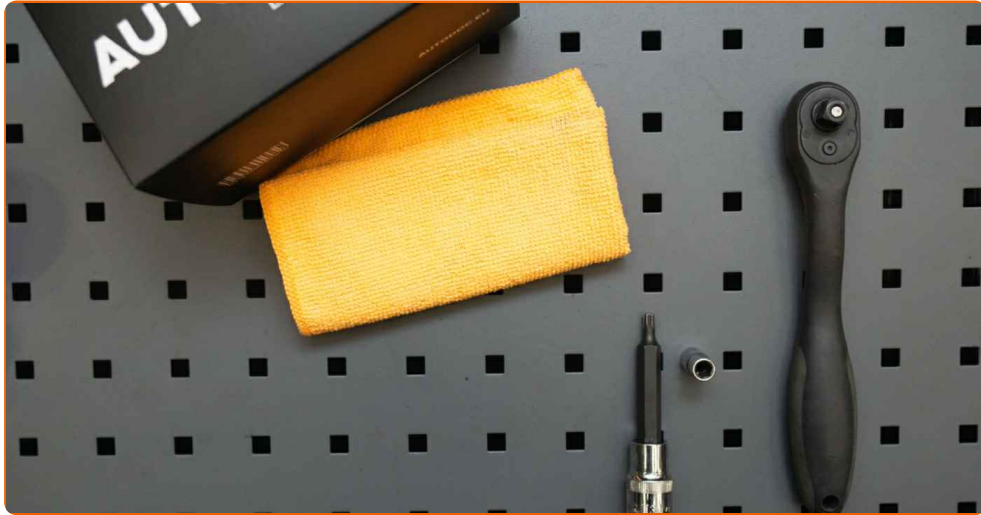

- Drive socket # 7
- Torx bit T30
- Ratchet wrench
- Microfibre towel
- Fender cover


BUY TOOLS

AUTODOC recommends:

- Replacement: air filter – Audi A4 B8. Do not ignore the maintenance schedule, recommendations, and requirements specified by the manufacturer on the use of the car part.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – AUDI A4 B8. RECOMMENDED SEQUENCE OF STEPS:

1 Open the bonnet.

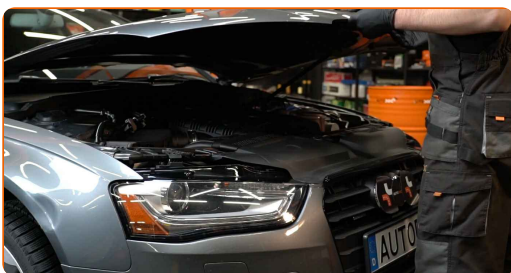

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3 Unplug the mass air flow sensor connector.



4

Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.



 
5

Disconnect the air intake pipe from the air filter housing.




6

Undo the fastening screws of the air filter cover. Use Torx T30. Use a ratchet wrench.



7

 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.




8 Take off the filter lid.




Replacement: air filter – Audi A4 B8. AUTODOC experts recommend:

- Remove the part vertically with respect to the engine cover.

 9 Remove the filter element from the filter housing.



 10 Clean the air filter cover and housing.




Replacement: air filter – Audi A4 B8. Tip:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

11

 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – Audi A4 B8. Tip from AUTODOC experts:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – Audi A4 B8.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


12

Reinstall the air filter cover. Fasten it.




13

Screw in the fastening screws of the air filter cover. Use Torx T30. Use a ratchet wrench.

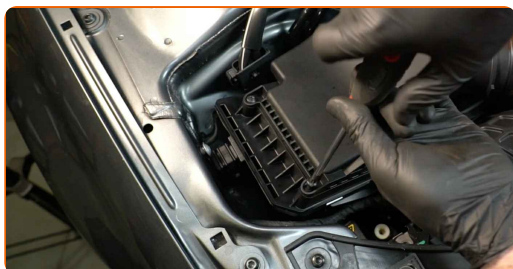

 - 14 Remove the microfibre towel from the air intake hose.



- 15 Connect the air intake pipe to the air filter housing.



 
- 16 Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



- 17 Plug in the mass air flow sensor connector.



- 18 Remove the fender protection cover.



19

Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B8

AIR FILTER FOR AUDI: BUY NOW

AIR FILTER FOR AUDI A4 B8: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.