# - AUTODOC CLUB

How to change front brake pads on **Alfa Romeo 147 937** – replacement guide



### **VIDEO TUTORIAL**




(i) Important!

This replacement procedure can be used for:

ALFA ROMEO 146 (930) 2.0 16V T.S. (930.B5), ALFA ROMEO GTV (916C\_) 2.0 V6 Turbo, ALFA ROMEO GTV (916C\_) 2.0 T.SPARK 16V, ALFA ROMEO SPIDER (916S\_) 3.0 V6, ALFA ROMEO SPIDER (916S\_) 2.0 T.SPARK 16V, ALFA ROMEO 156 Saloon (932) 1.6 16V T.SPARK, ALFA ROMEO 156 Saloon (932) 2.0 16V T.SPARK, ALFA ROMEO 156 Saloon (932) 2.5 V6 24V, ALFA ROMEO 156 Saloon (932) 2.4 JTD, ALFA ROMEO GTV (916C\_) 1.8 16V, ALFA ROMEO SPIDER (916S\_) 1.8 16V, ALFA ROMEO SPIDER (916S\_) 2.0 V6 Turbo, ALFA ROMEO 145 (930) 1.8 i.e. 16V (930.A1A), ALFA ROMEO 146 (930) 1.8 i.e. 16V T.S. (930.B1A), ALFA ROMEO 145 (930) 2.0 16V (930.A5), (+ 33)

The steps may slightly vary depending on the car design.

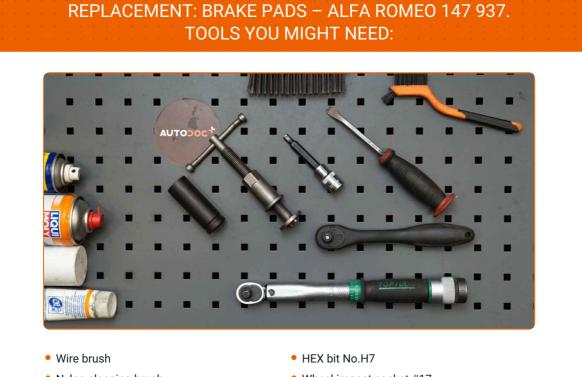

- Nylon cleaning brush
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench

- Wheel impact socket #17
- Ratchet wrench
- Brake caliper wind back tool

O

- Crow bar
- Wheel chock

**BUY TOOLS** 

## + AUTODOC CLUB



## Replacement: brake pads – Alfa Romeo 147 937. AUTODOC experts recommend:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car Alfa Romeo 147 937 should be done with the engine switched off.

### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the hood. Unscrew the brake fluid reservoir cap.





Secure the wheels with chocks.

3

Loosen the wheel mounting bolts. Use wheel impact socket #17.



## + AUTODOC CLUB





Raise the front of the car and secure on supports.



### 5

Unscrew the wheel bolts.



### AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. Alfa Romeo 147 937

6

Remove the wheel.



7

Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.





Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



9

Detach the brake caliper retaining spring. Use a crowbar.



10

Spread the brake pads. Use a crowbar.



11

Remove the brake caliper.





### Replacement: brake pads - Alfa Romeo 147 937. Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

Remove the brake pads.

12



### Replacement: brake pads – Alfa Romeo 147 937. Tip from AUTODOC:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.



Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



### AUTODOC recommends:

- Replacement: brake pads Alfa Romeo 147 937. After applying the spray, wait a few minutes.
- 14

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



Replacement: brake pads – Alfa Romeo 147 937. Tip from AUTODOC:

• After applying the spray, wait a few minutes.



Press in the brake caliper piston. Use brake caliper wind back tool.



### 16

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use antisqueal paste.



## Replacement: brake pads – Alfa Romeo 147 937. AUTODOC experts recommend:

• Make sure the disc surface is clean before installing the pads.



Install new brake pads.





### Replacement: brake pads - Alfa Romeo 147 937. AUTODOC recommends:

• Make sure the pads are installed with linings facing the disc.

18

Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 35 Nm torque.



19

Install the dust boot caps of the brake caliper guide pins.



20

Install the brake caliper retaining spring. Use a crowbar.



21

Clean the wheel rim mounting seat. Use a wire brush.





Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



23

Clean the brake disk surface. Use a brake cleaner.



### AUTODOC recommends:

 Replacement: brake pads – Alfa Romeo 147 937. After applying the spray, wait a few minutes.

24

Install the wheel.



### AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Alfa Romeo 147 937

## + AUTODOC CLUB



25

Screw in the wheel bolts. Use wheel impact socket #17.



26

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 108 Nm torque.



27

Remove the jacks and chocks.



### Replacement: brake pads - Alfa Romeo 147 937. Professionals recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.





Tighten the brake fluid reservoir cap. Close the hood.



### Replacement: brake pads – Alfa Romeo 147 937. Tip from AUTODOC experts:


• Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unneccessary and sharp braking to a stop.



**VIEW MORE TUTORIALS** 



### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

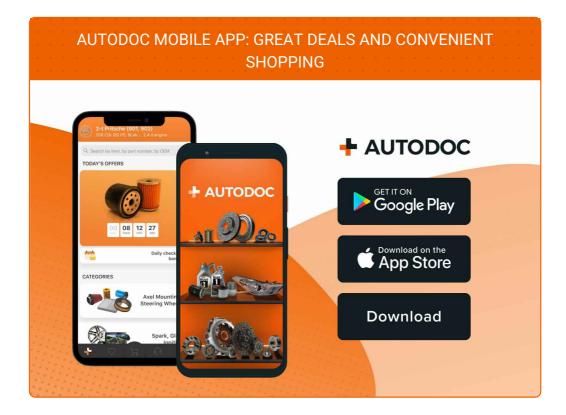

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

### **BUY SPARE PARTS FOR ALFA ROMEO**

**BRAKE PADS: A WIDE SELECTION** 



### **CHOOSE CAR PARTS FOR ALFA ROMEO 147 937**

### **BRAKE PADS FOR ALFA ROMEO: BUY NOW**

BRAKE PADS FOR ALFA ROMEO 147 937: THE BEST DEALS & OFFERS

## (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.