+ AUTODOC CLUB

How to change spark plugs on ALFA ROMEO
156 Saloon (932) – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: ALFA ROMEO 156 Saloon (932) 1.6 16V T.SPARK, ALFA ROMEO 156 Saloon (932) 1.8 16V T.SPARK, ALFA ROMEO 156 Saloon (932) 2.0 16V T.SPARK, ALFA ROMEO 156 Saloon (932) 2.0 JTS

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: ALFA ROMEO 147 (937) 1.6 16V T.SPARK

CLUB.AUTODOC.CO.UK 1–10









REPLACEMENT: SPARK PLUGS – ALFA ROMEO 156 SALOON (932). TOOLS YOU MIGHT NEED:



- High-temperature anti-seize lubricant
- Electronic spray
- Torque wrench
- Spark plug socket # 16

- Torx bit T40
- Ratchet wrench
- Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-10







Replacement: spark plugs – ALFA ROMEO 156 Saloon (932). Tip from AUTODOC:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – ALFA ROMEO 156 SALOON (932). USE THE FOLLOWING PROCEDURE:

- Open the hood.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Unscrew the engine cover fastener. Use Torx T40. Use a ratchet wrench.



Unscrew the oil filler plug.



CLUB.AUTODOC.CO.UK 3-10







Remove the oil filler cap.



6 Remove the engine cover.



AUTODOC recommends:

- Replacement: spark plugs ALFA ROMEO 156 Saloon (932). Do not use excessive force when removing the part as this may damage it.
- Install the oil filler cap.



Tighten the oil filler cap.



CLUB.AUTODOC.CO.UK 4–10







9 Unplug the connectors from the ignition coils.



Unscrew the ignition coil bracket. Use Torx T40. Use a ratchet wrench.



Take out the ignition coil from the spark plug well.



Clean dirt, dust and debris from inside the spark plug wells.



Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



13

CLUB.AUTODOC.CO.UK 5-10







Take out the spark plugs.



Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



16 Install the new spark plugs into their mounting seats.



Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 24 nm torque.



CLUB.AUTODOC.CO.UK 6-10







Replacement: spark plugs – ALFA ROMEO 156 Saloon (932). Tip from AUTODOC:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.
- Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.



Tighten the ignition coil fastening. Use Torx T40. Use a torque wrench. Tighten it to 7 nm torque.



20

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



CLUB.AUTODOC.CO.UK 7-10







Plug in the connectors of the ignition coils.



Unscrew the oil filler plug.



Remove the oil filler cap.

24



Install the engine cover and secure it.



AUTODOC recommends:

 Replacement: spark plugs – ALFA ROMEO 156 Saloon (932). To avoid damaging the part during installation, do not use excessive force.

CLUB.AUTODOC.CO.UK 8-10







- 25 Install the oil filler cap.
- Tighten the oil filler cap.



Screw in the engine cover fasteners. Use Torx T40. Use a ratchet wrench.



- Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- 29 Shut off the engine.
- Remove the fender protection cover.
- Close the hood.




VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 9-10





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

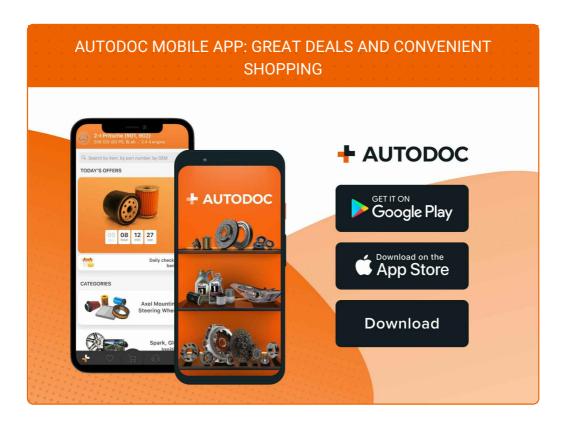

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 10-10