




How to change rear coil  
springs on **Opel Astra H**  
**saloon** – replacement  
guide

## VIDEO TUTORIAL

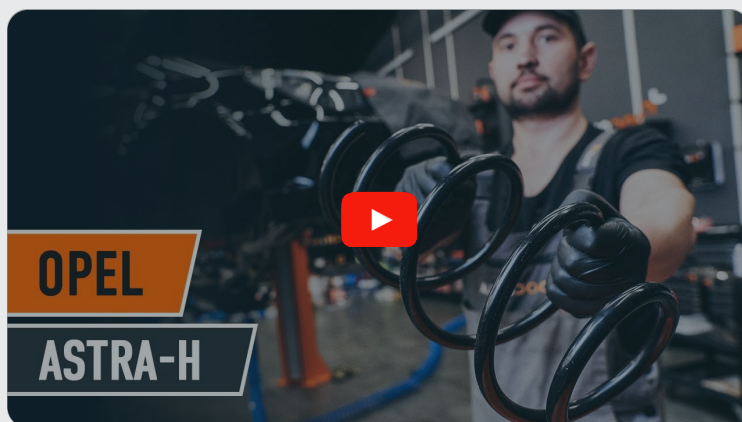

### Important!

This replacement procedure can be used for:

OPEL Astra H Hatchback (A04) 1.4 (L48), OPEL Astra H Hatchback (A04) 1.8 (L48), OPEL Astra H Hatchback (A04) 2.0 Turbo (L48), OPEL Astra H Hatchback (A04) 1.9 CDTI 16V (L48), OPEL Astra H Hatchback (A04) 1.3 CDTI (L48), OPEL Astra H Hatchback (A04) 1.9 CDTI (L48), OPEL Astra H Hatchback (A04) 1.6 Turbo (L48), OPEL Astra H Hatchback (A04) 1.6 (L48), OPEL Astra H Hatchback (A04) 1.7 CDTI (L48), OPEL Astra H Saloon (A04) 1.8 (L69), OPEL Astra H Saloon (A04) 1.3 CDTi (L69), OPEL Astra H Saloon (A04) 1.7 CDTi (L69)

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – OPEL ASTRA H SALOON. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Drive socket # E20
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**BUY TOOLS**

Replacement: coil springs – Opel Astra H saloon. AUTODOC experts recommend:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- Please note: all work on the car – Opel Astra H saloon – should be done with the engine switched off.

 
## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

**1** Secure the wheels with chocks.


**2** Loosen the wheel mounting bolts. Use wheel impact socket #17.



**3** Raise the rear of the car and secure on supports.



**4** Unscrew the wheel bolts.

 


**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. Opel Astra H saloon


**5** Remove the wheel.



 
**6** Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



 
**7** Support the rear suspension beam. Use a hydraulic transmission jack.



 
- 8** Unscrew the lower fastener of the shock absorber. Use a drive socket #E20. Use a tap wrench. Use a ratchet wrench.



- 9** Remove the fastening bolt.

 

 - 10** Remove the mounting from under the rear axle beam.



**AUTODOC recommends:**

- Replacement: coil springs – Opel Astra H saloon. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

- 11** Support the rear suspension beam. Use a hydraulic transmission jack.



- 12** Unscrew the lower fastener of the shock absorber. Use a drive socket #E20. Use a tap wrench. Use a ratchet wrench.



- 13** Remove the fastening bolt.




- 14** Remove the mounting from under the rear axle beam.



**AUTODOC recommends:**

- Opel Astra H saloon – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

- 15** Pull down the rear suspension beam. Use a crowbar.

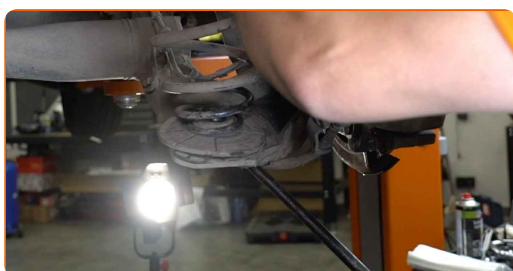




**16** Remove the spring.



Replacement: coil springs – Opel Astra H saloon. Tip from AUTODOC:

- Inspect the rubber mounts of the suspension spring. Replace if necessary.

 
**17** Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.



**18** Pull down the rear suspension beam. Use a crowbar.



 **19** Install the coil spring together with the rubber mounts into the mounting seats.





**20** Support the rear suspension beam. Use a hydraulic transmission jack.



**21** Install the fastening bolt.



**22** Tighten the lower fastener of the shock absorber. Use a drive socket #E20. Use a torque wrench. Tighten it to 130 Nm torque.




**23** Remove the mounting from under the rear axle beam.



**AUTODOC recommends:**

- Replacement: coil springs – Opel Astra H saloon. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


**24** Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.

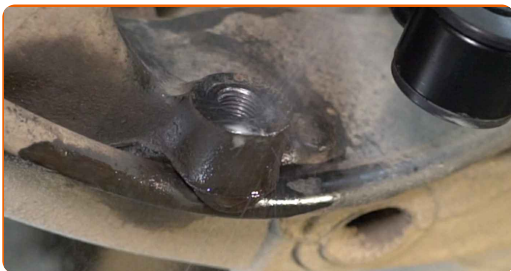


**25** Install the fastening bolt.



**26** Support the rear suspension beam. Use a hydraulic transmission jack.

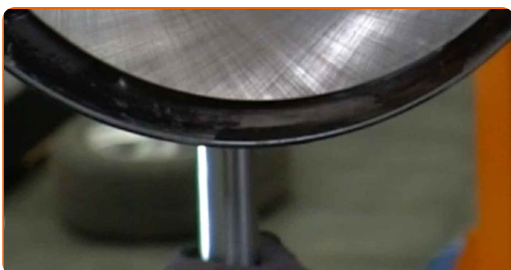

**27** Tighten the lower fastener of the shock absorber. Use a drive socket #E20. Use a torque wrench. Tighten it to 130 Nm torque.

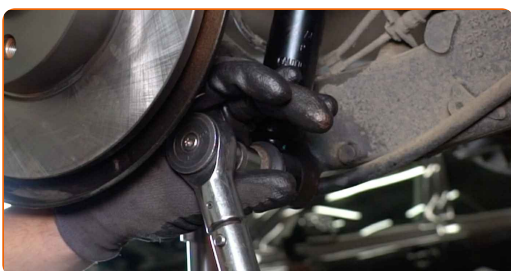

**28** Remove the mounting from under the rear axle beam.



**AUTODOC recommends:**

- Opel Astra H saloon – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

 
**29**

Treat the shock absorber fasteners. Use copper grease.



**30**

Clean the wheel rim mounting seat. Use a wire brush.




**31**

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**32**

 Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: coil springs – Opel Astra H saloon. After applying the spray, wait a few minutes.

**33**

Install the wheel.



**AUTODOC recommends:**

- Important! Hold the wheel while screwing in the fastening bolts. Opel Astra H saloon

**34**

Screw in the wheel bolts. Use wheel impact socket #17.



**35**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 Nm torque.



36

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR OPEL**

**COIL SPRINGS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR OPEL ASTRA H SALOON**

**COIL SPRINGS FOR OPEL: BUY NOW**

**COIL SPRINGS FOR OPEL ASTRA H SALOON: THE BEST  
DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.