# - AUTODOC CLUB

How to change engine oil and filter on **AUDI 200 C3 Saloon (44, 44Q)** – replacement guide



#### SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

# (i) Important!

This replacement procedure can be used for: AUDI 200 C3 Saloon (44, 44Q) 2.2 20V Turbo quattro

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Hatchback (8L1) 1.8

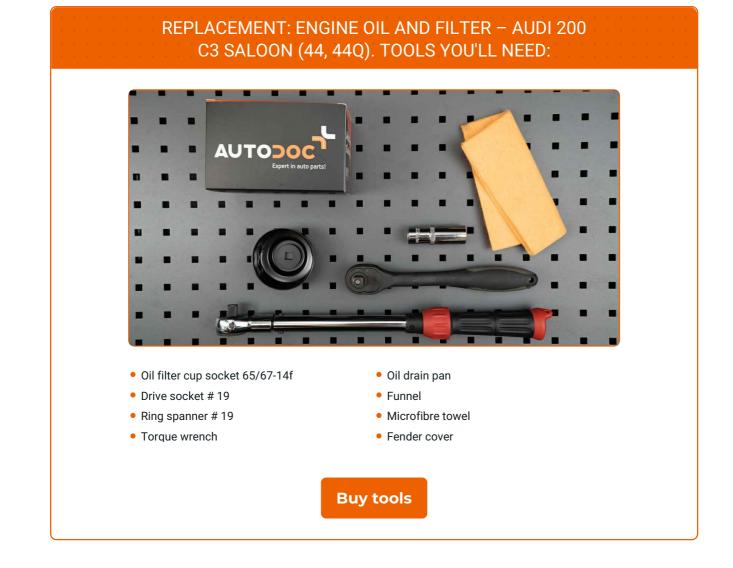

•

O



#### AUTODOC recommends:

- Replace the oil filter every time when changing motor oil.
- Wear gloves to prevent contact with hot liquid.
- Use only new O-rings during installation.
- Warning! Shut down the engine before starting any work AUDI 200 C3 Saloon (44, 44Q).

# CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1Open the hood.2Use a fender pro

3

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

Lift the car using a jack or place it over an inspection pit.

#### AUTODOC recommends:

• The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.

4

Unscrew the oil filler plug.



# AUTODOC CLUB



5

Undo the fasteners of the oil pan lower cover.

6

Put a waste oil container with at least 5 l capacity under the drainage hole.



7

8

Unscrew the drain plug. Use a drive socket No.19 or ring spanner No.19.

Drain the used oil.

# Replacement: engine oil and filter – AUDI 200 C3 Saloon (44, 44Q). AUTODOC recommends:

- Caution! The oil may be hot.
- Wait until the oil has completely drained from the drainage hole.

9

Move the container under the oil filter.

10

Unscrew the oil filter. Use the 65/67-14f socket.



#### Please note!

• You might need other tools.



11

Prepare a container for the old oil filter.



12

Remove the oil filter. Put the old oil filter in the container.



Replacement: engine oil and filter – AUDI 200 C3 Saloon (44, 44Q). Tip from AUTODOC experts:

• Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.

13

Clean the oil filter seat.



14

Lubricate the rubber seal of the new filter with a little amount of fresh oil.







Screw the new filter into its place. Tighten it to 20 nm torque. Use a torque wrench. Use the 65/67-14f socket.



#### Please note!

• You might need other tools.

Screw in the new drainage plug and tighten it. Use a drive socket #19. Use a torque wrench. Tighten it to 30 nm torque.



17

16

Clean the area of the oil pan drainage hole.




18

Remove the oil filler cap.

19

Insert the funnel. Pour new oil into the engine in the amount recommended by the car manufacturer.



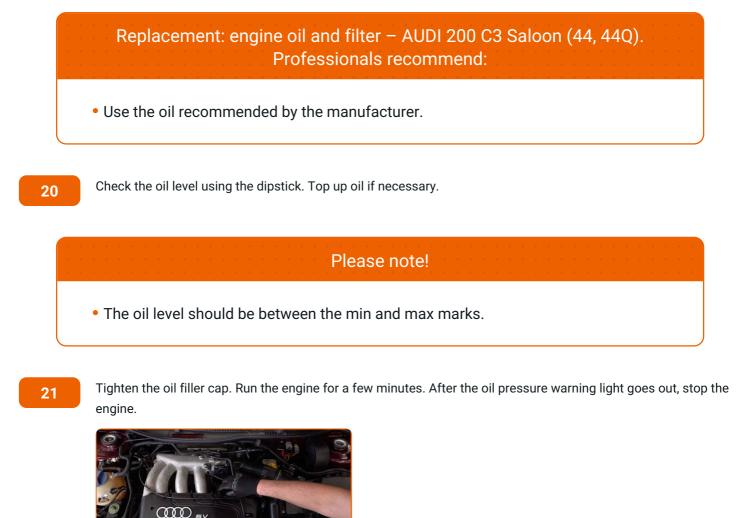


22

Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.

#### Please note!

- The oil level should be between the min and max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.



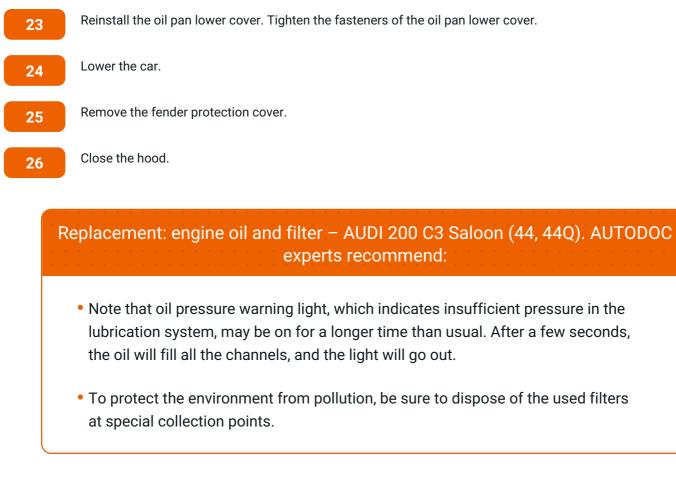




**VIEW MORE TUTORIALS** 



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

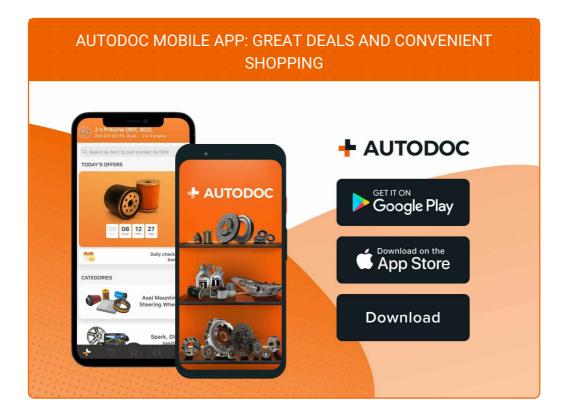

#### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **OIL FILTER: A WIDE SELECTION**

## (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.