



How to change rear anti
roll bar links on **AUDI A3**
Hatchback (8P1) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

AUDI A3 Hatchback (8P1) 1.6 E-Power, AUDI A3 Hatchback (8P1) 2.0 FSI, AUDI A3 Hatchback (8P1) 1.6, AUDI A3 Hatchback (8P1) 2.0 TDI 16V, AUDI A3 Hatchback (8P1) 1.9 TDI, AUDI A3 Hatchback (8P1) 2.0 TDI, AUDI A3 Hatchback (8P1) 3.2 V6 quattro, AUDI A3 Hatchback (8P1) 1.6 FSI, AUDI A3 Hatchback (8P1) 2.0 TDI quattro, AUDI A3 Hatchback (8P1) 2.0 TFSI, AUDI A3 Hatchback (8P1) 2.0 TFSI quattro, AUDI A3 Hatchback (8P1) 2.0 TDI 16V quattro, AUDI A3 Hatchback (8P1) S3 quattro, AUDI A3 Hatchback (8P1) 1.8 TFSI, AUDI A3 Hatchback (8P1) 1.8 T, (+ 4)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Sportback (8PA) 1.2 TSI

REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A3 HATCHBACK (8P1). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #14
- Combination spanner #16
- HEX bit No.H5.
- XZN socket bit # 6
- Drive socket # 14
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Hydraulic transmission jack
- Wheel chock

[Buy tools](#)

Replacement: anti roll bar links – AUDI A3 Hatchback (8P1). AUTODOC recommends:

- Replace the stabiliser links on AUDI A3 Hatchback (8P1) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A3 HATCHBACK (8P1). USE THE FOLLOWING PROCEDURE:

 
1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.

4

Unscrew the wheel bolts.

 


Replacement: anti roll bar links – AUDI A3 Hatchback (8P1). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

5

Remove the wheel.



6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



- 7 Unscrew the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #16. Use XZN #6. Use a ratchet wrench.



- 8 Unscrew the fasteners connecting the stabiliser link to the stabiliser bar. Use a combination spanner #16. Use XZN #6. Use a ratchet wrench.



- 9 Remove the stabilizer rod.



Replacement: anti roll bar links – AUDI A3 Hatchback (8P1). Tip from AUTODOC experts:

- Examine stabiliser bushes. Replace them if needed.

10

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



11

Install the transverse stabilizer link.



 
12

Tighten the stabiliser link fastener. Use a combination spanner #14. Use HEX No.H5. Use a ratchet wrench.




13

Tighten the fastener connecting the stabilizer bar with the control arm. Use a drive socket #14. Use a torque wrench. Tighten it to 45 Nm torque.



 - 14 Support the arm. Use a hydraulic transmission jack.



- 15 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #14. Use a torque wrench. Tighten it to 45 Nm torque.




- 16 Remove the support from under the arm.

AUTODOC recommends:


- Replacement: anti roll bar links – AUDI A3 Hatchback (8P1). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

- 17 Treat all joints of the stabiliser link. Use copper grease.

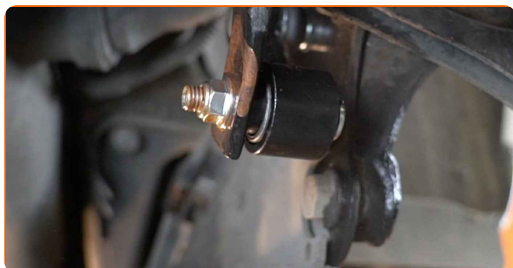

18

 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



19

Clean the brake disk surface. Use a brake cleaner.

 


Replacement: anti roll bar links – AUDI A3 Hatchback (8P1). AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

20

Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. AUDI A3 Hatchback (8P1)

21

Screw in the wheel bolts. Use wheel impact socket #17.



22

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.



23

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ANTI ROLL BAR LINKS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.