+ AUTODOC CLUB

How to change front brake pads on **AUDI A3 Hatchback (8P1)** – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

AUDI A3 Hatchback (8P1) 1.6 E-Power, AUDI A3 Hatchback (8P1) 2.0 FSI, AUDI A3 Hatchback (8P1) 1.6, AUDI A3 Hatchback (8P1) 2.0 TDI 16V, AUDI A3 Hatchback (8P1) 1.9 TDI, AUDI A3 Hatchback (8P1) 2.0 TDI, AUDI A3 Hatchback (8P1) 3.2 V6 quattro, AUDI A3 Hatchback (8P1) 1.6 FSI, AUDI A3 Hatchback (8P1) 2.0 TFSI, AUDI A3 Hatchback (8P1) 2.0 TDI 16V quattro, AUDI A3 Hatchback (8P1) 2.0 TDI quattro, AUDI A3 Hatchback (8P1) 1.8 TFSI, AUDI A3 Hatchback (8P1) 1.4 TFSI, AUDI A3 Hatchback (8P1) 1.8 TFSI quattro, (+2)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat Saloon (362) 2.0 TDI

CLUB.AUTODOC.CO.UK 1–13







REPLACEMENT: BRAKE PADS – AUDI A3 HATCHBACK (8P1). TOOLS YOU NEED:



- Wire brush
- Nylon cleaning brush
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench
- HEX bit No.H7

- Torx bit T27
- Wheel impact socket #17
- Ratchet wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-13





Replacement: brake pads – AUDI A3 Hatchback (8P1). AUTODOC recommends:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car AUDI A3 Hatchback (8P1) should be done
 with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the hood.
 - Clean the brake fluid reservoir cap. Use a brake cleaner.



AUTODOC recommends:

 Replacement: brake pads – AUDI A3 Hatchback (8P1). After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 3-13







Unscrew the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



Unscrew the brake fluid reservoir cap.



- Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the front of the car and secure on supports.
- 9 Unscrew the wheel bolts.



CLUB.AUTODOC.CO.UK 4–13







AUTODOC recommends:

Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
 AUDI A3 Hatchback (8P1)

9

12

Remove the wheel.



Spread the brake pads. Use a crowbar.



Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 5-13







Detach the brake caliper retaining spring. Use a crowbar.



Remove the brake caliper.



Replacement: brake pads – AUDI A3 Hatchback (8P1). AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

CLUB.AUTODOC.CO.UK 6-13







15 Remove the brake pads.

16



AUTODOC recommends:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

 Replacement: brake pads – AUDI A3 Hatchback (8P1). After applying the spray, wait a few minutes.

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



CLUB.AUTODOC.CO.UK 7–13

 






Replacement: brake pads - AUDI A3 Hatchback (8P1). Tip from AUTODOC:

• After applying the spray, wait a few minutes.





Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use antisqueal paste.



Replacement: brake pads – AUDI A3 Hatchback (8P1). Tip from AUTODOC experts:

• Make sure the disc surface is clean before installing the pads.

20 Install new brake pads.



CLUB.AUTODOC.CO.UK 8-13







AUTODOC recommends:

• Make sure the pads are installed with linings facing the disc.





Install the dust boot caps of the brake caliper guide pins.



Install the brake caliper retaining spring. Use a crowbar.



24

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 9-13







Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: brake pads – AUDI A3 Hatchback (8P1). After applying the spray, wait a few minutes.

26

Install the wheel.



AUTODOC recommends:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

27

Screw in the wheel bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 10-13







Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.



Replacement: brake pads – AUDI A3 Hatchback (8P1). Tip from AUTODOC:

- Check the brake fluid level in the expansion tank and refill if necessary.
- Without starting the engine, press the brake pedal several times until you feel significant resistance.

Tighten the brake fluid reservoir cap.

30



CLUB.AUTODOC.CO.UK 11-13







Install the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



Close the hood.

Replacement: brake pads – AUDI A3 Hatchback (8P1). AUTODOC recommends:

• Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unneccessary and sharp braking to a stop.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 12-13





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 13-13