- AUTODOC CLUB

How to change spark plugs on **AUDI A4 Avant** (8K5, B8) – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle


(i) Important!

This replacement procedure can be used for:

AUDI A4 Avant (8K5, B8) 1.8 TFSI, AUDI A4 Avant (8K5, B8) 2.0 TFSi, AUDI A4 Avant (8K5, B8) 2.0 TFSI, AUDI A4 Avant (8K5, B8) 2.0 TFSI quattro, AUDI A4 Avant (8K5, B8) 2.0 TFSI quattro, AUDI A4 Avant (8K5, B8) 2.0 TFSI flexible fuel, AUDI A4 Avant (8K5, B8) 2.0 TFSI flexible fuel quattro

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8K2, B8) 2.0 TFSI Flexfuel quattro

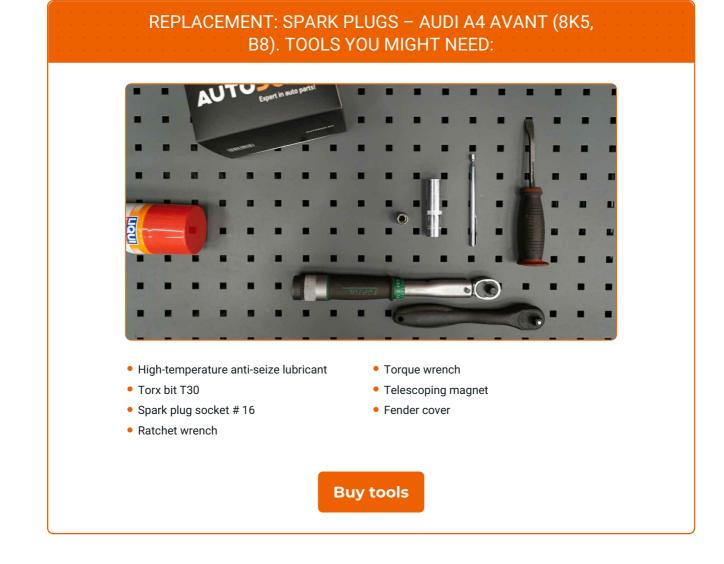

O

AUTODOC CLUB





- The replacement procedure is the same for all spark plugs.
- Please note: all work on the car AUDI A4 Avant (8K5, B8) should be done with the engine switched off.

REPLACEMENT: SPARK PLUGS – AUDI A4 AVANT (8K5, B8). TAKE THE FOLLOWING STEPS:



Open the hood.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Remove the engine cover.



Replacement: spark plugs – AUDI A4 Avant (8K5, B8). Tip:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.



Unscrew the fasteners of the ignition coil harness retainer. Use Torx T30. Use a ratchet wrench.



5

Unplug the connectors from the ignition coils.



6

Take out the ignition coils from the spark plug wells.



Replacement: spark plugs – AUDI A4 Avant (8K5, B8). AUTODOC recommends:

• Remember the sequence of steps for ignition coil demounting.



Clean dirt, dust and debris from inside the spark plug wells.





Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



9

Take out the spark plugs. Use a telescoping magnet.



10

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



11

Install the new spark plugs into their mounting seats. Use the spark plug socket #16.





Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.



Replacement: spark plugs – AUDI A4 Avant (8K5, B8). AUTODOC experts recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

13

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.



AUTODOC recommends:

 Replacement: spark plugs – AUDI A4 Avant (8K5, B8). Follow the installation steps.

+ AUTODOC CLUB



14

Plug in the connectors of the ignition coils.



15

Screw in the fasteners of the ignition coil harness retainer. Use Torx T30. Use a ratchet wrench.



16

Install the engine cover and secure it.




Replacement: spark plugs – AUDI A4 Avant (8K5, B8). Tip from AUTODOC experts:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

+ AUTODOC CLUB



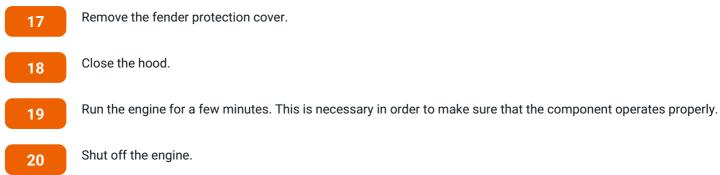

Remove the fender protection cover.

Close the hood.

Shut off the engine.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.