



How to change rear anti
roll bar links on **AUDI A4**
B8 Avant (8K5) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

AUDI A4 B8 Avant (8K5) 1.8 TFSI, AUDI A4 B8 Avant (8K5) 1.8 TFSI quattro, AUDI A4 B8 Avant (8K5) 3.0 TFSI quattro, AUDI A4 B8 Avant (8K5) 2.0 TDI, AUDI A4 B8 Avant (8K5) 2.0 TDI quattro, AUDI A4 B8 Avant (8K5) 3.0 TDI quattro, AUDI A4 B8 Avant (8K5) 3.0 TDI, AUDI A4 B8 Avant (8K5) 3.2 FSI quattro, AUDI A4 B8 Avant (8K5) 2.7 TDI, AUDI A4 B8 Avant (8K5) 2.0 TFSi, AUDI A4 B8 Avant (8K5) 2.0 TFSI, AUDI A4 B8 Avant (8K5) 2.0 TFSI quattro, AUDI A4 B8 Avant (8K5) S4 quattro, AUDI A4 B8 Avant (8K5) 3.2 FSI, AUDI A4 B8 Avant (8K5) 2.0 TFSI flexible fuel, (+ 2)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 B8 Saloon (8K2) 2.0 TFSI Flexfuel quattro

REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A4 B8
AVANT (8K5). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Drive socket # 16
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: anti roll bar links – AUDI A4 B8 Avant (8K5). AUTODOC experts recommend:

- Replace the stabiliser links on AUDI A4 B8 Avant (8K5) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A4 B8 AVANT (8K5). USE THE FOLLOWING PROCEDURE:


1

Secure the wheels with chocks.



2


Loosen the wheel mounting bolts. Use wheel impact socket #17.

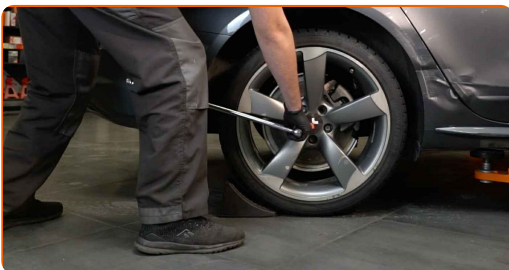

3

Raise the rear of the car and secure on supports.

 
4 Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. AUDI A4 B8 Avant (8K5)


5 Remove the wheel.

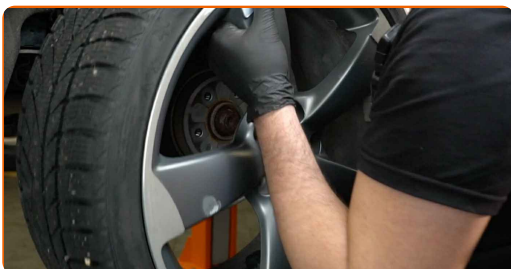

 
6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



 
7 Unscrew the fastener connecting the stabilizer bar with the control arm. Use a drive socket #16. Use a ratchet wrench.



- 8 Unscrew the fasteners connecting the stabiliser link to the stabiliser bar. Use a combination spanner #16 (2 pieces).

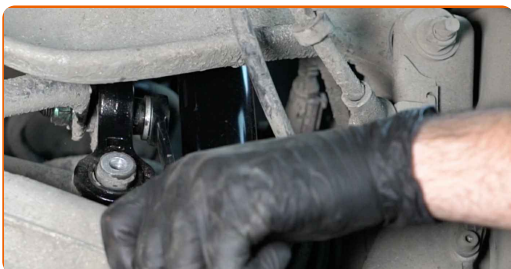

- 9 Remove the stabilizer rod.

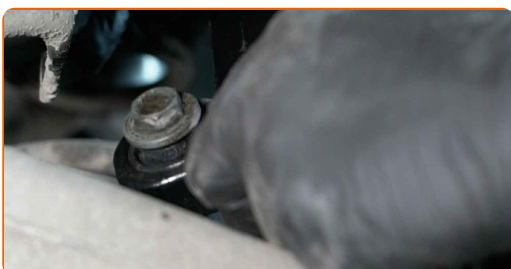

Replacement: anti roll bar links – AUDI A4 B8 Avant (8K5). Tip:

- Examine stabiliser bushes. Replace them if needed.

- 10 Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



- 11** Install a new rod, tighten the fasteners. Use a combination spanner #16 (2 pieces). Use a drive socket #16. Use a ratchet wrench.



- 12** Support the arm. Use a hydraulic transmission jack.



- 13** Tighten the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

 
- 14** Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque. +90°




AUTODOC recommends:

- Important! Be sure to use new fasteners.

- 15** Treat all joints of the stabiliser link. Use copper grease.



 - 16** Remove the support from under the arm.



AUTODOC recommends:

- AUDI A4 B8 Avant (8K5) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

17

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



18

Clean the brake disk surface. Use a brake cleaner.

 


Replacement: anti roll bar links – AUDI A4 B8 Avant (8K5). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

19

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. AUDI A4 B8 Avant (8K5)

 
20

Screw in the wheel bolts. Use wheel impact socket #17.



21

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



22

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ANTI ROLL BAR LINKS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.