



How to change front
brake discs on **AUDI A4
B9 Avant (8W5, 8WD)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

AUDI A4 B9 Avant (8W5, 8WD) 2.0 TFSI, AUDI A4 B9 Avant (8W5, 8WD) 2.0 TDI, AUDI A4 B9 Avant (8W5, 8WD) 2.0 TDI quattro, AUDI A4 B9 Avant (8W5, 8WD) 1.4 TFSI, AUDI A4 B9 Avant (8W5, 8WD) 2.0 TFSI g-tron, AUDI A4 B9 Avant (8W5, 8WD) 2.0 TFSI Mild Hybrid, AUDI A4 B9 Avant (8W5, 8WD) 35 TFSI Mild Hybrid, AUDI A4 B9 Avant (8W5, 8WD) 45 TDI quattro, AUDI A4 B9 Avant (8W5, 8WD) 35 TDI, AUDI A4 B9 Avant (8W5, 8WD) 40 TDI, AUDI A4 B9 Avant (8W5, 8WD) 40 TDI quattro, AUDI A4 B9 Avant (8W5, 8WD) 30 TDI, AUDI A4 B9 Avant (8W5, 8WD) 40 TFSI g-tron, AUDI A4 B9 Avant (8W5, 8WD) 30 TDI Mild Hybrid, AUDI A4 B9 Avant (8W5, 8WD) 35 TDI Mild Hybrid, (+ 4)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8K2, B8) 2.0 TFSI Flexfuel quattro

REPLACEMENT: BRAKE DISCS – AUDI A4 B9 AVANT (8W5, 8WD). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 13
- Drive socket # 21
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Brake caliper wind back tool
- Flat Screwdriver
- Impact screwdriver
- Crow bar
- Wheel chock

Buy tools

 
Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). Tip from AUTODOC experts:

- Replace the brake disks on the car AUDI A4 B9 Avant (8W5, 8WD) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE DISCS – AUDI A4 B9 AVANT (8W5, 8WD). TAKE THE FOLLOWING STEPS:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the front of the car and secure on supports.

5 Unscrew the wheel bolts.



Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.



7 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



8

Unscrew the brake caliper fastening. Use a drive socket #13. Use a ratchet wrench.



9

Spread the brake pads. Use a crowbar.



10

Detach the brake caliper retaining spring. Use a crowbar. Use a flat screwdriver.



11

Remove the brake caliper.




Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


12

Remove the brake pads.

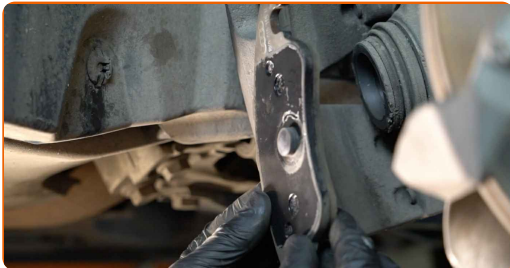


13

 
Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



 
14 Unscrew the caliper bracket fastening. Use a drive socket #21. Use a tap wrench.




15 Remove the caliper bracket.

 

16 Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.

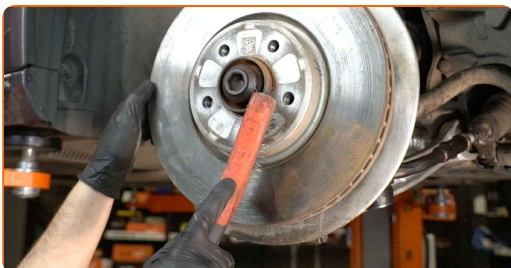

 17 Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



18 Remove the brake disc.



19 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



20 Install the brake disc.

 


21 Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 5 Nm torque.



22

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.




AUTODOC recommends:

- Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). After applying the spray, wait a few minutes.


23

Install the brake caliper bracket.

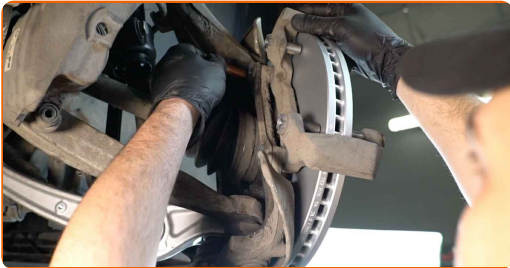

24

Tighten the brake caliper bracket. Use a drive socket #21. Use a torque wrench. Tighten it to 196 Nm torque.

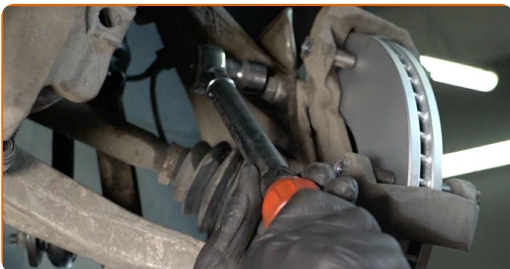


AUTODOC recommends:

- Important! Be sure to use new fasteners.

25

 Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.




Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). Tip from AUTODOC:

- After applying the spray, wait a few minutes.


26

 Press in the brake caliper piston. Use brake caliper wind back tool.




27

 Install the brake pads.



 
28 Install the brake caliper and fix it. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.



29 Install the brake caliper retaining spring.



 30 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



31 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). After applying the spray, wait a few minutes.

32 Install the wheel.



AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

33 Screw in the wheel bolts. Use wheel impact socket #17.



34 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



35 Remove the jacks and chocks.



Replacement: brake discs – AUDI A4 B9 Avant (8W5, 8WD). Tip from AUTODOC experts:

- Check the brake fluid level in the expansion tank and refill if necessary.

36

Tighten the brake fluid reservoir cap.



AUTODOC recommends:

- AUDI A4 B9 Avant (8W5, 8WD) – Press the brake pedal several times with the engine shut down until you feel the resistance built up.

37

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DISCS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.