



How to change rear
brake pads on **AUDI A4
Convertible (8H7, B6,
8HE, B7)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

AUDI A4 Convertible (8H7, B6, 8HE, B7) 3.2 FSI, AUDI A4 Convertible (8H7, B6, 8HE, B7) 3.2 FSI quattro, AUDI A4 Convertible (8H7, B6, 8HE, B7) 3.0 TDI quattro, AUDI A4 Convertible (8H7, B6, 8HE, B7) 2.7 TDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat Saloon (362) 2.0 TDI

REPLACEMENT: BRAKE PADS – AUDI A4 CONVERTIBLE (8H7, B6, 8HE, B7). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Nylon cleaning brush
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench
- Combination spanner #13
- Combination spanner #15
- Drive socket # 13
- Torx bit T27
- Wheel impact socket #17
- Ratchet wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock

Buy tools

Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). Tip from AUTODOC experts:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car – AUDI A4 Convertible (8H7, B6, 8HE, B7) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- 1 Connect the scan and service tool.



- 2 Put the parking brake system into service mode.

- 3 Open the hood.

- 4 Clean the brake fluid reservoir cap. Use a brake cleaner.

AUTODOC recommends:

- Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). After applying the spray, wait a few minutes.

5 Unscrew the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



6 Unscrew the brake fluid reservoir cap.



7 Secure the wheels with chocks.

8 Loosen the wheel mounting bolts. Use wheel impact socket #17.



9 Raise the rear of the car and secure on supports.

10 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
AUDI A4 Convertible (8H7, B6, 8HE, B7)

11

Remove the wheel.



12

Spread the brake pads. Use a crowbar.



13

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



14

Unscrew the brake caliper fastening. Use a combination spanner #13. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.



15

Remove the brake caliper.




Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

16

Remove the brake pads.

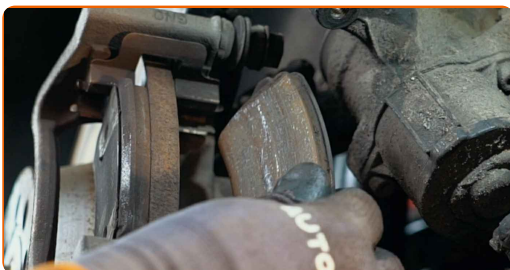

Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). AUTODOC experts recommend:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

17

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). After applying the spray, wait a few minutes.

18

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). Tip:

- Make sure the disc surface is clean before installing the pads.

 
19 Install new brake pads.



Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). Tip from AUTODOC experts:

- Make sure the pads are installed with linings facing the disc.

20 Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

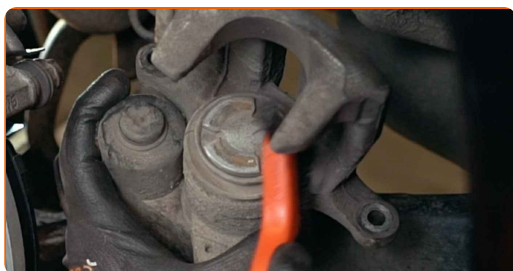

AUTODOC recommends:

- Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). After applying the spray, wait a few minutes.


21

Press in the brake caliper piston. Use brake caliper wind back tool.



22

Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.

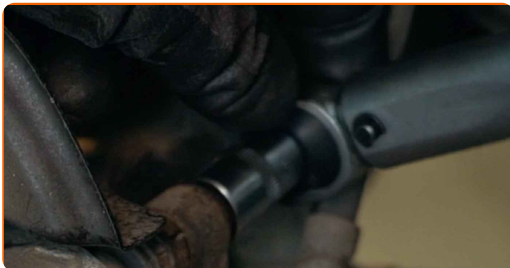

23

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



24

Clean the brake disk surface. Use a brake cleaner.



Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

25 Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. AUDI A4 Convertible (8H7, B6, 8HE, B7)

26 Screw in the wheel bolts. Use wheel impact socket #17.



27 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



28 Remove the jacks and chocks.



29 Deactivate the service mode of the parking brake system.


30 Disconnect the scan and service tool.



Replacement: brake pads – AUDI A4 Convertible (8H7, B6, 8HE, B7). Tip from AUTODOC experts:

- Check the brake fluid level in the expansion tank and refill if necessary.

31 Tighten the brake fluid reservoir cap.

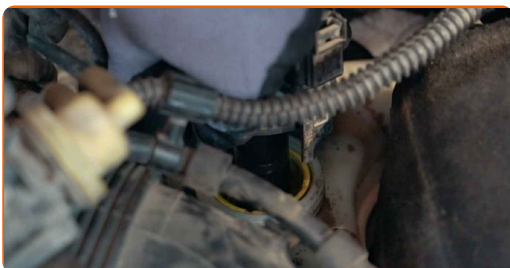

32

Install the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



33

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.