



How to change spark
plugs on **AUDI A8 (4E2,
4E8)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

AUDI A8 (4E2, 4E8) 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A6 Avant (4B5, C5) 2.4

REPLACEMENT: SPARK PLUGS – AUDI A8 (4E2, 4E8).
 TOOLS YOU MIGHT NEED:

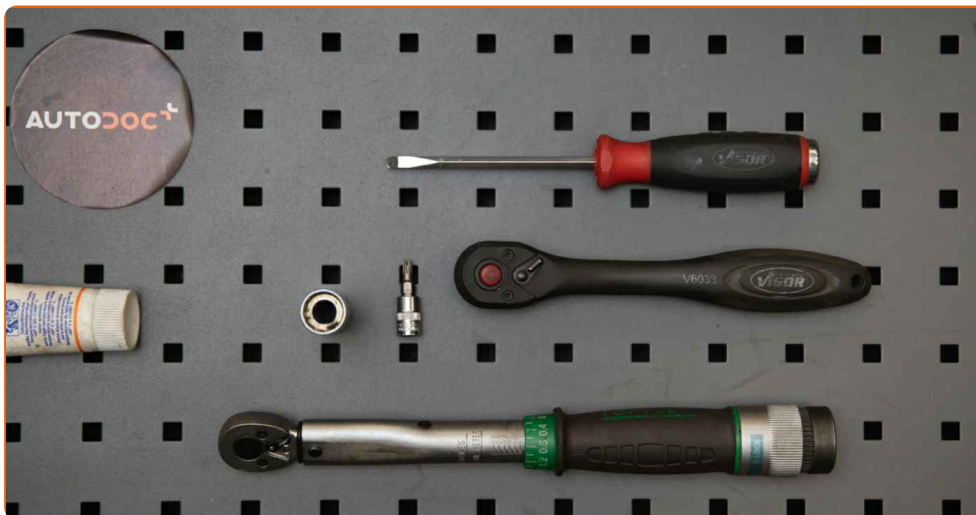

- High-temperature anti-seize lubricant
- Torque wrench
- Spark plug socket # 16
- Torx bit T25
- Ratchet wrench
- Flat screwdriver
- Fender cover

Buy tools

Replacement: spark plugs – AUDI A8 (4E2, 4E8). AUTODOC experts recommend:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – AUDI A8 (4E2, 4E8). TAKE THE FOLLOWING STEPS:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Unscrew the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.



4 Remove the air distribution housing assembly.

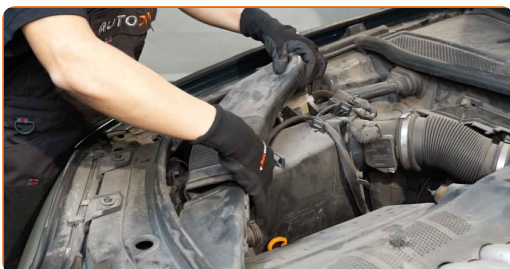

5 Unscrew the engine cover fastener. Use a flat screwdriver.



 
6 Remove the engine cover.



AUTODOC recommends:

- Replacement: spark plugs – AUDI A8 (4E2, 4E8). Do not use excessive force when removing the part as this may damage it.

7 Unscrew the engine cover fastener. Use a flat screwdriver.




8 Remove the engine cover.




Replacement: spark plugs – AUDI A8 (4E2, 4E8). Professionals recommend:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

 
9 Unscrew the fasteners of the coolant reservoir. Use Torx T25. Use a ratchet wrench.




10 Remove the coolant reservoir.

 

 11 Unscrew the engine cover fastener. Use a flat screwdriver.




12 Remove the engine cover.

 

AUTODOC recommends:

- Replacement: spark plugs – AUDI A8 (4E2, 4E8). To avoid damaging the part when removing it, do not use excessive force.

 13 Remove the spark plug wire connectors from the spark plug wells.




Replacement: spark plugs – AUDI A8 (4E2, 4E8). Professionals recommend:

- Be careful to avoid damaging spark plug wires.
- Remember the sequence of the spark plug wires connectors.


14

 Clean dirt, dust and debris from inside the spark plug wells.




15

 Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



16

 Take out the spark plugs.




17

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.




18

Install the new spark plugs into their mounting seats. Use the spark plug socket #16.

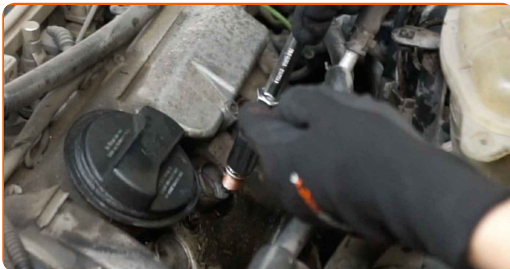

19

 
Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 24 nm torque.



Replacement: spark plugs – AUDI A8 (4E2, 4E8). AUTODOC experts recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

- 20** Install the spark plug wire connectors into the spark plug wells. Make sure you hear a click indicating that it is locked in place.

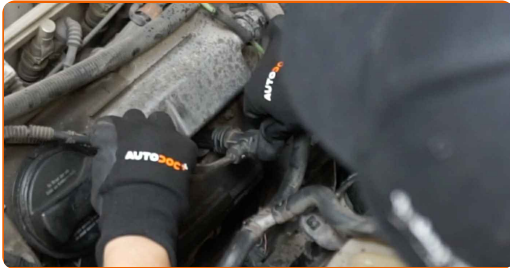


Replacement: spark plugs – AUDI A8 (4E2, 4E8). Tip:

- Follow the installation sequence.

- 21** Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

- 22** Shut off the engine.

- 23** Install the engine cover and secure it.

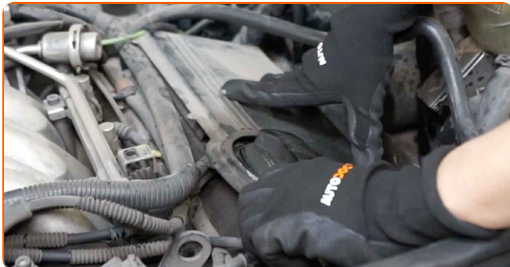

Replacement: spark plugs – AUDI A8 (4E2, 4E8). AUTODOC experts recommend:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: spark plugs – AUDI A8 (4E2, 4E8). To avoid damaging the part during installation, do not use excessive force.

24 Screw in the engine cover fasteners. Use a flat screwdriver.

25 Install the engine cover and secure it.



 
AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: spark plugs – AUDI A8 (4E2, 4E8). Do not use excessive force during installation. This may damage the part.

26 Screw in the engine cover fasteners. Use a flat screwdriver.



27 Install the engine cover and secure it.




AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: spark plugs – AUDI A8 (4E2, 4E8). Do not use excessive force during installation. This may damage the part.


28

Screw in the engine cover fasteners. Use a flat screwdriver.

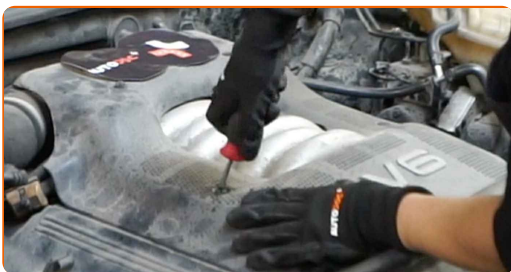

29

 Reinstall the air distribution housing assembly.



30

Screw in the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.



31 Install the coolant reservoir.

32 Screw in the coolant reservoir fasteners. Use Torx T25. Use a ratchet wrench.



33 Remove the fender protection cover.

34 Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.