



How to change spark  
plugs on **AUDI Q5 (8RB)**  
– replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:

AUDI Q5 (8RB) 2.0 TFSI hybrid quattro, AUDI Q5 (8RB) 2.0 TFSI quattro

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8K2, B8) 2.0 TFSI Flexfuel quattro

REPLACEMENT: SPARK PLUGS – AUDI Q5 (8RB).  
 TOOLS YOU MIGHT NEED:



- High-temperature anti-seize lubricant
- Torx bit T30
- Spark plug socket # 16
- Ratchet wrench
- Torque wrench
- Telescoping magnet
- Fender cover

**Buy tools**

Replacement: spark plugs – AUDI Q5 (8RB). AUTODOC experts recommend:

- The replacement procedure is the same for all spark plugs.
- Please note: all work on the car – AUDI Q5 (8RB) – should be done with the engine switched off.

**REPLACEMENT: SPARK PLUGS – AUDI Q5 (8RB). TAKE THE FOLLOWING STEPS:**

**1** Open the hood.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Remove the engine cover.

 


Replacement: spark plugs – AUDI Q5 (8RB). Tip:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.

4

Unscrew the fasteners of the ignition coil harness retainer. Use Torx T30. Use a ratchet wrench.



5

Unplug the connectors from the ignition coils.



6

Take out the ignition coils from the spark plug wells.



Replacement: spark plugs – AUDI Q5 (8RB). AUTODOC recommends:

- Remember the sequence of steps for ignition coil demounting.

 
7

Clean dirt, dust and debris from inside the spark plug wells.




8

Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.




9

 Take out the spark plugs. Use a telescoping magnet.



10

 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.




11

Install the new spark plugs into their mounting seats. Use the spark plug socket #16.



**12**

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.

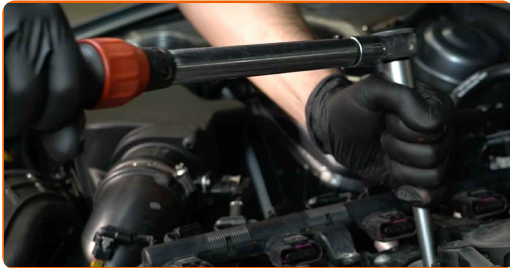


**Replacement: spark plugs – AUDI Q5 (8RB). AUTODOC experts recommend:**

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

**13**

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.

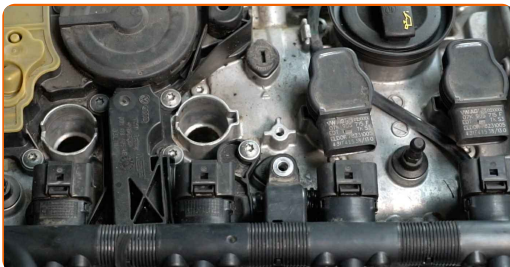

**AUTODOC recommends:**

- Replacement: spark plugs – AUDI Q5 (8RB). Follow the installation steps.

 
**14**

Plug in the connectors of the ignition coils.



**15**

Screw in the fasteners of the ignition coil harness retainer. Use Torx T30. Use a ratchet wrench.



**16**

Install the engine cover and secure it.



**Replacement: spark plugs – AUDI Q5 (8RB). Tip from AUTODOC experts:**

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.



- 17** Remove the fender protection cover.
- 18** Close the hood.
- 19** Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- 20** Shut off the engine.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**SPARK PLUGS: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.