



How to change air filter
on **AUDI TT Coupe (8N3)**
– replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

AUDI TT Coupe (8N3) 1.8 T, AUDI TT Coupe (8N3) 1.8 T quattro, AUDI TT Coupe (8N3) 3.2 VR6 quattro

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Hatchback (8L1) 1.8

REPLACEMENT: AIR FILTER – AUDI TT COUPE (8N3).
TOOLS YOU NEED:

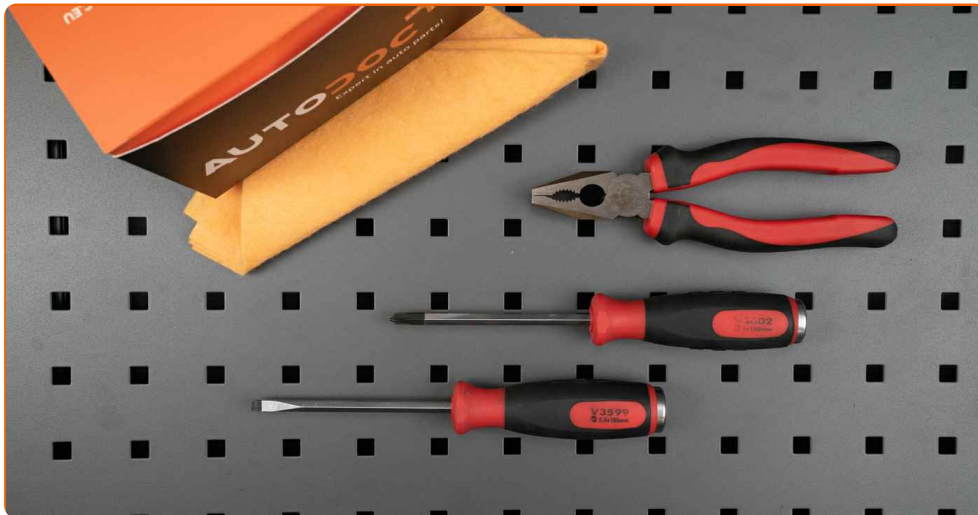

- Phillips Screwdriver
- Flat Screwdriver
- Combination Pliers
- Microfibre towel
- Fender cover

[Buy tools](#)

AUTODOC recommends:


- Replacement: air filter – AUDI TT Coupe (8N3). Follow the maintenance schedule, recommendations, and requirements specified by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – AUDI TT COUPE (8N3). USE THE FOLLOWING PROCEDURE:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Undo the fastening screws of the air filter cover (4 pieces). Use a Phillips screwdriver.

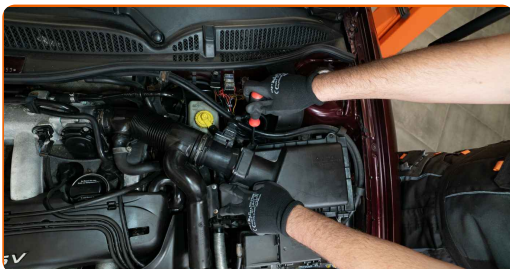

4 Unplug the mass air flow sensor connector. Loosen the clamp and remove the intake air hose from the filter housing. Use combination pliers.

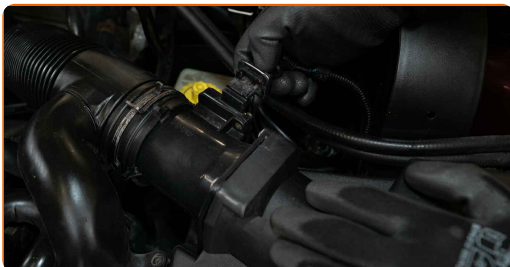

5 Take off the filter lid.



Replacement: air filter – AUDI TT Coupe (8N3). AUTODOC experts recommend:

- Remove the part vertically with respect to the engine cover.

6 Remove the filter element from the filter housing.



7 Clean the air filter cover and housing.




Replacement: air filter – AUDI TT Coupe (8N3). Tip:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

8

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

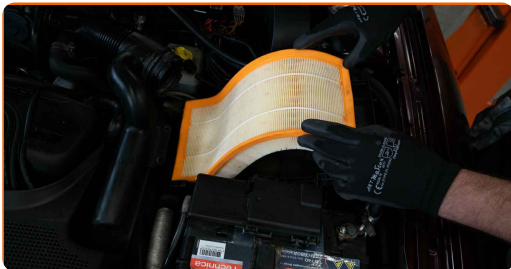

Replacement: air filter – AUDI TT Coupe (8N3). Tip from AUTODOC experts:


- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – AUDI TT Coupe (8N3).
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

9

Reinstall the air filter cover. Fasten it.


10

Attach the air intake hose to the air filter housing. Tighten the fuel filter pipe clamp. Plug in the mass air flow sensor connector.

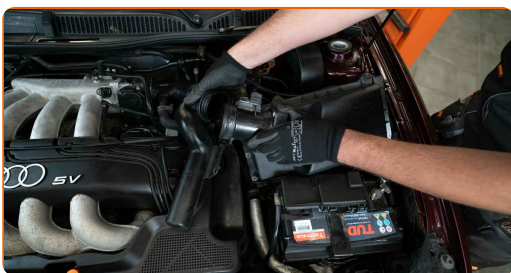

11

 Screw in the fastening screws of the air filter cover (4 pieces). Use a Phillips screwdriver.



12

Remove the fender protection cover.

13

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.