



How to change spark
plugs on **AUDI TT Coupe**
(8N3) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

AUDI TT Coupe (8N3) 1.8 T, AUDI TT Coupe (8N3) 1.8 T quattro

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Hatchback (8L1) 1.8

REPLACEMENT: SPARK PLUGS – AUDI TT COUPE
(8N3). TOOLS YOU NEED:



- Torque wrench
- Spark plug socket # 16
- High-temperature anti-seize lubricant
- Fender cover

Buy tools

Replacement: spark plugs – AUDI TT Coupe (8N3). AUTODOC experts recommend:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – AUDI TT COUPE (8N3). TAKE THE FOLLOWING STEPS:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Release the throttle cable from its fasteners on the engine cover.



4 Remove the spark plug wire connectors from the spark plug wells.

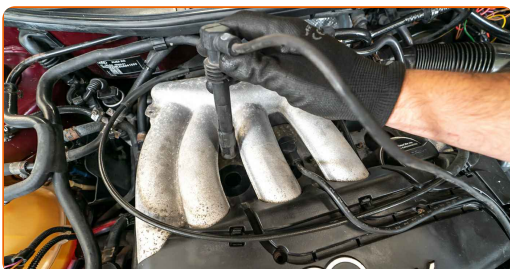

Replacement: spark plugs – AUDI TT Coupe (8N3). Tip from AUTODOC:

- Be careful to avoid damaging spark plug wires.
- Remember the sequence of the spark plug wires connectors.

5

Clean dirt, dust and debris from inside the spark plug wells.



6

Unscrew the spark plugs. Use the spark plug socket #16.



Please note!

- To insert the spark plug wrench into the spark plug well of the cylinder #3, unplug the connector on the engine intake manifold.

7 Take out the spark plugs.



8 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



9 Install the new spark plugs into their mounting seats.



10 Screw new spark plugs and tighten them. Use a torque wrench. Use the spark plug socket #16. Tighten it to 25 nm torque.




Replacement: spark plugs – AUDI TT Coupe (8N3). Professionals recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

11 Install the spark plug wire connectors into the spark plug wells. Make sure you hear a click indicating that it is locked in place.



12 Plug in the connector on the engine intake manifold.

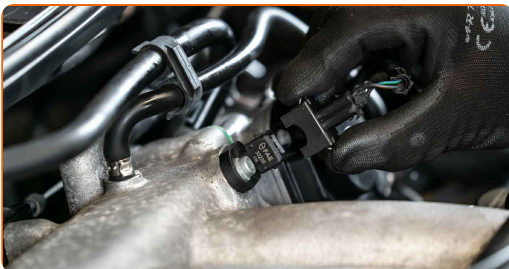

13 Secure the spark plug wires in their fasteners on the engine cover.

14 Secure the throttle cable in its fasteners on the engine cover.



15

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

**16**

Remove the fender protection cover.

17

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.