



How to change rear  
brake pads on **Toyota**  
**Auris E15** – replacement  
guide

## VIDEO TUTORIAL



### Important!

This replacement procedure can be used for:

TOYOTA Urban Cruiser (\_P1\_) 1.33 (NSP110\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.8 (ZRE152\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.8 4WD (ZRE154\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.5 (NZE151\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.5 4WD (NZE154\_), TOYOTA Verso S (\_P12\_) 1.33 (NSP120\_), TOYOTA Verso S (\_P12\_) 1.4 D4-D (NLP121\_), TOYOTA COROLLA Saloon (E15\_) 1.4 VVT-i, TOYOTA Yaris Hatchback (\_P9\_) 1.0 VVT-i (KSP90\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 2.2 D (ADE157\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.6 (ZRE151\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.4 (ZZE150\_), TOYOTA Yaris Hatchback (\_P9\_) 1.8 VVTi (ZSP90\_), TOYOTA Yaris / Vios Saloon (\_P9\_) 1.3 (NCP92\_), TOYOTA AURIS (NRE15\_, ZZE15\_, ADE15\_, ZRE15\_, NDE15\_) 1.8 (ZRE152\_, ZZE122), (+ 16)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – TOYOTA AURIS E15.  
LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Combination spanner #14
- Combination spanner #17
- Drive socket # 14
- Wheel impact socket #21
- Brake caliper wind back tool
- Torque wrench
- Water pump pliers
- Crow bar
- Wheel chock

**BUY TOOLS**

**Replacement: brake pads – Toyota Auris E15. Professionals recommend:**

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Warning! Shut down the engine before starting any work – Toyota Auris E15.

 
**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Open the bonnet. Unscrew the brake fluid reservoir cap.




**2** Secure the wheels with chocks.

**3** Loosen the wheel mounting bolts. Use wheel impact socket #21.



4

Raise the rear of the car and secure on supports.

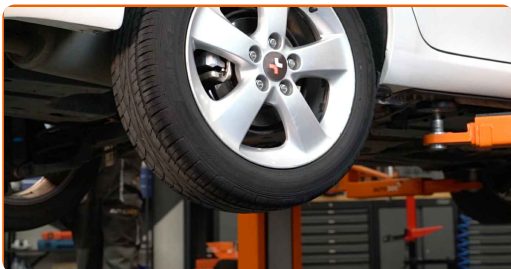

5

Unscrew the wheel bolts.

 


Replacement: brake pads – Toyota Auris E15. AUTODOC recommends:


- To avoid injury, hold up the wheel when unscrewing the bolts.

6

Remove the wheel.



 
**7** Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



**8** Detach the parking brake cable from the bracket on the brake caliper. Use water pump pliers.



 **9** Unscrew the brake caliper fastening. Use a combination spanner #14. Use a combination spanner #17.



**10** Spread the brake pads. Use a crowbar.

**11** Remove the brake caliper.




**Replacement: brake pads – Toyota Auris E15. AUTODOC experts recommend:**

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

12

Remove the brake pads.

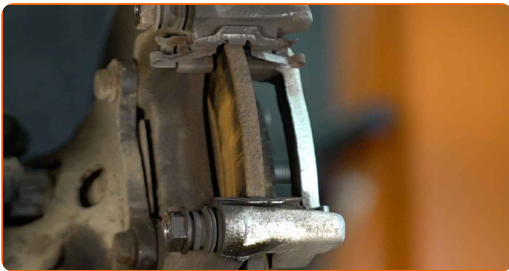


**Replacement: brake pads – Toyota Auris E15. Tip from AUTODOC:**

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

**13**

 Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: brake pads – Toyota Auris E15. After applying the spray, wait a few minutes.

**14**

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.

 


**Replacement: brake pads – Toyota Auris E15. Tip:**

- Make sure the disc surface is clean before installing the pads.

**15**

Install new brake pads.





Replacement: brake pads – Toyota Auris E15. Tip from AUTODOC experts:

- Make sure the pads are installed with linings facing the disc.

16

Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake pads – Toyota Auris E15. Tip from AUTODOC:

 
- After applying the spray, wait a few minutes.

17


Press in the brake caliper piston. Use brake caliper wind back tool.




- 18** Install the brake caliper and fix it. Use a combination spanner #17. Use a drive socket #14. Use a torque wrench. Tighten it to 35 Nm torque.



 - 19** Install the parking brake cable into the brake caliper bracket.



 - 20** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




- 21** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

 - Replacement: brake pads – Toyota Auris E15. After applying the spray, wait a few minutes.

**22** Install the wheel.



**Replacement: brake pads – Toyota Auris E15. Tip:**

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

 
**23** Screw in the wheel bolts. Use wheel impact socket #21.



**24** Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 103 Nm torque.



**25** Remove the jacks and chocks.



**AUTODOC recommends:**

- Important! Replacement: brake pads – Toyota Auris E15. Check the brake fluid level in the reservoir and top up if necessary.

**26**

Tighten the brake fluid reservoir cap.



**AUTODOC recommends:**

- Toyota Auris E15 – Press the brake pedal several times with the engine shut down until you feel the resistance built up.

**27**

Close the hood.



Replacement: brake pads – Toyota Auris E15. Tip from AUTODOC experts:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  **Google Play**

 **Download on the App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR TOYOTA**

**BRAKE PADS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR TOYOTA AURIS E15**

**BRAKE PADS FOR TOYOTA: BUY NOW**

**BRAKE PADS FOR TOYOTA AURIS E15: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.