



How to change air filter on **Toyota Aygo AB1** – replacement guide

VIDEO TUTORIAL



ⓘ Important!

This replacement procedure can be used for:

TOYOTA Yaris III Hatchback (XP13) 1.0 (KSP130_), TOYOTA Yaris I Hatchback (P1) 1.0 (SCP10_), TOYOTA Yaris I Hatchback (P1) 1.3 (SCP12_), TOYOTA Aygo (AB10) 1, TOYOTA Yaris II Hatchback (XP9) 1.0 VVT-i (KSP90_), TOYOTA Yaris II Hatchback (XP9) 1.3 VVT-i (SCP90_), TOYOTA Aygo (AB10) 1.0 GPL (KGB10_)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – TOYOTA AYGO AB1.
TOOLS YOU MIGHT NEED:



- Hose clamp pliers with retainer
- Microfibre towel
- Fender cover

BUY TOOLS

Replacement: air filter – Toyota Aygo AB1. Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – Toyota Aygo AB1.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3

 
Remove the fastening clamps of the air filter breather pipe and the air filter inlet pipe. Use hose clamp pliers with retainer.



4 Release the air filter cover clips.



5 Take off the filter lid.



6 Disconnect the air intake pipe from the air filter housing.



7 Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.



8

Remove the filter element from the filter housing.




9

Clean the air filter cover and housing.



10

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

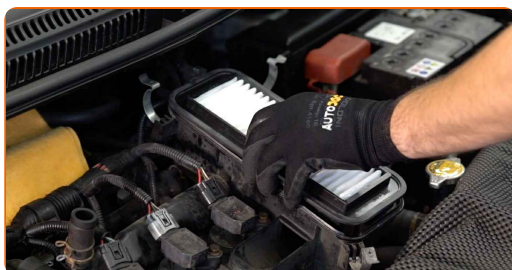

Replacement: air filter – Toyota Aygo AB1. Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – Toyota Aygo AB1.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

- 11 Remove the microfibre towel from the throttle body.




- 12 Reinstall the air filter cover. Fasten it.



- 13 Connect the air intake pipe to the air filter housing.



- 14 Press the air filter cover clips into place.

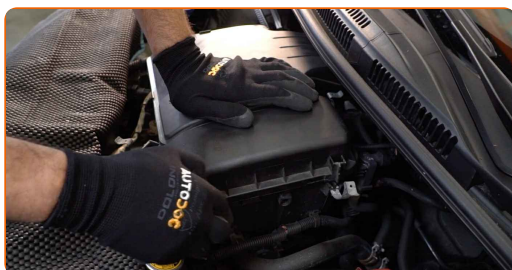


15

Install the fastening clamps of the air filter breather pipe and the air filter inlet pipe. Use hose clamp pliers with retainer.




16

Remove the fender protection cover.

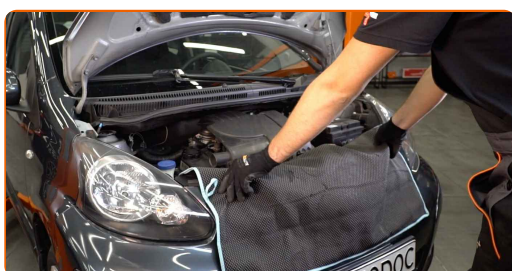

17

Close the hood.

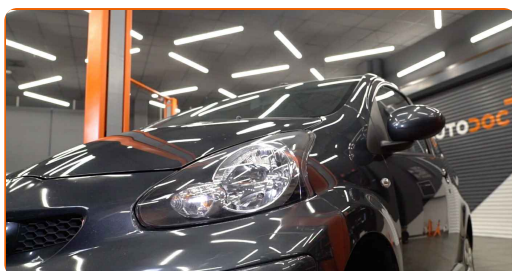

WELL DONE! 👍

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR TOYOTA

AIR FILTER: A WIDE SELECTION

[**CHOOSE CAR PARTS FOR TOYOTA AYGO AB1**](#)[**AIR FILTER FOR TOYOTA: BUY NOW**](#)[**AIR FILTER FOR TOYOTA AYGO AB1: THE BEST DEALS & OFFERS**](#)

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.