



How to change front anti
roll bar links on **Toyota**
Aygo AB1 – replacement
guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

TOYOTA Aygo (AB10) 1.4 HDi, TOYOTA Aygo (AB10) 1.0 GPL (KGB10_)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – TOYOTA AYGO AB1. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #12
- Impact socket №12
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Hydraulic transmission jack
- Crow bar
- Wheel chock

BUY TOOLS

AUTODOC recommends:

- Replace the stabiliser links on Toyota Aygo AB1 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.


REPLACEMENT: ANTI ROLL BAR LINKS – TOYOTA AYGO AB1. TAKE THE FOLLOWING STEPS:

1

Secure the wheels with chocks.


2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

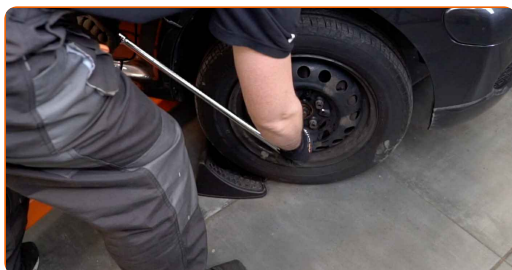


3

Raise the front of the car and secure on supports.

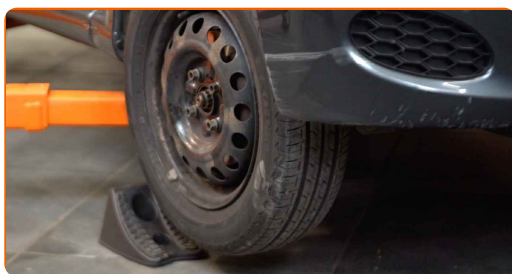

4

Unscrew the wheel bolts.

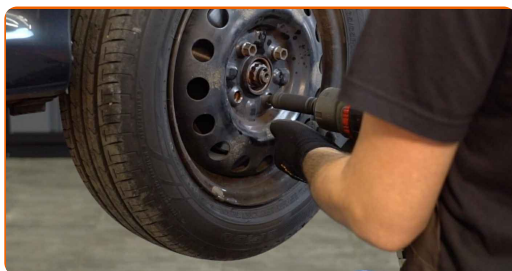

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Toyota Aygo AB1

5

Remove the wheel.




6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




7


Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #12.

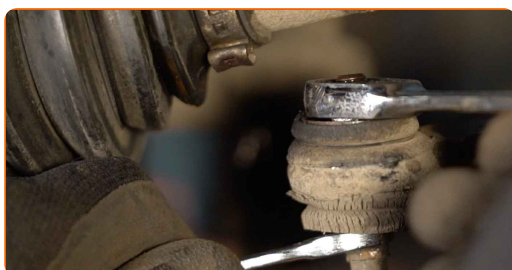

- 8** Unscrew the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #12. Use a drive socket #12. Use a ratchet wrench.

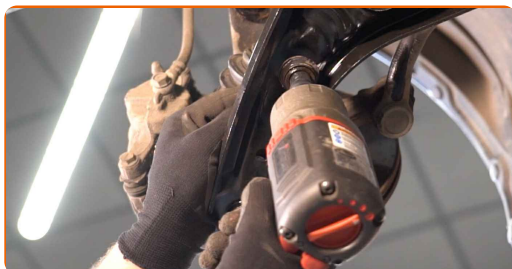

- 9** Remove the stabilizer rod. Use a crowbar.

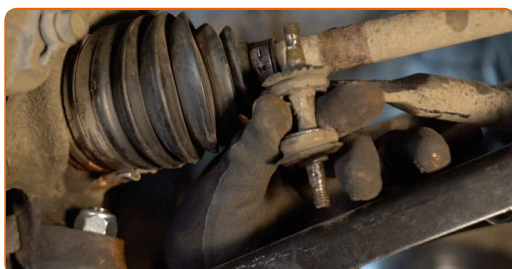


Replacement: anti roll bar links – Toyota Aygo AB1. Professionals recommend:

- Examine stabiliser bushes. Replace them if needed.

- 10** Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.


- 11** Install a new rod, tighten the fasteners.

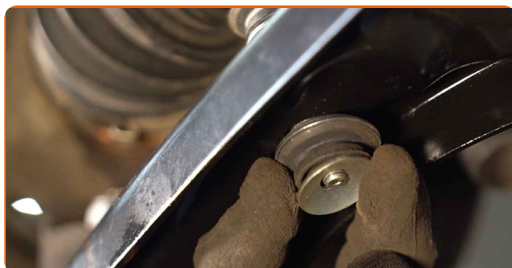

- 12** Support the arm. Use a hydraulic transmission jack.



 
- 13** Tighten the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #12. Use a drive socket #12. Use a torque wrench. Tighten it to 18 Nm torque.



- 14** Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #12. Use a torque wrench. Tighten it to 18 Nm torque.



- 15** Remove the support from under the arm.

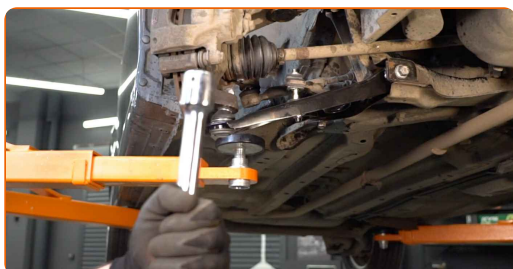


Replacement: anti roll bar links – Toyota Aygo AB1. AUTODOC recommends:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


16

Treat all joints of the stabiliser link. Use copper grease.

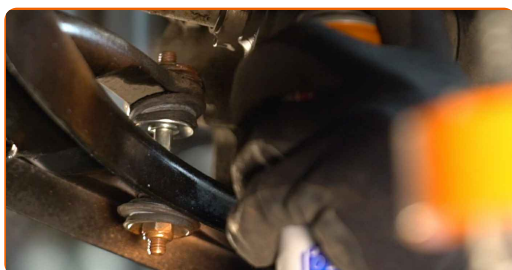

17

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

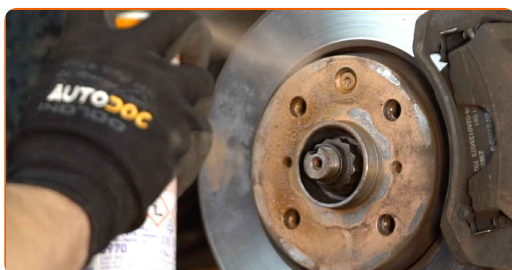

18

Clean the wheel rim mounting seat. Use a brake cleaner.




AUTODOC recommends:

- Replacement: anti roll bar links – Toyota Aygo AB1. After applying the spray, wait a few minutes.

19

Install the wheel.

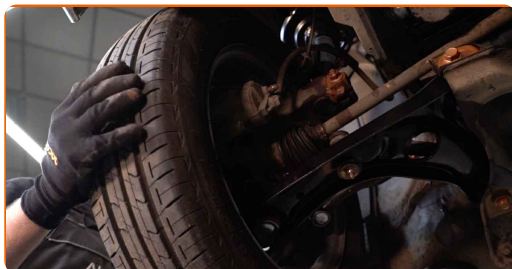

AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Toyota Aygo AB1


20

Screw in the wheel bolts. Use wheel impact socket #19.



21

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 103 nm torque.

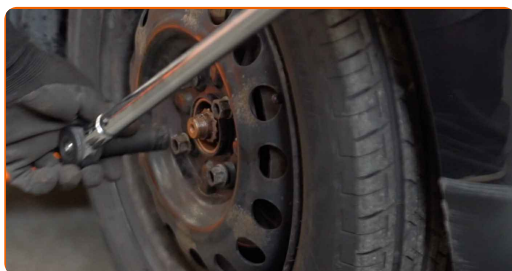

22

Remove the jacks and chocks.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR TOYOTA

ANTI ROLL BAR LINKS: A WIDE SELECTION

[**CHOOSE CAR PARTS FOR TOYOTA AYGO AB1**](#)[**ANTI ROLL BAR LINKS FOR TOYOTA: BUY NOW**](#)[**ANTI ROLL BAR LINKS FOR TOYOTA AYGO AB1: THE BEST
DEALS & OFFERS**](#)

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.