

How to change headlights on **Toyota Aygo AB1** – replacement guide





VIDEO TUTORIAL




(i) Important!

This replacement procedure can be used for: TOYOTA Aygo (AB10) 1, TOYOTA Aygo (AB10) 1.4 HDi, TOYOTA Aygo (AB10) 1.0 GPL (KGB10_)

The steps may slightly vary depending on the car design.





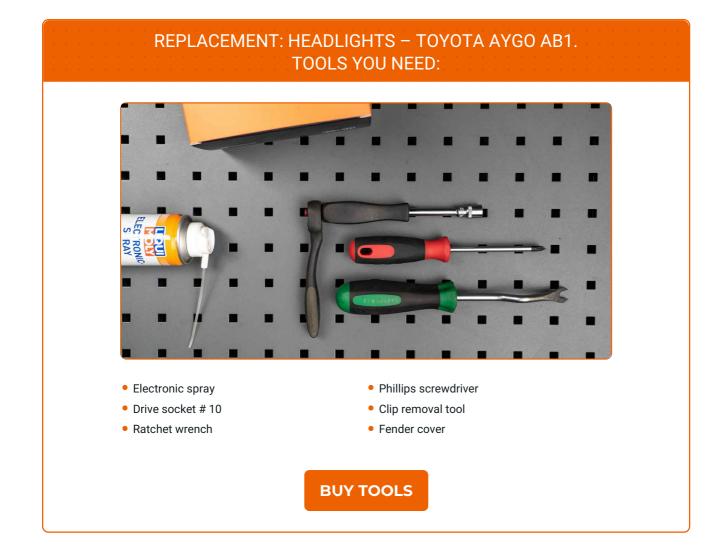





Replacement: headlights – Toyota Aygo AB1. AUTODOC experts recommend:

• The replacement procedure is identical for the right and left headlight.

• All work should be done with the engine stopped.

REPLACEMENT: HEADLIGHTS – TOYOTA AYGO AB1. TAKE THE FOLLOWING STEPS:



Open the hood.

Switch off the ignition.





Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

4

Lift the car using a jack or place it over an inspection pit.







Unscrew the lower fasteners of the bumper. Use a drive socket #10. Use a ratchet wrench.



6

Unscrew the side fasteners of the bumper. Use a Phillips screwdriver.



7

Remove the bumper clips. Use a clip removal tool.



8

Unscrew the upper fasteners of the bumper. Use a drive socket #10. Use a ratchet wrench.







Carefully release the bumper from the fasteners.



AUTODOC recommends:

• Replacement: headlights – Toyota Aygo AB1. Do not use excessive force when removing the part as this may damage it.



Remove the bumper.



11

Unscrew the headlight fasteners. Use a drive socket #10. Use a ratchet wrench.



12

Remove the headlight.







Unplug the connectors of the headlight bulbs.



14

Treat the connectors of the headlights. Use electronic spray.



15

Plug in the connectors of the headlight bulbs.



16

Install the new headlight.



17

Screw in the headlight fasteners. Use a drive socket #10. Use a ratchet wrench.







Install the bumper to the mounting seat.



19

Reinstall the bumper clips.



20

Screw in the bumper upper fasteners. Use a drive socket #10. Use a ratchet wrench.



Replacement: headlights – Toyota Aygo AB1. AUTODOC recommends:

• To prevent damage to the components, hold the bumper when screwing in the upper fasteners.

21

Screw in the side fasteners of the bumper. Use a Phillips screwdriver.







Screw in the lower fasteners of the bumper. Use a drive socket #10. Use a ratchet wrench.



23

Lower the car.



24

Switch on the ignition.



25

Check whether the headlights function properly.



26

Switch off the ignition.







Remove the fender protection cover. Close the hood.






VIEW MORE TUTORIALS





AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

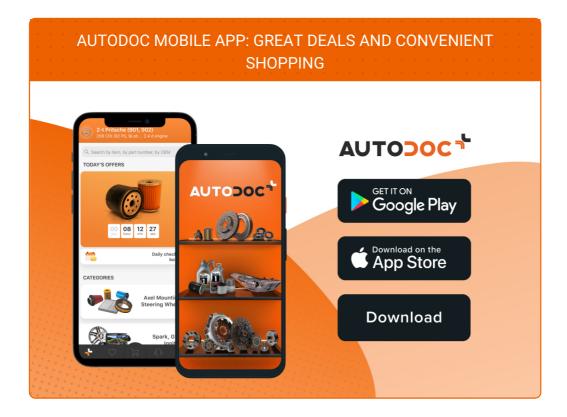

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR TOYOTA

HEADLIGHTS: A WIDE SELECTION





HEADLIGHTS FOR TOYOTA: BUY NOW

HEADLIGHTS FOR TOYOTA AYGO AB1: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

C)