

How to change track rod end on **Toyota Aygo AB1** – replacement guide





VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for: TOYOTA Aygo (AB10) 1.4 HDi, TOYOTA Aygo (AB10) 1.0 GPL (KGB10_), TOYOTA Aygo (AB40) 1.0 (KGB40_), TOYOTA Aygo (AB40) 1.2 (PAB40_), TOYOTA Aygo (AB40) 1.0 VVTi (KGB40)

The steps may slightly vary depending on the car design.





REPLACEMENT: TRACK ROD END – TOYOTA AYGO AB1. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Combination spanner #19
- Drive socket # 17
- Wheel impact socket #19

- Torque wrench
- Nippers
- Tap wrench
- Vernier caliper
- Crow bar
- Ball joint puller
- Wheel chock

BUY TOOLS





Replacement: track rod end – Toyota Aygo AB1. AUTODOC experts recommend:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- During the installation process, use only new bolts and nuts.
- Warning! Shut down the engine before starting any work Toyota Aygo AB1.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.

2

Loosen the wheel mounting bolts. Use wheel impact socket #19.



3

Raise the front of the car and secure on supports.







Unscrew the wheel bolts.



Replacement: track rod end – Toyota Aygo AB1. Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.



Remove the wheel.



6

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.



7

Remove the cotter pin fixing the tie rod end fastening. Use nippers. Use a crowbar.







Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a tap wrench.



9

When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.



10

Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #17.



11

Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.







Screw the end out of the tie rod.



13

Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.



14

Screw on a new tie rod end.



Replacement: track rod end – Toyota Aygo AB1. AUTODOC recommends:

• While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements





When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.



16

Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.



17

Connect the tie rod end to the steering knuckle.



18

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 33 nm torque.







Tighten the tie rod end locknut. Use a combination spanner #17. Use a combination spanner #19. Use a torque wrench. Tighten it to 47 nm torque.



20

Install the cotter pin fixing the tie rod end fastening.

21

Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.



22

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.






Clean the wheel rim mounting seat. Use a brake cleaner.







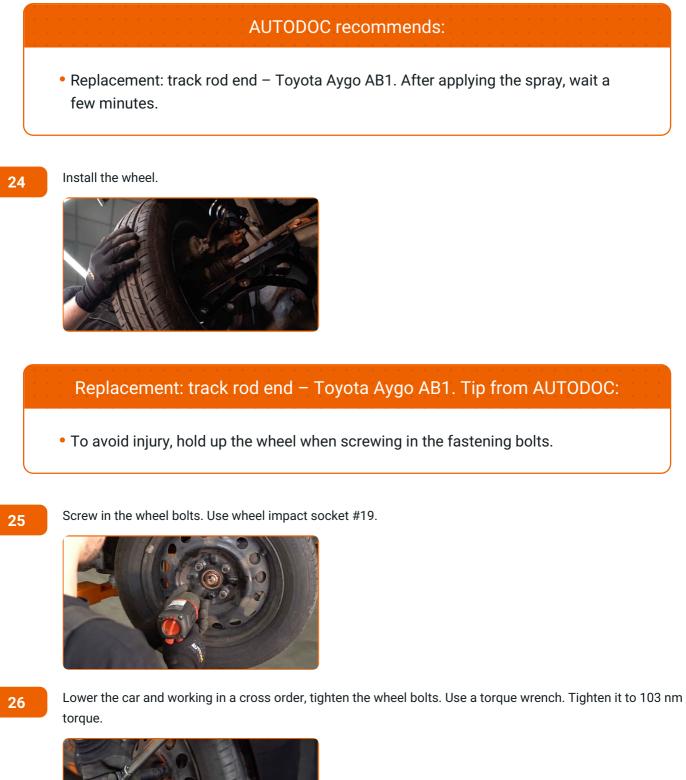







Replacement: track rod end – Toyota Aygo AB1. Professionals recommend:

• Check and adjust wheel alignment if necessary.



Remove the jacks and chocks.






VIEW MORE TUTORIALS





AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

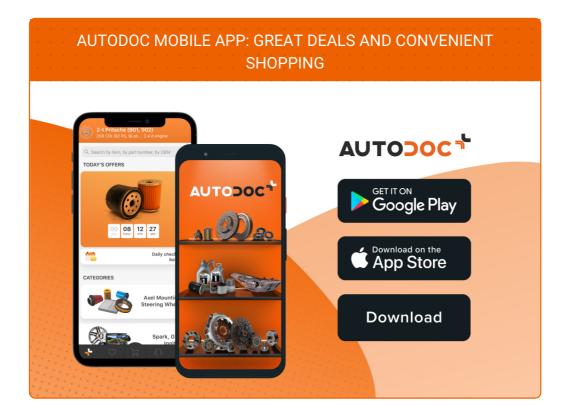

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR TOYOTA

TRACK ROD END: A WIDE SELECTION



CHOOSE CAR PARTS FOR TOYOTA AYGO ABI

TRACK ROD END FOR TOYOTA: BUY NOW

TRACK ROD END FOR TOYOTA AYGO AB1: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

C)