



How to change spark
plugs on **Audi A4 B6** –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 1.8 T quattro, AUDI A4 Avant (8D5, B5) 1.8 T, AUDI A4 Avant (8D5, B5) 1.8 T quattro, AUDI A3 Hatchback (8L1) 1.8 T, AUDI A6 Saloon (4B2, C5) 1.8 T, AUDI A6 Saloon (4B2, C5) 1.8 T quattro, AUDI A6 Avant (4B5, C5) 1.8 T, AUDI A6 Avant (4B5, C5) 1.8 T quattro, AUDI TT Coupe (8N3) 1.8 T, AUDI TT Coupe (8N3) 1.8 T quattro, AUDI A3 Hatchback (8L1) 1.8 T quattro, AUDI A3 Hatchback (8L1) S3 quattro, AUDI TT Roadster (8N9) 1.8 T, AUDI TT Roadster (8N9) 1.8 T quattro, (+ 11)

The steps may slightly vary depending on the car design.

REPLACEMENT: SPARK PLUGS – AUDI A4 B6. TOOLS YOU MIGHT NEED:



- Electronic spray
- High-temperature anti-seize lubricant
- Spark plug socket # 16
- Ratchet wrench
- Torque wrench
- Flat Screwdriver
- Fender cover

BUY TOOLS

Replacement: spark plugs – Audi A4 B6. Tip from AUTODOC:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – AUDI A4 B6. RECOMMENDED SEQUENCE OF STEPS:

1

Open the bonnet.

 


2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Unscrew the engine cover fastener. Use a flat screwdriver.




4

Remove the engine cover.



5

 Unplug the connectors from the ignition coils. Use a flat screwdriver.



6

Take out the ignition coils from the spark plug wells.



Replacement: spark plugs – Audi A4 B6. Tip from AUTODOC experts:

 
- Remember the sequence of steps for ignition coil demounting.

7


Clean dirt, dust and debris from inside the spark plug wells.

8


Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



9 Take out the spark plugs.

 

 
10 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



11 Install the new spark plugs into their mounting seats. Use the spark plug socket #16.



 12 Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.




Replacement: spark plugs – Audi A4 B6. AUTODOC recommends:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

13

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.

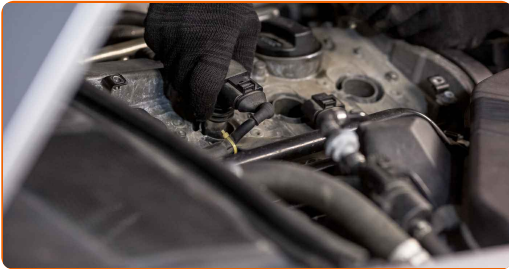


Replacement: spark plugs – Audi A4 B6. Tip from AUTODOC experts:


- Follow the installation sequence.

14

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.

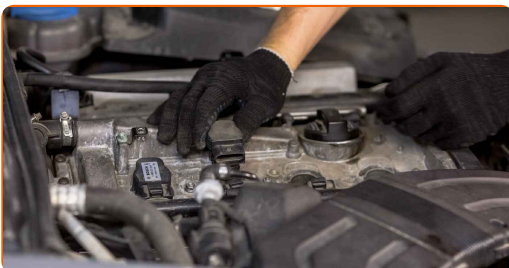

 
15 Plug in the connectors of the ignition coils.



16 Install the engine cover and secure it.



 17 Screw in the engine cover fasteners. Use a flat screwdriver.



Replacement: spark plugs – Audi A4 B6. Tip:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Caution! Do not use excessive force during installation. This may damage the fasteners of the car. Audi A4 B6

18 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



19 Shut off the engine.

20 Remove the fender protection cover.

21 Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

SPARK PLUGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B6

SPARK PLUGS FOR AUDI: BUY NOW

SPARK PLUGS FOR AUDI A4 B6: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.