




How to change air filter  
on **Audi A4 B6 Avant** –  
replacement guide

**VIDEO TUTORIAL**

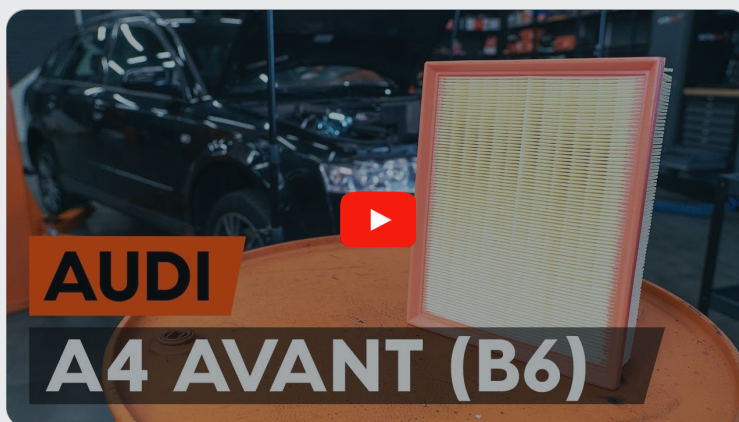


** Important!**

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.6, AUDI A4 Avant (8D5, B5) 1.6, AUDI A4 Saloon (8E2, B6) 1.8 T, AUDI A4 Saloon (8E2, B6) 2.0, AUDI A4 Saloon (8E2, B6) 1.8 T quattro, AUDI A4 Saloon (8E2, B6) 3.0, AUDI A4 Saloon (8E2, B6) 3.0 quattro, AUDI A4 Saloon (8E2, B6) 1.9 TDI, AUDI A4 Saloon (8E2, B6) 2.5 TDI quattro, AUDI A4 Saloon (8E2, B6) 1.6, AUDI A4 Saloon (8E2, B6) 2.5 TDI, AUDI A4 Avant (8E5, B6) 1.6, AUDI A4 Avant (8E5, B6) 2.0, AUDI A4 Avant (8E5, B6) 1.8 T, AUDI A4 Avant (8E5, B6) 3.0, (+ 62)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – AUDI A4 B6 AVANT. LIST OF THE TOOLS YOU'LL NEED:

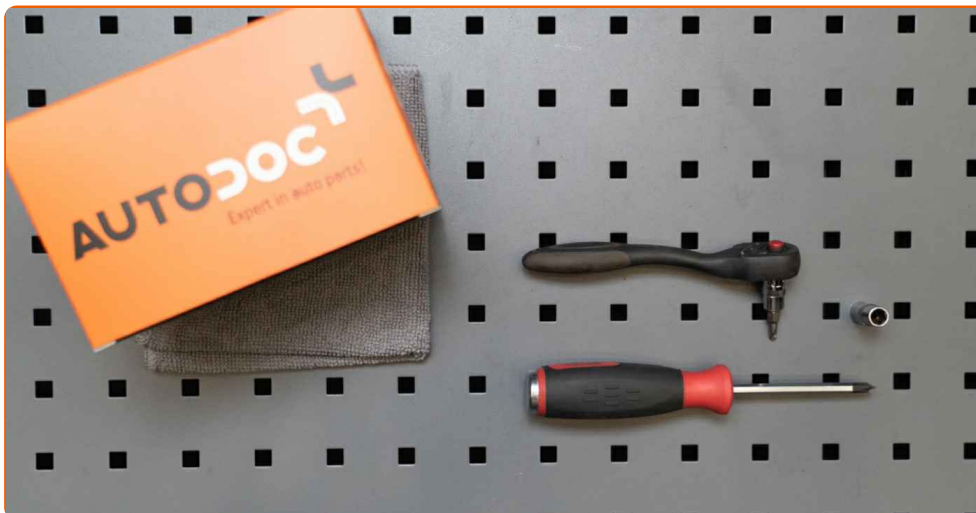

- Drive socket # 7
- Torx bit T20
- Phillips screwdriver
- Microfibre towel
- Fender cover

**BUY TOOLS**

**Replacement: air filter – Audi A4 B6 Avant. Tip:**

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – Audi A4 B6 Avant.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

 
**1** Open the bonnet.



**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




**3** Disconnect the air intake pipe from the air filter housing.




**4** Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



 
**5** Remove the air intake hose Use Torx T20.



 
**6** Detach the air intake hose clamp. Use a drive socket #7.



 
**7** Disconnect the air intake pipe from the air filter housing.



**8** Take off the filter lid.

 

 **9** Remove the filter element from the filter housing.



**10** Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



**11** Clean the air filter cover and housing.



**Replacement: air filter – Audi A4 B6 Avant. Tip:**

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

**12**

Remove the microfibre towel from the air intake hose.



**13**

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



**AUTODOC recommends:**

 
- Replacement: air filter – Audi A4 B6 Avant. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

**14**


Reinstall the air filter cover. Fasten it.




**15** Connect the air intake pipe to the air filter housing.



 
**16** Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



 
**17** Tighten the fuel filter pipe clamp. Use a drive socket #7.



 **18** Secure the air intake hose. Use Torx T20.



 **19** Connect the air intake pipe to the air filter housing.






20

Remove the fender protection cover.



21

 Close the hood.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR AUDI**

**AIR FILTER: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR AUDI A4 B6 AVANT**

**AIR FILTER FOR AUDI: BUY NOW**

**AIR FILTER FOR AUDI A4 B6 AVANT: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.