



How to change front anti  
roll bar links on **Audi A4**  
**B6 Avant** – replacement  
guide

## VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

AUDI A4 Saloon (8E2, B6) 1.8 T, AUDI A4 Saloon (8E2, B6) 2.0, AUDI A4 Saloon (8E2, B6) 1.8 T quattro, AUDI A4 Saloon (8E2, B6) 3.0, AUDI A4 Saloon (8E2, B6) 3.0 quattro, AUDI A4 Saloon (8E2, B6) 1.9 TDI, AUDI A4 Saloon (8E2, B6) 1.6, AUDI A4 Saloon (8E2, B6) 2.5 TDI, AUDI A4 Avant (8E5, B6) 1.6, AUDI A4 Avant (8E5, B6) 2.0, AUDI A4 Avant (8E5, B6) 1.8 T, AUDI A4 Avant (8E5, B6) 3.0, AUDI A4 Avant (8E5, B6) 1.9 TDI, AUDI A4 Saloon (8E2, B6) 2.4, AUDI A4 Avant (8E5, B6) 2.4, (+ 68)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A4 B6  
AVANT. TOOLS YOU'LL NEED:

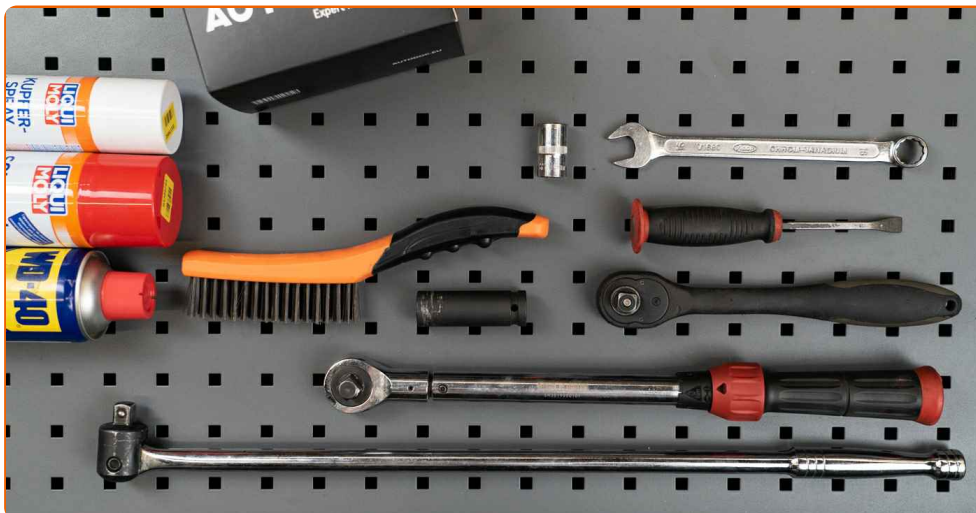

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Drive socket # 16
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Hydraulic transmission jack
- Wheel chock

**BUY TOOLS**

**AUTODOC recommends:**

- Replace the stabiliser links on Audi A4 B6 Avant in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

**REPLACEMENT: ANTI ROLL BAR LINKS – AUDI A4 B6 AVANT. TAKE THE FOLLOWING STEPS:**

**1** Secure the wheels with chocks.



**2** Loosen the wheel mounting bolts. Use wheel impact socket #17.




**3** Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.

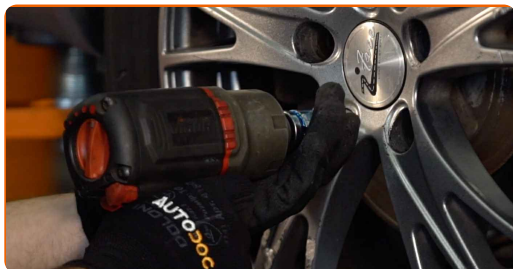


Replacement: anti roll bar links – Audi A4 B6 Avant. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

 Remove the wheel.



6

 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




- 7 Unscrew the fasteners connecting the stabiliser link to the stabiliser bar. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.




- 8 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

 - 9 Unscrew the fastener connecting the stabilizer link to the control arm. Use a combination spanner #16 (2 pieces).



- 10 Remove the stabilizer rod.

 

Replacement: anti roll bar links – Audi A4 B6 Avant. Tip from AUTODOC:

- Examine stabiliser bushes. Replace them if needed.

 
11

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.




12

Install a new rod, tighten the fasteners. Use a combination spanner #16.




13

 Support the arm. Use a hydraulic transmission jack.



14

 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.+90°





**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

**15**

Install the rod fastening to the stabilizer and tighten it. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.+90°

 


**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

**16**

Remove the support from under the arm.




**AUTODOC recommends:**


- Replacement: anti roll bar links – Audi A4 B6 Avant. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.



 
**17** Treat all joints of the stabiliser link. Use copper grease.



 **18** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



 
**19** Clean the brake disk surface. Use a brake cleaner.



Replacement: anti roll bar links – Audi A4 B6 Avant. Professionals recommend:

- After applying the spray, wait a few minutes.

 **20** Install the wheel.




**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Audi A4 B6 Avant

**21**

 Screw in the wheel bolts. Use wheel impact socket #17.



**22**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



**23**

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  **Google Play**

 **Download on the App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR AUDI**

**ANTI ROLL BAR LINKS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR AUDI A4 B6 AVANT**

**ANTI ROLL BAR LINKS FOR AUDI: BUY NOW**

**ANTI ROLL BAR LINKS FOR AUDI A4 B6 AVANT: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.