



How to change air filter
on **Audi A4 B7 Avant** –
replacement guide

VIDEO TUTORIAL



 Important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.6, AUDI A4 Avant (8D5, B5) 1.6, AUDI A4 Saloon (8E2, B6) 1.8 T, AUDI A4 Saloon (8E2, B6) 2.0, AUDI A4 Saloon (8E2, B6) 1.8 T quattro, AUDI A4 Saloon (8E2, B6) 3.0, AUDI A4 Saloon (8E2, B6) 3.0 quattro, AUDI A4 Saloon (8E2, B6) 1.9 TDI, AUDI A4 Saloon (8E2, B6) 2.5 TDI quattro, AUDI A4 Saloon (8E2, B6) 1.6, AUDI A4 Saloon (8E2, B6) 2.5 TDI, AUDI A4 Avant (8E5, B6) 1.6, AUDI A4 Avant (8E5, B6) 2.0, AUDI A4 Avant (8E5, B6) 1.8 T, AUDI A4 Avant (8E5, B6) 3.0, (+ 62)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – AUDI A4 B7 AVANT. LIST OF THE TOOLS YOU'LL NEED:



- Flat Screwdriver
- Microfibre towel
- Phillips screwdriver
- Fender cover

 
BUY TOOLS

Replacement: air filter – Audi A4 B7 Avant. Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – AUDI A4 B7 AVANT. RECOMMENDED SEQUENCE OF STEPS:


1 Open the hood.




2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



 
3 Detach the air duct housing from the air filter housing.



 
4 Loosen the air intake fastening. Use a Phillips screwdriver.



 
5 Detach the air duct housing from the air filter housing.



 
6 Detach the air intake hose clamp. Use a flat screwdriver.



7 Remove the air intake pipe.

 


 8 Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



9 Slightly raise the cover of the air filter housing.

10 Remove the filter element from the filter housing.

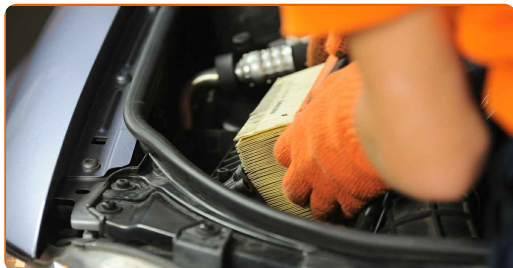


11 Clean the air filter cover and housing.

Replacement: air filter – Audi A4 B7 Avant. Professionals recommend:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

12 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

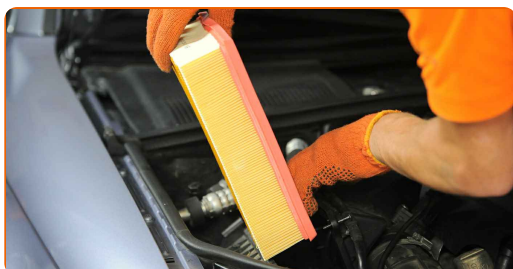


AUTODOC recommends:

- Replacement: air filter – Audi A4 B7 Avant. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


13

 Reinstall the air filter cover. Fasten it.



14

 Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.




15


Install the air intake pipe and secure it.

16

 
Fasten the clamp on the air intake hose. Use a flat screwdriver.



17 Install the air duct housing.

 

 
18 Secure the fastener of the air intake duct. Use a Phillips screwdriver.



19 Install the air duct housing.




 20 Remove the fender protection cover.



21

Close the hood.

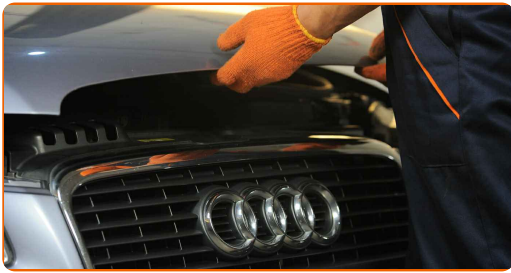

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B7 AVANT

AIR FILTER FOR AUDI: BUY NOW

AIR FILTER FOR AUDI A4 B7 AVANT: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.