# **+** AUTODOC CLUB

How to change front brake pads on **Audi A4 B7 Avant** – replacement guide







#### **VIDEO TUTORIAL**



## important!

This replacement procedure can be used for:

AUDI A4 Saloon (8D2, B5) 1.8 T, AUDI A4 Saloon (8D2, B5) 2.6, AUDI A4 Saloon (8D2, B5) 2.8, AUDI A4 Saloon (8D2, B5) 1.8 T quattro, AUDI A4 Saloon (8D2, B5) 2.6 quattro, AUDI A4 Saloon (8D2, B5) 2.8 quattro, AUDI A4 Saloon (8D2, B5) 1.9 TDI, AUDI A4 Avant (8D5, B5) 1.8 T, AUDI A4 Avant (8D5, B5) 2.6, AUDI A4 Avant (8D5, B5) 2.8, AUDI A4 Avant (8D5, B5) 1.9 TDI, AUDI A4 Avant (8D5, B5) 1.8 T quattro, AUDI A4 Avant (8D5, B5) 2.6 quattro, AUDI A4 Avant (8D5, B5) 2.8 quattro, AUDI A4 Saloon (8D2, B5) 2.8 (ACK,ALG,AMX,APR,AQD,AHA), (+88)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-14







## REPLACEMENT: BRAKE PADS – AUDI A4 B7 AVANT. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- HEX bit No.H7.
- Wheel impact socket #17

- Brake caliper wind back tool
- Ratchet wrench
- Torque wrench
- Flat Screwdriver
- Crow bar
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-14







#### Replacement: brake pads – Audi A4 B7 Avant. AUTODOC recommends:

- Perform the replacement of brake pads in complete set for each axis. This
  provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- All work should be done with the engine stopped.

## REPLACEMENT: BRAKE PADS – AUDI A4 B7 AVANT. TAKE THE FOLLOWING STEPS:

Open the bonnet. Unscrew the brake fluid reservoir cap.



Secure the wheels with chocks.

1



Loosen the wheel mounting bolts. Use wheel impact socket #17.



CLUB.AUTODOC.CO.UK 3-14







A Raise the front of the car and secure on supports.



5 Unscrew the wheel bolts.



## Replacement: brake pads – Audi A4 B7 Avant. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- 6 Remove the wheel.



Detach the brake caliper retaining spring. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 4-14







8 Disconnect the ABS sensor. Use a flat screwdriver.



Remove the dust boot caps of the brake caliper guide pins. Use a flat screwdriver.



- Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



Spread the brake pads. Use a crowbar.



CLUB.AUTODOC.CO.UK 5-14







13 Remove the brake caliper.



#### Replacement: brake pads – Audi A4 B7 Avant. AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

14 Remove the brake pads.



CLUB.AUTODOC.CO.UK 6-14







### Replacement: brake pads – Audi A4 B7 Avant. AUTODOC recommends:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

15

Treat the brake caliper piston. Use a brake cleaner.



### **AUTODOC** recommends:

 Replacement: brake pads – Audi A4 B7 Avant. After applying the spray, wait a few minutes.

16

Press in the brake caliper piston. Use brake caliper wind back tool.



CLUB.AUTODOC.CO.UK 7-14







Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



## Replacement: brake pads – Audi A4 B7 Avant. Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.
- Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use antisqueal paste.



#### **AUTODOC** recommends:

- Make sure the disc surface is clean before installing the pads.
- 19 Install new brake pads.



CLUB.AUTODOC.CO.UK 8-14







### Replacement: brake pads - Audi A4 B7 Avant. Tip:

• Make sure the pads are installed with linings facing the disc.

20.1 Install the brake caliper and fix it.



Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



Install the dust boot caps of the brake caliper guide pins.



Connect the ABS sensor.



CLUB.AUTODOC.CO.UK 9-14







23 Install the brake caliper retaining spring. Use a flat screwdriver.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



### **AUTODOC** recommends:

 Replacement: brake pads – Audi A4 B7 Avant. After applying the spray, wait a few minutes.

26 Install the wheel.



CLUB.AUTODOC.CO.UK 10-14







#### **AUTODOC** recommends:

 Important! Hold the wheel while screwing in the fastening bolts. Audi A4 B7 Avant

27

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



29

Remove the jacks and chocks.



Replacement: brake pads – Audi A4 B7 Avant. AUTODOC experts recommend:

• Check the brake fluid level in the expansion tank and refill if necessary.

CLUB.AUTODOC.CO.UK 11-14

30







Tighten the brake fluid reservoir cap. Close the hood.



#### AUTODOC recommends:

- Audi A4 B7 Avant Press the brake pedal several times with the engine shut down until you feel the resistance built up.
- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unneccessary and sharp braking to a stop.






**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 12-14





## AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

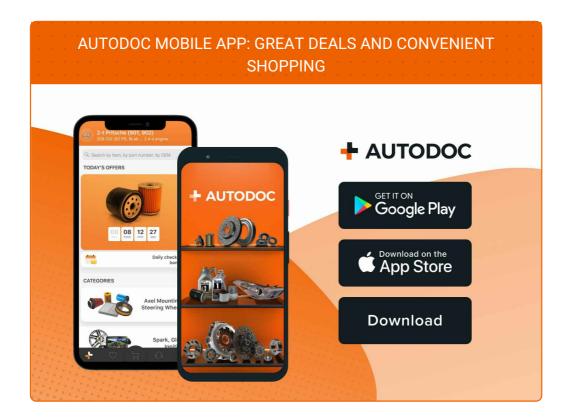

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR AUDI** 

**BRAKE PADS: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 13-14





#### **CHOOSE CAR PARTS FOR AUDI A4 B7 AVANT**

**BRAKE PADS FOR AUDI: BUY NOW** 

BRAKE PADS FOR AUDI A4 B7 AVANT: THE BEST DEALS & OFFERS

## **① DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 14-14