+ AUTODOC CLUB

How to change rear upper arm on **BMW 1 Convertible (E88)** – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

BMW 1 Convertible (E88) 120i 2.0, BMW 1 Convertible (E88) 125i 3.0, BMW 1 Convertible (E88) 118i 2.0, BMW 1 Convertible (E88) 135i 3.0, BMW 1 Convertible (E88) 120d 2.0, BMW 1 Convertible (E88) 118d 2.0, BMW 1 Convertible (E88) 123d 2.0, BMW 1 Convertible (E88) 128i 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0


CLUB.AUTODOC.CO.UK 1–10







REPLACEMENT: REAR UPPER ARM – BMW 1 CONVERTIBLE (E88). TOOLS YOU MIGHT NEED:

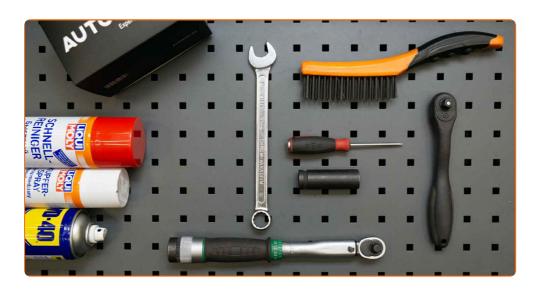

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #18
- Drive socket # 18
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Tap wrench
- Flat Screwdriver
- Hydraulic transmission jack
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-10







Replacement: rear upper arm – BMW 1 Convertible (E88). AUTODOC experts recommend:

- The replacement procedure is identical for the right and left upper control arms.
- Please note: all work on the car BMW 1 Convertible (E88) should be done
 with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



- Raise the rear of the car and secure on supports.
- 4 Unscrew the wheel bolts.



CLUB.AUTODOC.CO.UK 3-10







AUTODOC recommends:

 Important! Hold the wheel while unscrewing the fastening bolts. BMW 1 Convertible (E88)

5 Remove the wheel.



- Clean all joints of the arm. Use a wire brush. Use WD-40 spray.
- Unscrew the fastener connecting the control arm to the rear knuckle. Use a drive socket #18. Use a tap wrench.

 Use a ratchet wrench.



- Remove the fastening bolt.
- Detach the suspension arm from the rear knuckle.



Disconnect the ABS sensor wiring. Use a flat screwdriver.

CLUB.AUTODOC.CO.UK 4-10







Unscrew the arm fastening to the beam. Use a combination spanner #18 (2 pieces).



- Remove the rear fastener of the control arm.
- Remove the rear upper arm.



Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



Mount the rear upper arm.



CLUB.AUTODOC.CO.UK 5-10







Replacement: rear upper arm – BMW 1 Convertible (E88). AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Install the rear fastener of the control arm.
- Tighten the arm fastening to the beam. Use a combination spanner #18 (2 pieces). Use a torque wrench. Tighten it to 100 Nm torque.



AUTODOC recommends:

- Important! Be sure to use new fasteners.
- Attach the suspension arm to the rear knuckle.
- 19 Install the fastening bolt.
- Screw in the fastener that connects the control arm to the rear knuckle. Use a drive socket #18. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 6-10







Support the stub axle. Use a hydraulic transmission jack.



Tighten the control arm fastener to the stub axle. Use a drive socket #18. Use a tap wrench. Use a torque wrench. Tighten it to 100 nm torque.

AUTODOC recommends:

- Important! Be sure to use new fasteners.
- Connect the ABS sensor wiring.



Remove the support from under the stub axle.



CLUB.AUTODOC.CO.UK 7-10








AUTODOC recommends:

 Replacement: rear upper arm – BMW 1 Convertible (E88). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

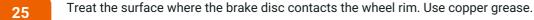



Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

• Replacement: rear upper arm – BMW 1 Convertible (E88). After applying the spray, wait a few minutes.

27 Install the wheel.



CLUB.AUTODOC.CO.UK 8-10







AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW 1 Convertible (E88)

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.






VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 9-10





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

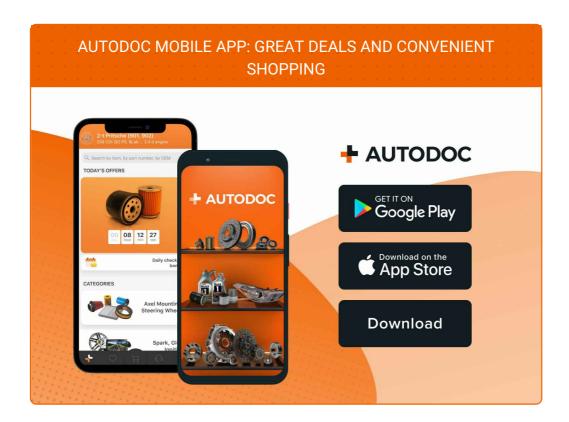

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CONTROL ARM: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 10-10