+ AUTODOC CLUB

How to change front brake discs on **BMW E82**– replacement guide







VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

BMW 1 Coupe (E82) 118d 2.0, BMW 1 Coupe (E82) 120d 2.0, BMW 1 Convertible (E88) 120i 2.0, BMW 1 Convertible (E88) 125i 3.0, BMW 1 Coupe (E82) 125i 3.0, BMW 1 Convertible (E88) 118i 2.0, BMW 1 Convertible (E88) 120d 2.0, BMW 1 Convertible (E88) 128i 3.0

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-16







REPLACEMENT: BRAKE DISCS – BMW E82. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- HEX bit no.H6.
- HEX bit no.H7.
- Drive socket # 18
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Tap wrench
- Brake caliper wind back tool
- Impact screwdriver
- Crow bar
- Fender cover
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-16







Replacement: brake discs – BMW E82. AUTODOC recommends:

- Replace the brake disks on the car BMW E82 in complete set for each axis.
 Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE DISCS – BMW E82. RECOMMENDED SEQUENCE OF STEPS:

1

Open the hood.



- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the wiper arm cover.



CLUB.AUTODOC.CO.UK 3-16







4 Unscrew the brake fluid reservoir cap.



Secure the wheels with chocks.



6 Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



8 Unscrew the wheel bolts.



CLUB.AUTODOC.CO.UK 4–16







AUTODOC recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. BMW E82

9 Remove the wheel.

12



Spread the brake pads. Use a crowbar.



Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 5-16







Detach the brake caliper retaining spring. Use a crowbar.



Remove the brake caliper.



Replacement: brake discs – BMW E82. AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them.
 Replace, if necessary.

CLUB.AUTODOC.CO.UK 6-16







15 Remove the brake pads.



- Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the caliper bracket fastening. Use a drive socket #18. Use a tap wrench.



18 Remove the caliper bracket.



- Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.
- Unscrew the brake disc fastening. Use HEX No.H6. Use an impact screwdriver.



CLUB.AUTODOC.CO.UK 7-16







Remove the brake disc.



Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



23 Install the brake disc.

24



Tighten the brake disc fastening. Use HEX No.H6. Use a torque wrench. Tighten it to 9 Nm torque.



CLUB.AUTODOC.CO.UK 8-16







Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



Replacement: brake discs – BMW E82. Tip:

- After applying the spray, wait a few minutes.
- 26 Install the brake caliper bracket.



Tighten the brake caliper bracket. Use a drive socket #18. Use a torque wrench. Tighten it to 110 Nm torque.



Treat the brake caliper piston. Use a brake cleaner.



CLUB.AUTODOC.CO.UK 9-16

 






AUTODOC recommends:

 Replacement: brake discs – BMW E82. After applying the spray, wait a few minutes.





Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use antisqueal paste.



31 Install the brake pads.

32



Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



CLUB.AUTODOC.CO.UK 10-16







Install the dust boot caps of the brake caliper guide pins.



Install the brake caliper retaining spring.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



Replacement: brake discs – BMW E82. Tip from AUTODOC:

• After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 11-16







37 Install the wheel.



Replacement: brake discs – BMW E82. Professionals recommend:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.




CLUB.AUTODOC.CO.UK 12-16







Remove the jacks and chocks.

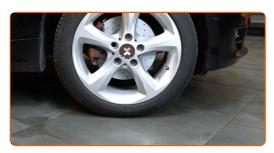

Replacement: brake discs – BMW E82. Tip from AUTODOC experts:

• Check the brake fluid level in the expansion tank and refill if necessary.

Tighten the brake fluid reservoir cap.



Install the wiper arm cover.

43



Remove the fender protection cover. Close the hood.



CLUB.AUTODOC.CO.UK 13-16







AUTODOC recommends:

• BMW E82 – Without starting the engine, press the brake pedal several times until it feels firm.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 14-16





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

BRAKE DISCS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 15-16







BRAKE DISCS FOR BMW: BUY NOW

BRAKE DISCS FOR BMW E82: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 16-16